 
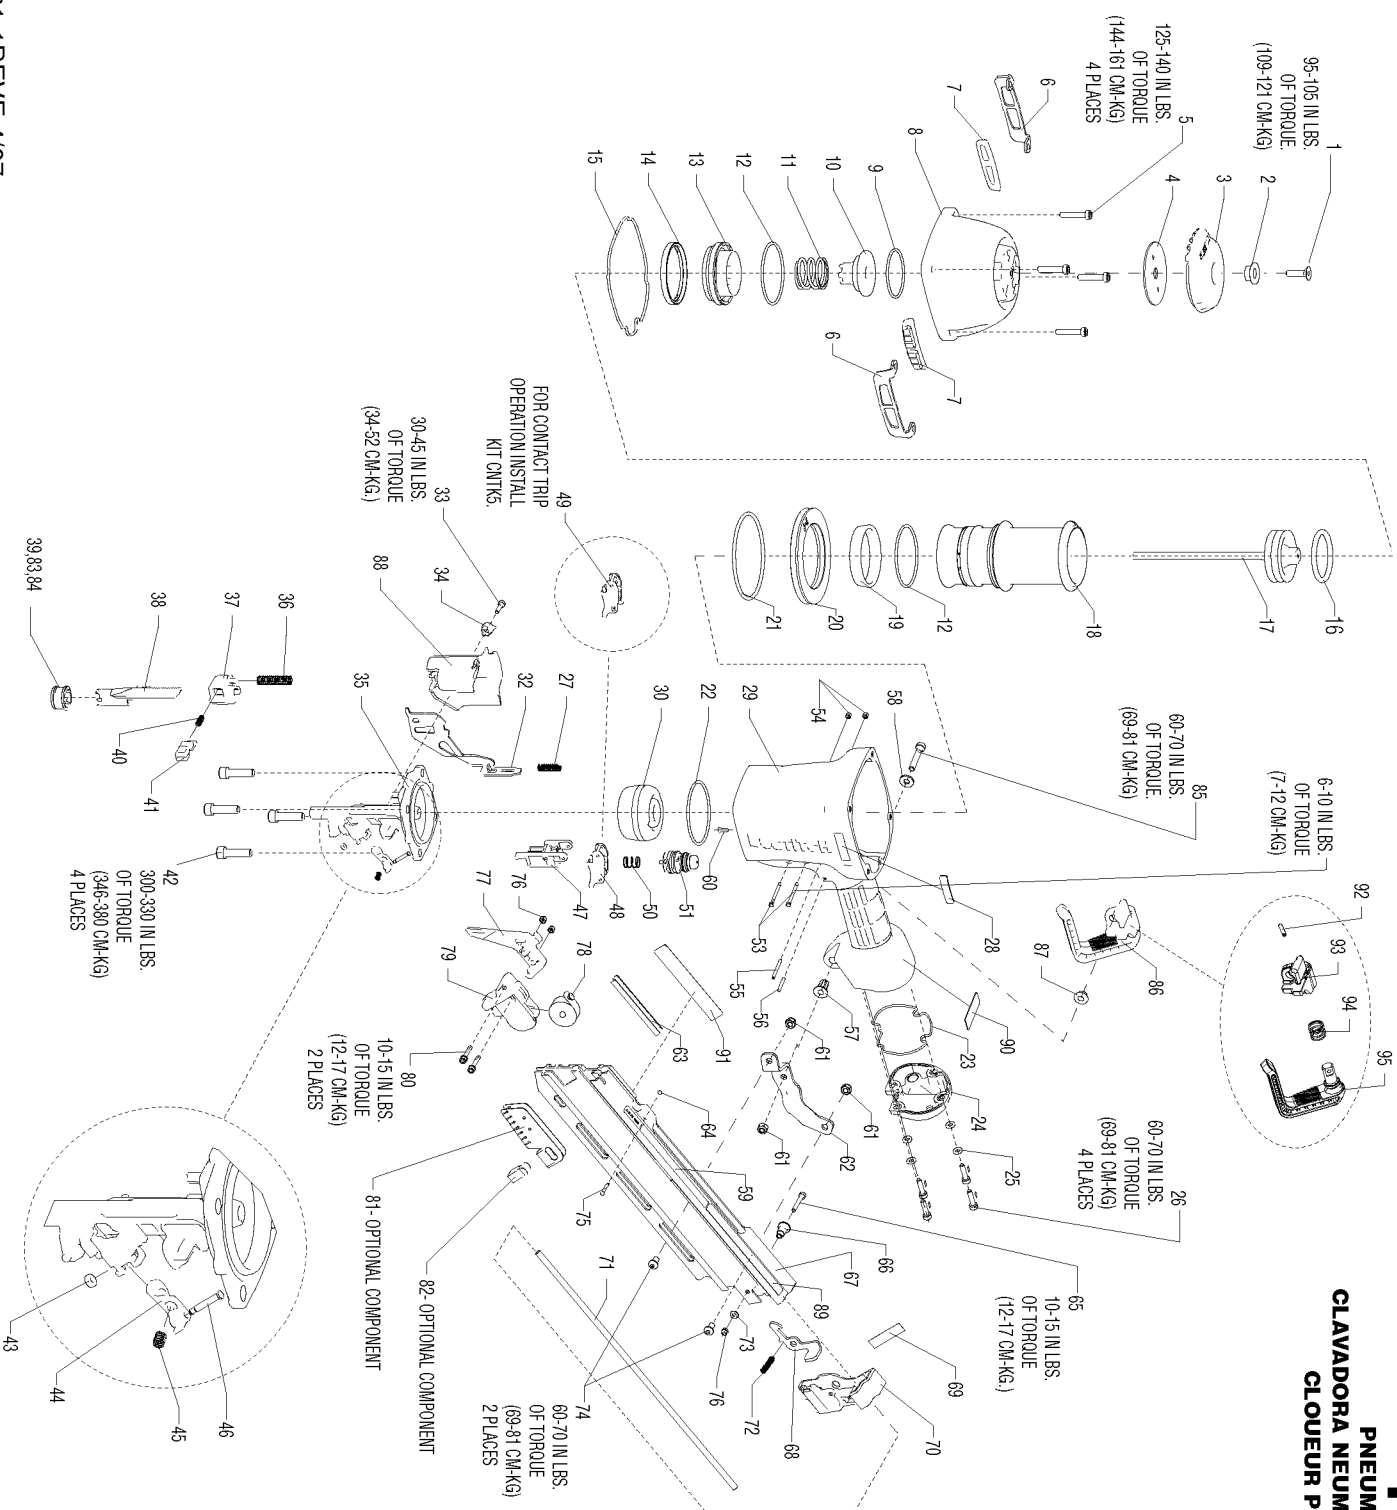 


F33PTSM
PNEUMATIC STICK NAILERS
CLAVADORA NEUMÁTICA ALIMENTADA POR BARRA
CLOUEUR PNEUMATIQUE EN BANDES

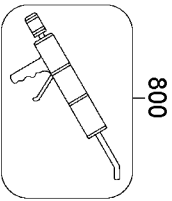

Parts List for F33PTSM Type 0

Item Number	Part Number	Description	Qty Required
1	MSF6100-25	SCREW-SFHCS-M6X1.00X	1
2	163859	BUSHING-EXHAUST DEFL	1
3	163818	DEFLECTOR-EXHAUST	1
4	163830	PLATE-CAP	1
5	MSC6100-30	SCREW-SHCS-M6X1.00X3	4
6	163827	PLATE-WEAR	2
7	149819	WEAR GUIDE	2
8	163848	FRAME CAP-MACHINING	1
9	105814	O-RING-1.929X.098	1
10	163820	BUMPER-HEAD VALVE	1
11	163844	SPRING-HEAD VALVE	1
12	163822	O-RING-2.487X.103XNB	2
13	163821	LOWER BODY-HEAD VALV	1
14	163823	SEAL-HEAD VALVE	1
15	163845	SEAL-FRAME/CAP	1
16	851606-S	O-RING-1.850X.210	1
17	163922	ASSEMBLY-PISTON/DRIV	1
18	163824	SLEEVE-CYLINDER	1
19	175520	SEAL-CHECK	1
20	163855	RING-CYLINDER SLEEVE	1
21	108718	O-RING-3.484X.139	1
22	89673	O-RING	1
23	163856	SEAL-END CAP	1
24	163843	END CAP-PAINT	1
25	T50118	WASHER-PLAIN	4
26	MSC5080-20	SCREW-SOC HD. CAP M5	4
27	166781	SPRING-UPPER TRIP	1

Parts List for F33PTSM Type 0

Item Number	Part Number	Description	Qty Required
28	171432	LABEL-MAGNESIUM	1
29	171127	FRAME-OVERMOLD	1
30	107231	BUMPER-DRIVE	1
32	163900	ARM-UPPER CONTACT	1
33	MSC4070-16	SCREW-SHCS-M4X0.7X16	1
34	163903	BUSHING-TRIP COVER	1
35	163924	NOSE-F33PT	1
36	166772	SPRING-CONTACT ARM	1
37	108224	CASTING-HOUSING CONT	1
38	142941	ARM-LOWER CONTACT	1
39	121072	ASSEMBLY-TRIP FOOT	1
40	115230	SPRING-HOUSING	1
41	166777	CASTING-PLUNGER	1
42	MSC8125-30	SCREW-SHCS M8X30	4
43	854004	WASHER-RUBBER-7	1
44	163877	PAWL	1
45	163878	SPRING-CHECK PAWL	1
46	149882	PIN-CHECK PAWL	1
47	163883	GUIDE-ARM	1
48	SEQ7	KIT-SEQUENTIAL TRIP	1
49	CNTK5	KIT-CONTACT TRIP CON	1
50	100387	SPRING-COMPRESSION	1
51	TVA6	KIT-TRIGGER VALVE	1
53	108562	SCREW-TRIGGER PIVOT	2
54	MHE3050-100	NUT-NYLON M3X.50	2
55	100298	PIN-SPIRAL M3X30	1
56	MPP030020	PIN-SPIRAL M3X20MM	1

Parts List for F33PTSM Type 0

Item Number	Part Number	Description	Qty Required
57	123859	BUSHING-FLANGED ISOL	1
58	MPW6.2	WASHER.SPECIAL	1
59	158612	LABEL-WARNING	1
60	163858	PLUG-EXHAUST	1
61	MHE6100-100	NUT-ESN M6X1	3
62	166776	BRACKET-MAGAZINE	1
63	171352	LINER	1
64	166797	O-RING-.056X.060 NBR	1
65	100261	SCREW	1
66	121472	SPACER-PUSHER LATCH	1
67	166785	MAGAZINE	1
68	166778	LATCH-PUSHER	1
69	120927	LABEL-SENSOR SMALL (1
70	163912	ASSEMBLY-END CAP	1
71	171353	ROD,GUIDE	1
72	120878	SPRING- PUSHER LATCH	1
73	MPW4	WASHER-PWN-M4	1
74	MSB6100-12	SCREW-SBHCS-M6X1.00X	2
76	MHE4070-100	ELASTIC STOP NUT-M4	2
77	163898	PUSHER	1
78	115143	SPRING-CONSTANT FORC	1
79	163902	HANDLE-PUSHER	1
80	121052	SCREW-SHCS-M4X0.70X2	2
81	112630	SHIELD-DUST	1
82	112631	SPRING-CLIP	1
83	121071	CLIP-TRIP FOOT	1
84	121070	FOOT-TRIP	1

Parts List for F33PTSM Type 0

Item Number	Part Number	Description	Qty Required
85	MSC6100-25	SCREW-SHCS-M6X1.00X2	1
86	171354	ASSEMBLY-UTILITY HOO	1
87	171342	WASHER-UTILITY HOOK	1
88	171338	COVER-TRIP	1
89	163926	LABEL-FASTENER SPEC.	1
90	104981	LABEL-WARNING	1
91	171335	LABEL-WARNING-METAL	1
92	UB3811.2	PIN- SPIROL - 5/32X3	1
93	171340	MOUNT-UTILITY HOOK	1
94	171341	SPRING-UTILITY HOOK	1
95	171339	HOOK-UTILITY	1
96	173876	BRACKET	1
800	100653	LUBE (2CC)	1
800	100679	LUBE (1LB.CAN)	1