



Parts List for FS1401D Type 1

Item Number	Part Number	Description	Qty Required
4	311993-00	SCREW	3
5	486562-00	SCREW	1
6	498099-00	SCREW	2
12	5148756-00	CHUCK	1
13	5100199-00	TOP PLATE	1
14	5101899-01	PLATE	1
15	5100111-00	ACTUATOR FWR/REV	1
16	5106338-00	SWITCH	1
17	000000-00	No Longer Available	1
20	5100976-00	TERMINAL BLOCK	1
21	5148911-00	ID LABEL	1
22	5100101-03	ACTUATOR	1
23	5103036-00	RING,MOTOR	1
24	5100035-01	SPRING	2
25	046376-00	PIN	1
28	419581-01	BIT	1
29	5100918-00	ROLL PIN	1
30	000000-00	No Longer Available	1
861	000000-00	No Longer Available	1
866	HPB14	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	FSMVC	CHARGER	1
871	5103069-09	CHARGER ASSY.	1