



Parts List for FS18CH Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	5140054-04	DOOR ASSEMBLY	1
3	5140054-05	SPEAKER GRILLE	1
4	5140054-06	ANTENNA	1
871	000000-00	No Longer Available	1\