



Parts List for FS2402D Type 1

Item Number	Part Number	Description	Qty Required
4	311993-00	SCREW	3
5	486562-00	SCREW	1
6	419799-05	SCREW	2
7	5103094-00	MOTOR & MOUNT	1
12	586589-01	KEYLESS CHUCK	1
13	5103110-00	TOP PLATE	1
14	5101899-01	PLATE	1
15	000000-00	No Longer Available	1
16	5103043-02	SWITCH ASSY	1
17	5103044-00	CLAMSHELL SET	1
18	5103072-00	GEARBOX&CLUTCH	1
19	498099-00	SCREW	2
21	5103070-00	NAMEPLATE	1
22	5100101-03	ACTUATOR	1
23	5100153-01	SHIFTER WIRE	1
24	5100035-01	SPRING	2
25	046376-00	PIN	1
26	5103036-00	RING,MOTOR	1
27	5103096-01	SCREW	1
28	607918-41	SCREWDRIVER BIT	1
29	5101990-00	SIDE HANDLE	1
30	5101893-01	IDENT. LABEL	1
861	5103050-00	KIT BOX	1
866	5103040-11	BATTERY PACK	2
866	FS240BX	BATTERY PACK	2
867	5100980-07	CAP	2
871	90553447	CHARGER	1