



## Parts List for FS8500AG Type 1

Item Number	Part Number	Description	Qty Required
1	5140014-92	OUTER FLANGE	1
2	5140014-93	INNER FLANGE	1
3	596388-00	SCREW	6
4	596389-00	FLANGE,GUARD	1
5	5140014-94	GUARD	1
6	596391-00	SPRING WASHER	1
7	596392-00	SCREW	4
8	596393-00	GEAR CASE COVER	1
9	5140014-95	SPINDLE	1
10	596395-00	BEARING	1
11	596396-00	OUTPUT GEAR	1
12	596397-00	CIRCLIP	1
13	596398-00	NEEDLE BEARING	1
14	596399-00	GEAR CASE	1
15	596534-00	SPINDLE LOCK SHAFT	1
16	596401-00	LOCK SPRING	1
17	596402-00	BUTTON, LOCK	1
18	596403-00	SCREW	5
19	596404-00	NUT	1
20	596405-00	PINION GEAR	1
21	596406-00	BEARING	1
22	596407-00	COVER PLATE	1
23	596408-00	SCREW	2
24	5140014-96	ARMATURE	1
25	596410-00	BEARING	1
26	596411-00	BEARING	1
27	596412-00	BAFFLE, FAN	1

## Parts List for FS8500AG Type 1

Item Number	Part Number	Description	Qty Required
28	596413-00	SCREW	2
29	5140014-97	FIELD	1
30	596415-00	FIELD CASE	1
31	496450-00	NAME PLATE	1
32	496451-01	BRAND LABEL	1
33	596418-00	BRUSH BOX ASSY	2
34	5140014-98	BRUSH	2
35	596420-00	SCREW	4
36	596421-00	WASHER	4
37	596422-00	SPRING	2
38	596423-00	SPRING	1
40	596425-00	TRIGGER LOCK	1
44	5140021-92	SWITCH	1
45	596430-00	SCREW	2
46	596441-00	HANDLE ASSY.	1
47	596431-00	SCREW	2
48	5140019-97	CORD CLAMP	1
49	596433-00	CORD PROTECTOR	1
50	5140047-20	CORD SET	1
51	596437-00	SIDE HANDLE	1
52	596438-00	KEY	1
54	596440-00	WRENCH	1
55	5140019-98	WARNING LABEL	1
56	596537-00	SEAL	1
57	5140020-12	SPINDLE&GR.ASSY	1
58	596539-00	GEARCASE ASSY	1
59	5140019-99	ARMATURE & BRG.	1

## Parts List for FS8500AG Type 1

Item Number	Part Number	Description	Qty Required
61	5140014-99	TRIGGER	1
62	596770-00	FLANGE	1
63	5140024-45	INSULATOR	2
65	488377-00	WARNING LABEL	1
66	576227-00	WARNING LABEL	1
67	576226-00	WARNING LABEL	1