



BOSCH

Slide Mitre Saw

GCM 12 GDL | 3 601 M23 680

Table of Content

Spare parts list.....	2
Illustration - Type.....	11

Spare parts list

Item	Part Number	Description
45	1 609 B04 487	Detent plate
46	1 609 B00 223	Screw
47	1 609 B00 225	Nut
48	1 609 B00 226	Sliding Plate
49	1 609 B01 431	Supporting foot
51	1 609 B00 228	Extension Stand
52	1 609 B00 229	Extension Stand
53	1 609 B00 230	Extension Shaft
54	1 609 B00 231	Extension Shaft
55	1 609 B00 232	Locking Lever
56	1 609 B00 233	Locking Lever
57	1 609 B00 234	Screw
58	1 609 B00 235	Screw
59	1 609 B00 236	Shoulder Screw
61	1 609 B00 237	Compression Spring
62	1 609 B00 238	Shoulder Screw
63	1 609 B02 101	Mitre Fence
64	1 609 B02 102	Mitre Fence
65	1 609 B02 103	Parallel-Guide
66	1 609 B02 104	Parallel-Guide
67	1 609 B00 244	Clamping Sleeve
68	1 609 B00 245	Locking Lever
69	1 609 B00 246	Locking Lever
71	1 609 B00 247	Bolt
72	1 609 B00 248	Bolt
73	1 609 B00 249	Compression Spring
74	1 609 B00 250	Plate
75	1 609 B00 251	Plate
76	1 609 B00 252	Shoulder Screw
77	1 609 B00 253	Compression Spring
78	1 609 B00 254	Scale
79	1 609 B00 255	Clamp Spring
81	1 609 B00 256	Wrench Socket
239	1 609 B00 533	Rubber Bushing
243	1 609 B00 543	Warning Plate

Spare parts list

Item	Part Number	Description
253	1 609 B02 122	Sticker
266	1 609 B00 602	Bolt
273	1 609 B00 610	Screw
278	1 609 B00 617	Set screw
283	1 609 B00 622	Rivet
304	1 609 B00 644	Retaining ring
323	1 609 B00 669	Washer
329	1 609 B00 678	Screw
333	1 609 B04 227	Adjusting Nut
334	1 609 B02 367	Supporting foot
364	1 609 B02 365	Stop Plate
365	1 609 B00 263	Screw
844	1 609 B02 591	Base
31	1 609 B00 201	Wear Plate
83	1 609 B02 375	Support Plate
84	1 609 B00 273	Shaft
85	1 609 B02 377	Knob
86	1 609 B00 275	Cover
87	1 609 B00 276	Rod
88	1 609 B00 277	Support bracket
89	1 609 B00 278	Sliding Block
91	1 609 B00 279	Sliding Block
92	1 609 B00 280	Compression Spring
93	1 609 B00 281	Compression Spring
94	1 609 B00 282	Sliding Plate
95	1 609 B00 283	Cover
96	1 609 B00 284	Knob
97	1 609 B00 285	Support bracket
98	1 609 B00 286	Cam
99	1 609 B00 287	Linkage
101	1 609 B00 289	Guide Bracket
103	1 609 B00 291	Compression Spring
104	1 609 B00 292	Locking Lever
105	1 609 B00 293	Lever Shaft
106	1 609 B00 294	Cam

Spare parts list

Item	Part Number	Description
107	1 609 B00 295	Support bracket
108	1 609 B00 296	Support bracket
109	1 609 B00 297	Tension Rod
111	1 609 B00 298	Tube
112	1 609 B00 299	Guide Bracket
114	1 609 B04 380	Cover
115	1 609 B00 302	Detent Pin
116	1 609 B00 303	Compression Spring
117	1 609 B00 304	Locking Lever
118	1 609 B00 305	Bolt
119	1 609 B00 306	Compression Spring
122	1 609 B00 308	Pin
123	1 609 B00 309	Torsion Spring
124	1 609 B00 310	Pointer
125	1 609 B02 988	Scale
126	1 609 B00 312	Plate
235	1 609 B00 523	Rubber Pad
244	1 609 B02 120	Sticker
245	1 609 B02 119	Sticker
267	1 609 B00 603	Lock Nut
269	1 609 B00 605	Lock Nut
271	1 609 B00 608	Lock Nut
275	1 609 B00 614	Set screw
277	1 609 B00 616	Set screw
282	1 609 B00 621	Set screw
288	1 609 B00 627	Screw
295	1 609 B00 634	Screw
298	1 609 B00 638	Spring Pin
302	1 609 B00 642	Retaining ring
305	1 609 B00 645	Screw
306	1 609 B00 647	Screw
315	1 609 B00 658	Spring Washer
320	1 609 B00 664	Washer
321	1 609 B00 665	Washer
322	1 609 B00 667	Washer

Spare parts list

Item	Part Number	Description
324	1 609 B00 670	Washer
326	1 609 B00 673	Lock Nut
345	1 609 B00 288	Washer
354	1 609 B00 676	Washer
403	1 609 B02 490	Wrench Socket
802	1 609 B02 310	Detent Pin
828	1 609 B02 593	Button
834	1 609 B06 203	Adjustable screw clamp
882	1 609 B02 309	Table
42	1 609 B00 212	Washer
129	1 609 B00 331	Hinge
134	1 609 B00 335	Hinge
136	1 609 B00 337	Shaft
137	1 609 B00 338	Shaft
138	1 609 B02 574	Cable Clip
142	1 609 B00 342	Bolt
143	1 609 B00 343	Bushing
144	1 609 B00 345	Locking Lever
145	1 609 B00 346	Clamp Spring
146	1 609 B00 347	Adjusting bolt
147	1 609 B00 348	Plate
148	1 609 B00 349	Shoulder Screw
149	1 609 B00 350	Knob
151	1 609 B00 351	Shoulder Screw
152	1 609 B02 371	Detent
153	1 609 B00 353	Retaining Plate
154	1 609 B00 354	Retaining Plate
155	1 609 B00 355	Brake Plate
156	1 609 B00 356	Spacer
157	1 609 B00 357	Pointer
158	1 609 B00 358	Pointer
159	1 609 B00 359	Adjusting bolt
161	1 609 B00 361	Support bracket
162	1 609 B00 362	Bumper
163	1 609 B02 428	Socket-Outlet Adaptor

Spare parts list

Item	Part Number	Description
164	1 609 B00 364	Shaft
167	1 609 B00 367	Screw
168	1 609 B00 368	Rubber Plug
169	1 609 B00 369	Rubber Plug
248	1 609 B00 549	Warning Plate
259	1 609 B00 594	Ball
265	1 609 B00 601	O-Ring
268	1 609 B00 604	Lock Nut
272	1 609 B00 609	Bolt
274	1 609 B00 612	Screw
281	1 609 B00 620	Set screw
284	1 609 B00 623	Screw
285	1 609 B00 624	Screw
289	1 609 B00 630	Screw
296	1 609 B00 636	Tapping Screw
316	1 609 BP7 042	Washer
317	1 609 B00 661	Washer
325	1 609 B00 672	Lock Nut
327	1 609 B00 674	Washer
330	1 609 B00 680	Screw
331	1 609 B00 681	Thrust Bearing
332	1 609 B00 682	Screw
337	1 609 B00 689	Screw
338	2 610 919 073	Brake Plate
339	2 610 919 281	Washer
341	1 609 B00 370	Shaft
342	1 609 B00 690	Retaining ring
343	1 609 B00 691	Nut
351	1 609 B02 572	Cable Clip
352	1 609 B00 371	Shoulder Screw
369	1 609 B02 174	Screw
831	1 609 B02 303	Hinge
832	1 609 B02 304	Hinge
833	1 609 B02 305	Hinge
835	1 609 B02 592	Bearing Block

Spare parts list

Item	Part Number	Description
4	2 610 950 336	Switch
5	1 609 B02 556	Power supply cord CN
32	1 609 B02 384	Pivot
33	1 609 B00 204	Torsion Spring
34	1 609 B00 205	Bushing
35	1 609 B00 206	Wear Plate
36	1 609 B00 207	Belt
37	1 609 B02 351	Flange
39	1 609 B02 352	Flange
41	1 609 B00 960	Flange Bolt
43	1 609 B00 213	Flange Bolt
172	1 609 B00 382	Knob RED
174	1 609 B00 384	Gear Cover
175	1 609 B00 385	Output Shaft
176	1 609 B00 386	Gear
177	1 609 B00 387	Pinion
178	1 609 B00 388	Pulley
179	1 609 B00 504	Belt Cover
181	1 609 B00 390	Button
182	1 609 B00 391	Locking Pin
183	1 609 B00 392	Compression Spring
186	1 609 B02 399	Trigger
187	1 609 B05 392	Switch
188	1 609 B02 562	Power supply unit
189	1 609 B02 408	Cable Clip
191	1 609 B02 183	Screw old, only with softstartmodule
192	1 609 B02 411	Clamp
193	1 609 B00 405	Clamp
194	1 609 B00 417	Compression Spring
195	1 609 B00 418	Sleeve
196	1 609 B00 419	Rubber Pad
197	1 609 B02 406	Connector
238	1 609 B01 538	Cable Tape
251	1 609 B02 123	Sticker
255	1 609 B00 582	Clip

Spare parts list

Item	Part Number	Description
256	1 609 B00 583	Shrinkable Tube
257	1 609 B00 592	Key
258	1 609 B00 593	Key
262	1 609 B00 599	Bearing
263	1 609 B00 596	Bearing
276	1 609 B00 615	Set screw
279	1 609 B00 618	Set screw
286	1 609 B00 625	Screw
292	1 609 B00 631	Screw
293	1 609 B00 632	Screw
294	1 609 B00 633	Screw
297	1 609 B00 637	Tapping Screw
301	1 609 B00 641	Retaining ring
303	1 609 B00 643	Retaining ring
308	1 609 B00 650	Screw
309	1 609 B00 652	Screw
310	1 609 B00 653	Screw
311	1 609 B00 654	Screw
318	1 609 B00 662	Washer
370	1 609 B02 565	Cable
378	1 609 B02 383	Shaft
379	1 609 B02 380	Carrying Handle
380	1 609 B02 381	Handle Plate
391	1 609 B02 392	Terminal Box
392	1 609 B02 415	Cable Sleeve
393	1 609 B02 416	Cable Sleeve
394	1 609 B02 391	Terminal Box
436	1 609 B02 412	Clamp
812	1 609 B02 405	Suppression Capacitor
871	1 609 B02 594	Arm
873	1 609 B02 307	Gear Box
874	1 609 B02 499	Locking Lever
885	1 609 B02 552	Handle
2	1 609 B02 484	Field 220V
8	1 609 B02 132	Nameplate

Spare parts list

Item	Part Number	Description
13	1 609 B00 597	Bearing
20	1 609 B02 125	Warning Plate
198	1 609 B02 425	Safety Cover
203	1 609 B02 427	Safety Cover
204	1 609 B02 465	Linkage
205	1 609 B00 448	Shoulder Screw
206	1 609 B00 449	Bushing
211	1 609 B00 453	Screw
212	1 609 B00 454	Screw
213	1 609 B00 455	Bushing
214	1 609 B02 467	Bumper
215	1 609 B00 457	Washer
218	1 609 B00 460	Bushing
219	1 609 B00 471	Mounting Plate
222	1 609 B00 476	Baffle
223	1 609 B00 478	Brush-Cover
224	1 609 B00 479	Insert
225	1 609 B00 480	Rubber Bushing
226	1 609 B00 483	Bearing Plate
228	1 609 B00 501	Chute
229	1 609 B00 502	Rubber Plate
231	1 609 B00 505	Connector
232	1 609 B00 506	Dust Bag
241	1 609 B02 426	Safety Cover
287	1 609 B00 628	Screw
307	1 609 B00 649	Screw
312	1 609 B00 655	Screw
313	1 609 B00 656	Screw
328	1 609 B02 105	Washer
335	1 609 B00 687	Retaining ring
336	1 609 B00 688	Washer
356	1 609 B00 446	Cord guard
362	1 609 B02 429	Screw
363	1 609 B02 430	Screw
382	1 609 B02 437	Screw


Spare parts list

Item	Part Number	Description
384	1 609 B02 438	Grooved Washer
385	1 609 B02 191	Washer
386	1 609 B02 192	Screw
387	1 609 B02 439	Laser
396	1 609 B00 325	Module Holder
397	2 610 233 020	Soft Start-Up Module
398	1 609 B02 432	Cable Cover
399	1 609 B02 482	Housing Cover
401	1 609 B02 189	Screw
402	1 609 B00 956	O-Ring
801	1 609 B02 302	Motor Housing
803	1 609 B02 590	Armature 220-240V
810	2 610 021 311	Carbon-Brush Set
817	1 609 B02 598	Plate
827	1 609 B02 316	Bearing
838	1 609 B02 431	Cover unit
883	1 609 B02 434	Support Plate
899	1 609 B02 597	Protective Cover

Illustration - Type - E

3 601 M23 600
 Stand | 08-04
 Issue | 12-10-22

 Fig. /Abb. 1

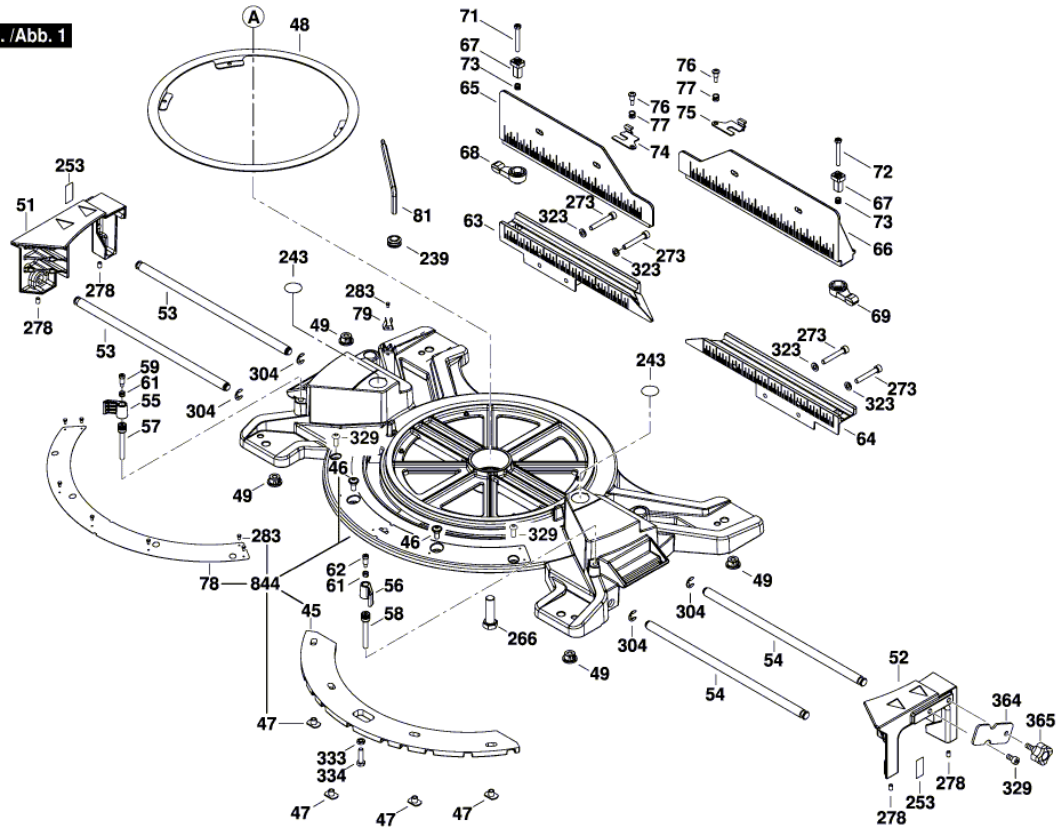


Änderungen vorbehalten
 Modifications reserved
 Modifications réservées
 Salvo modificaciones

Illustration - Type - E

3 601 M23 600
 Stand | 11-07
 Issue | 15-03-06

 Fig. /Abb. 2

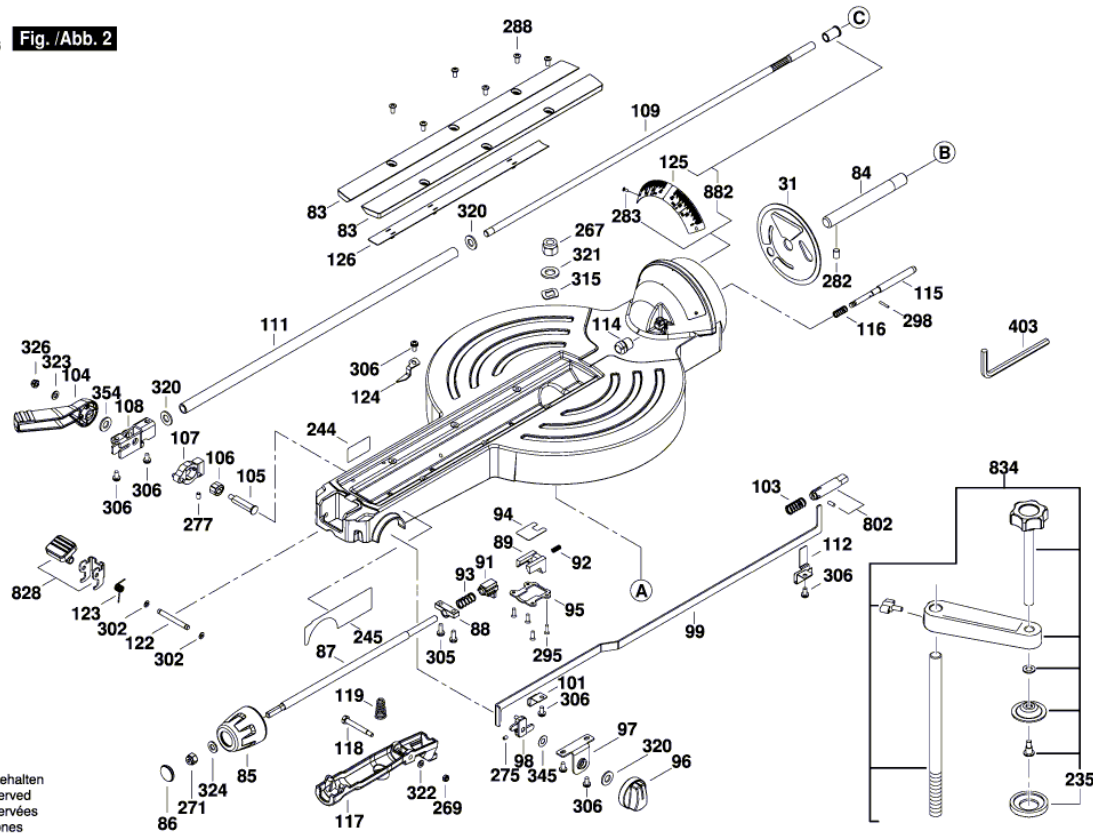


Änderungen vorbehalten
 Modifications reserved
 Modifications réservées
 Salvo modificaciones

Illustration - Type - E

3 601 M23 600

Stand } 14-06
Issue } 14-10-28

 Fig./Abb. 3

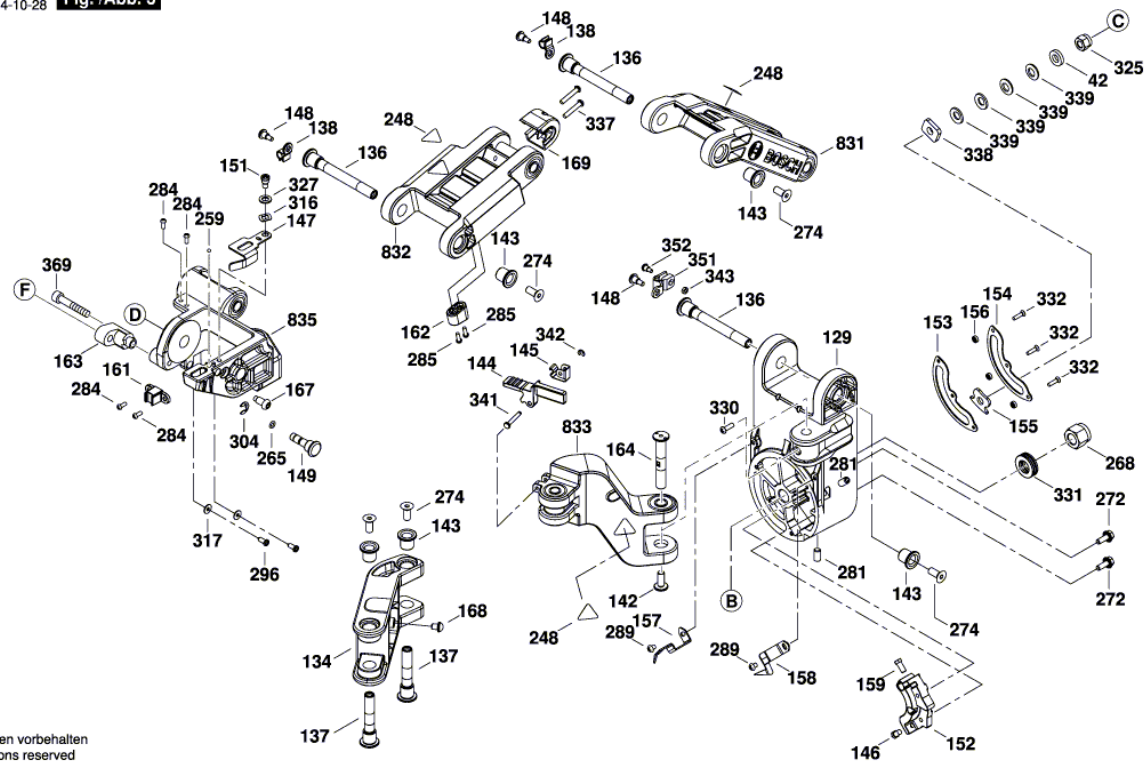

Änderungen vorbehalten
Modifications reserved
Modifications réservées
Salvo modificaciones

Illustration - Type - E

