



BOSCH

Cutoff saw

GCO 2000 | 3 601 L17 180

Table of Content

Spare parts list.....	2
Illustration - Type.....	5

Spare parts list

Item	Part Number	Description
1	1 619 P03 740	Motor Housing
2	1 619 P03 860	Field 230V
4	1 619 P03 844	On-Off Switch
5	1 619 P03 813	Power supply cord
6	1 619 P03 807	Grommet
7	1 619 P03 808	Cable Clip
8	1 619 P03 910	Nameplate
9	1 619 P03 747	Manufacturer's nameplate
12	1 619 P03 883	Suppression Capacitor
18	1 619 P03 837	Raised ctsunk head tap sc
20	1 619 P03 847	Warning Label
22	1 619 P03 741	End cap
23	1 619 P03 725	Arm
25	1 619 P03 814	Rubber Bar
26	1 619 P03 825	Screw and washer assembly M5x16
27	1 619 P03 750	Stop Bracket
28	1 619 P03 826	Flange Bolt DIN 6921-M10x20-8.8
29	1 619 P03 753	Clamp Screw
30	1 619 P03 758	Clamp Bracket
31	1 619 P03 756	Rivet Pin DIN 94-4x22
32	1 619 P03 748	Locking Pin
33	1 619 P03 757	Plain Washer DIN 433-10
35	1 619 P03 755	Spring retaining ring DIN 471-18
37	1 619 P03 751	Clamp Handle
38	1 619 P03 752	Spring Pin ISO 1337 4x18
39	1 600 206 030	Rubber Ring
40	1 609 B03 576	Clamping Block
41	1 609 B03 518	Flange
42	1 619 P03 761	Connecting Rod
43	1 619 P03 735	Flange Bolt DIN 6921 M 10x20-10.9
44	1 619 P03 762	Spring Pin ISO 13337-4x35
46	1 619 P03 827	Socket head cap screw ISO 4762-M 8x20-8.8
47	1 619 P03 848	Base
48	1 619 P03 828	Plain Washer DIN 125 A8

Spare parts list

Item	Part Number	Description
49	1 619 P03 829	Spring Washer DIN 127 B8
51	1 619 P03 811	Shaft
52	1 619 P03 810	O-Ring 4,5x1,8
53	1 619 P03 809	Cap Nut
54	1 619 P03 818	Holding Bracket
55	1 619 P03 903	Protective Cover
56	1 619 P03 830	Hexagon Bolt DIN 933-M8x30-8.8
57	1 619 P03 831	Hex Nut DIN 934-M8-8
58	1 619 P03 835	Thread-forming tap. Screw DIN 7500 C-M6x35
59	1 619 P03 744	Handle
62	1 619 P03 832	Screw ECO-SYN St3x12
63	1 619 P03 822	Air-Deflector Ring
64	1 619 P03 823	Pickup Clip
67	1 619 P03 833	Screw ECO-SYN St 3,5x16
68	1 619 P03 834	Screw ECO-SYN St3,5x10
69	1 619 P03 840	Screw ISO 4762-M6x8-8.8
71	1 619 P03 841	Spring Washer DIN 127 B6
72	1 619 P03 839	Stop Screw ISO 4027-M 5x8-45H
73	1 619 P03 816	Pivot Shaft
74	1 619 P03 873	Torsion Spring
75	1 619 P03 864	Compression Spring
77	1 619 P03 907	Gear Cover
78	1 619 P03 815	Plain Washer
79	1 619 P03 838	Screw M5x30-4.8
80	1 619 P03 732	Flap Guard
81	1 619 P03 802	Shoulder Screw
82	1 619 P03 866	Spring Washer
83	1 619 P03 801	Wing Screw
84	1 619 P03 771	Protective Guard
86	1 619 P03 824	Raised ctsunk head tap sc
87	1 619 P03 821	Screw M5x25-4,8
88	1 619 P03 819	Nut ISO 4035-M5-04
89	1 619 P03 855	Insulating Tube
91	1 619 P03 812	Adjusting Wrench

Spare parts list

Item	Part Number	Description
92	1 619 P03 733	Linkage
93	1 619 P03 749	Linkage
94	1 619 P03 763	Connection Pin
95	1 619 P03 764	Rivet
96	1 619 P03 765	Washer
97	1 619 P03 766	Nut
98	1 619 P03 904	Protective Guard
99	1 619 P03 905	Flange
100	1 619 P03 909	Clip
102	1 619 P03 863	Torsion Spring
803	1 609 B00 046	Armature 220-240V
803/13	1 619 P03 850	Bearing 608-2RS
803/14	1 619 P03 727	Bearing 6001-2RS
810	1 607 014 171	Carbon-Brush Set
816	1 604 336 048	Brush Holder
834	1 619 P03 914	spindle assembly
845	1 609 B03 533	Bearing Block

Illustration - Type - E

