



BOSCH

Demolition Hammer

GSH 27 | 3 611 C0A 012

Table of Content

Spare parts list.....	2
Illustration - Type.....	5

Spare parts list

Item	Part Number	Description	Illustration
2	1 604 220 52T	Field	1
4	1 605 820 23G	Bearing cover	1
5	1 610 900 015	groove ball bearing 12x37x12	1
6	1 615 500 214	Screw Plug	1
7	1 615 108 104	Insulating Housing	1
8	1 616 610 091	Fan	1
9	1 613 313 000	Hex Nut DIN 985-M12X1	1
11	1 610 108 013	Felt Washer	1
12	1 610 102 616	Supporting Disc 1,0 MM THICK	1
15	1 610 910 091	Needle-Roller Bearing D35xD47x17	1
17	1 610 210 210	O-Ring	1
19	1 600 A01 4TX	Eccentric Shaft	1
21	1 616 318 009	Cylindrical Gear Z=45	1
22	1 616 328 036	Cylindrical Gear Z=19/52	1
23	1 610 913 005	Needle-Roller Assembly	1
24	1 600 A01 4T0	Gear Cover	1
26	1 610 910 092	Needle-Roller Bearing D25xD37x17	1
27	1 610 210 213	O-Ring	1
29	1 610 910 097	Needle-Roller Bearing	1
35	1 610 210 211	O-Ring	1
37	1 600 A01 4T8	Guide Tube	1
38	1 600 A01 4U0	Supporting Disc	1
39	1 610 290 103	Damping Ring	1
40	1 600 A01 4U1	Intermediate Flange	1
41	1 610 210 008	O-Ring 17,3x17,7 MM	1
42	1 600 A01 4TU	Striker Pin	1
44	1 618 045 026	Retaining Bracket	1
45	1 613 103 004	Locking Bolt	1
46	2 917 760 187	Slotted Spring Pin 8x55 DIN 1481	1
47	1 600 A02 254	Sealing Frame	1
48	1 605 500 2HJ	Cover	1
50	3 600 421 500	Protection Sleeve	1
51	1 610 703 057	Cord guard	1
52	1 600 A01 4T5	Fan Cover	1
53	1 615 500 449	Covering hood	1

Spare parts list

Item	Part Number	Description	Illustration
55	1 614 460 102	Power supply cord	1
56	1 610 703 011	Grommet	1
57	1 615 500 418	Switch Cover	1
58	1 617 200 124	Switch	1
59	1 600 A01 4U2	Intermediate Plate	1
61	1 615 700 059	Dust Protection	1
62	1 612 026 153	Switch-Pawl	1
63	1 615 132 124	Handle	1
64	1 616 334 000	Rubber Torsion-Bar	1
65	1 613 060 005	Toothed Shaft	1
66	1 610 290 101	Backup ring	1
67	2 916 660 023	Spring retaining ring DIN 472 52x2MM	1
68	1 613 465 001	Rubber Buffer	1
69	3 611 C0A 012	Demolition Hammer	1
70	1 615 132 125	Handle	1
73	1 603 435 036	Tapping Screw 4,8x78 MM, TORX T-20	1
74	2 916 160 010	Disc Spring	1
75	1 614 614 009	Compression Spring	1
76	1 611 302 016	Fastening Clamp	1
85	1 614 336 045	Brush Holder	1
85/96	1 614 448 037	Connecting Cable	1
86	1 610 300 033	Bearing bolt	1
87	1 610 900 027	groove ball bearing 25x52x15	1
88	1 610 283 016	Rotary shaft lip seal	1
89	1 610 009 008	Spacer	1
90	1 611 015 061	Rectangular Ring	1
91	1 610 210 212	O-Ring	1
94	1 611 015 021	Sealing Plate	1
95	1 614 413 009	Wiring Harness	1
97	2 915 011 007	Hex Nut DIN 934-M6-8-A	1
99	3 613 313 500	Hex Nut DIN 985-10-M10x1	1
104	2 910 141 201	Hex Socket Head Cap Screw DIN 912-M6x20-8.8	1
105	2 914 551 188	Microencapsulated Screw DIN 912-M6X30-8.8	1

Spare parts list

Item	Part Number	Description	Illustration
106	2 914 551 189	Microencapsulated Screw DIN 912-M6x55-8.8	1
107	2 910 141 242	Hex Socket Head Cap Screw DIN 912-M8x20-8.8	1
108	2 603 490 023	Torx Oval-Head Screw 4x20	1
109	2 910 141 248	Hex Socket Head Cap Screw DIN 912-M8x35-8.8	1
110	2 910 141 356	Hex Socket Head Cap Screw DIN-M12x70-8.8	1
111	1 613 414 024	Hex Screw	1
112	1 613 490 021	Torx Oval-Head Screw	1
119	1 611 110 D82	Warning Plate	1
135	1 611 110 H20	Reference Plate	1
139	1 610 508 050	Plug	1
801	1 607 000 E6P	Motor Housing	1
803	1 614 011 092	Armature 115-120V	1
825	1 617 000 727	Piston Assembly Group	1
834	1 617 000 728	Striker	1
837	1 600 A01 BG9	Guide Tube	1
843	1 607 000 C8U	Toolholder	1
854	1 617 000 730	Switch Housing	1
859	2 910 011 088	Socket head cap screw DIN 84-AM3,5x12-5.8	1
871	1 601 11A 3H5	Nameplate	1
872	1 617 000 731	Hammer Pipe	1
879	1 614 652 001	Spiral Spring	1
881	1 613 490 005	Torx Oval-Head Screw M4x10	1
882	1 610 151 007	Spring Lock Washer	1
883	1 617 000 425	Carbon-Brush Set	1
890	1 617 000 A42	Un. Flange-Mtd. Motor	1
897	1 617 000 732	Wear and Tear Part Set	1
898	1 615 430 015	Grease Tube 225 ML	1

Illustration - Type - E

