



BOSCH

Cordless Drill Driver

GSR12V-300 | 3 601 JH8 010

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description	Illustration
1	1 600 A01 3ZK	Housing	1
4	1 607 233 5HJ	Electronic Module	1
9	1 601 11C 2SK	Manufacturer's nameplate	1
20	1 600 A01 6R3	Lens	1
25	1 600 A02 9D0	Keyless Chuck	1
32	1 600 A01 3HK	Switchover Unit	1
41	1 601 11C 2MP	Sticker	1
42	1 601 11C 2NE	Sticker	1
45	1 600 A01 5WE	Gear Box	1
70	2 609 110 537	Clip	1
91	1 607 A35 0C8	Battery Pack BAT 414 10,8/12V 2,0Ah	1
101	2 609 110 883	Screw	1
102	1 600 A01 6R4	Cap Nut	1
105	1 600 A01 8UV	Color clip	1
107	2 603 421 229	Countersunk-Head Screw M6x23 LEFTHAND THREADS	1
653	2 607 225 519	Fast Charger USA 120/3,6-10,8V,1h	1
657	1 600 A02 47P	Clip	1
802	1 600 A01 M97	Brushless DC motor	1
805	1 607 000 E1T	Switch	1
808	1 601 11A 6M8	Nameplate	1

Illustration - Type - E

