


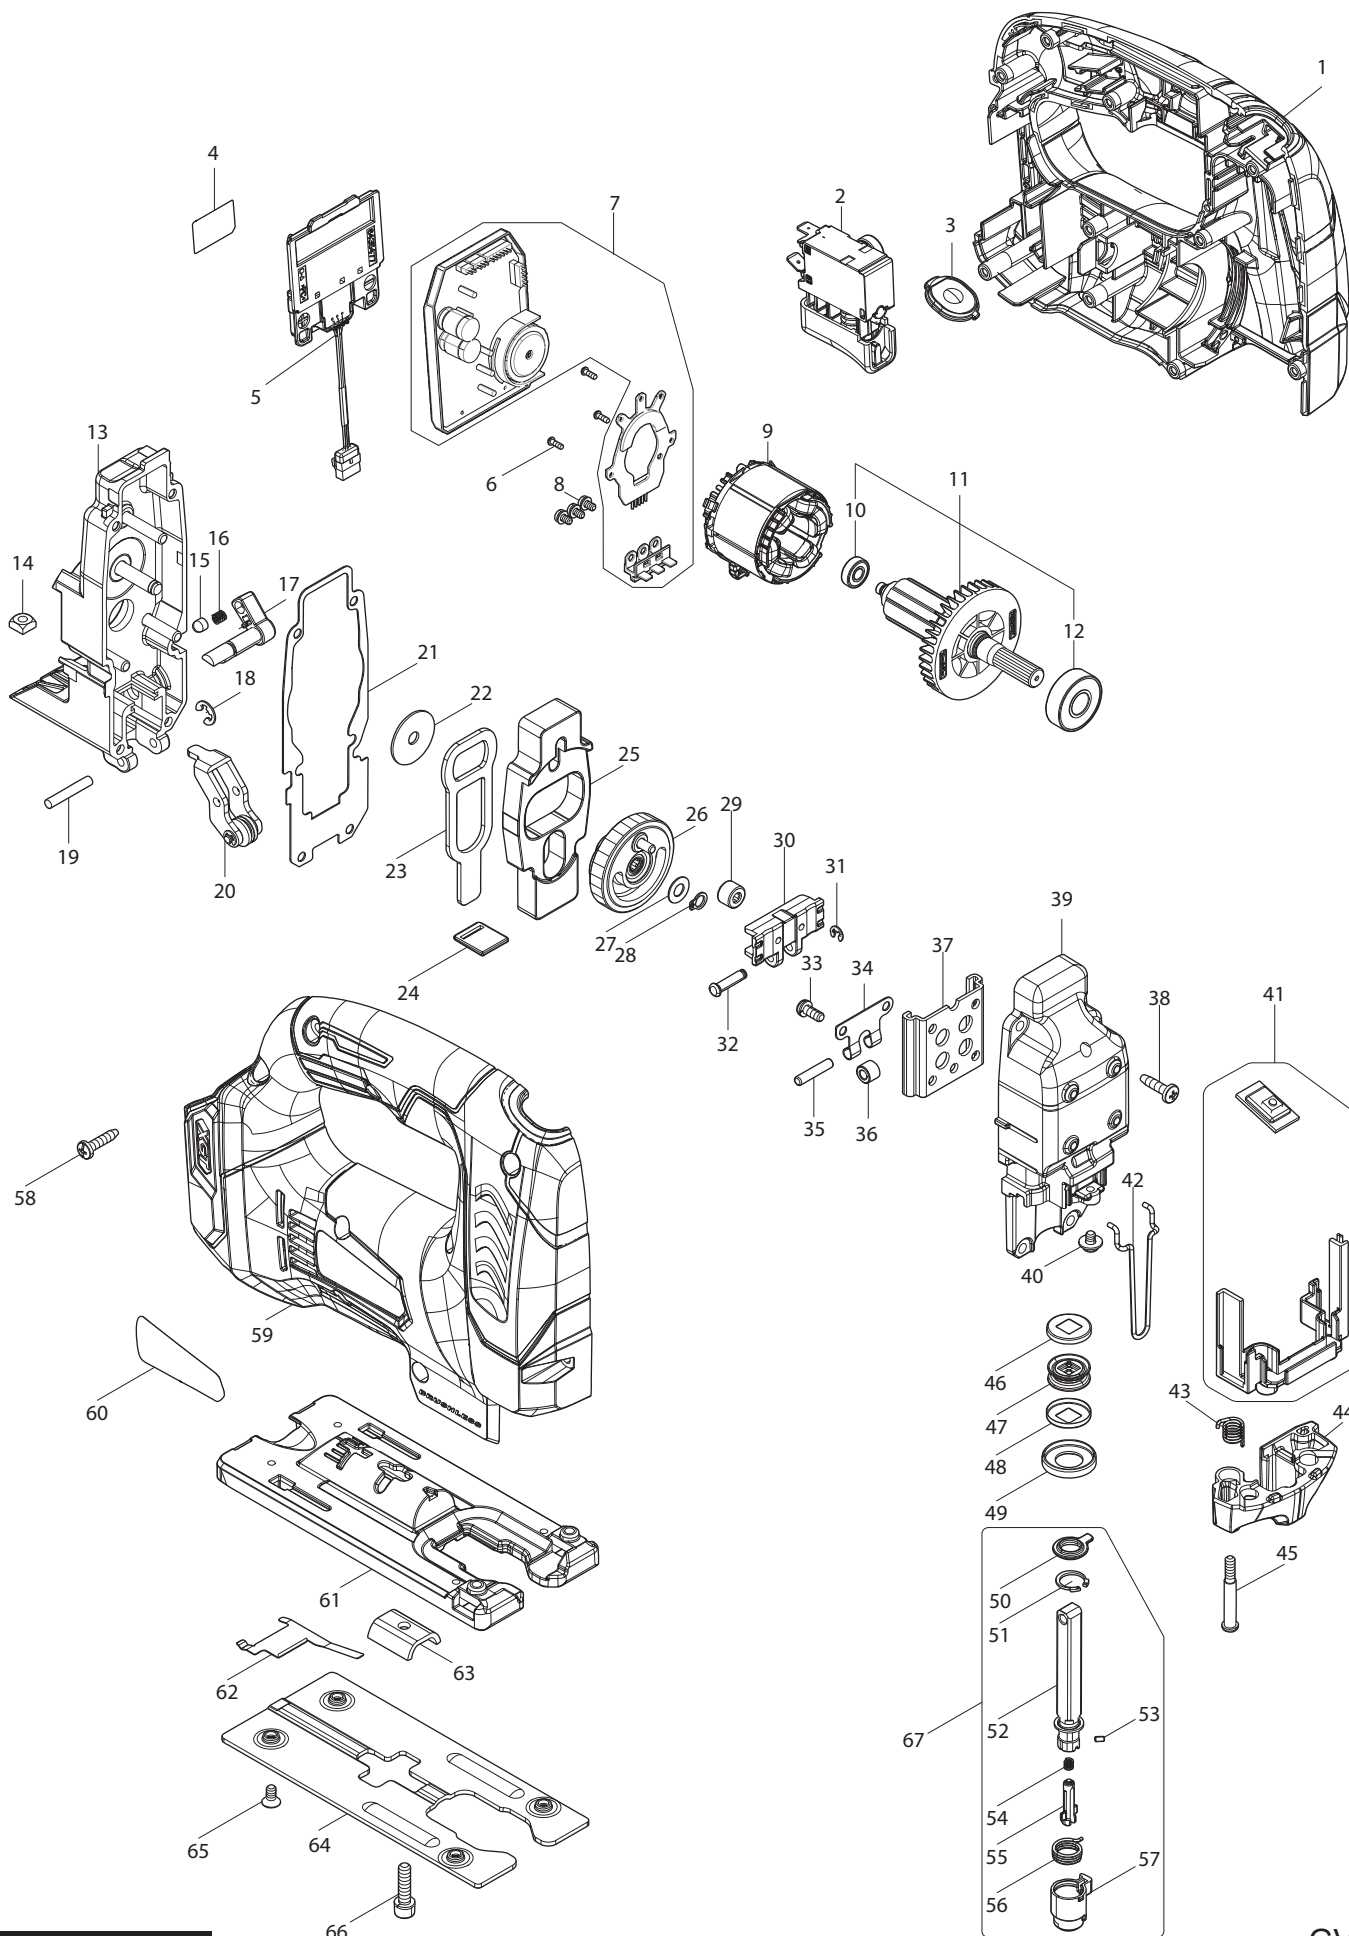

Model GVJ02Z Parts List

Item#	Part#	Description	Q'ty
001	1830E6-9	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2
	C20 8073C2-4	CAUTION LABEL	1
	D10	INC. 59	
002	650025-0	SWITCH C3JW-4B-2AL-R	1
003	141U73-1	SWITCH PLATE COMPLETE	1
004	8142W1-3	GVJ02 SERIAL NO. LABEL	1
005	632P64-8	TERMINAL UNIT	1
006	266490-9	TAPPING SCREW PT 2X6	3
007	620N14-3	CONTROLLER	1
008	652069-6	FLAT HEAD SCREW M3X6	3
009	629B64-3	STATOR	1
010	210039-7	BALL BEARING 695DDW	1
011	519769-0	ROTOR ASS'Y	1
	D10	INC. 10,12	
012	210059-1	BALL BEARING 6000DDW	1
013	142111-6	GEAR HOUSING COMPLETE	1
014	252171-1	SQUARE NUT M5-8	1
015	286032-3	CAP 5	1
016	233139-6	COMPRESSION SPRING 3	1
017	272280-0	LEVER 17	1
018	961018-5	STOP RING E-5	1
019	268063-4	PIN 4	1
020	142110-8	RETAINER COMPLETE	1
021	442195-7	GASKET	1
022	253196-8	FLAT WASHER 6	1
023	346688-5	PUSH PLATE	1
024	454484-8	SEAL PLATE	1
025	313260-8	BALANCE PLATE	1
026	142109-3	GEAR COMPLETE	1
027	253715-0	FLAT WASHER 6	1
028	961002-0	RETAINING RING S-6	1
029	212092-9	NEEDLE BEARING 407	1
030	310837-0	SLIDER	1
031	961017-7	STOP RING E-3	1
032	268090-1	PIN 4	1
033	911111-5	PAN HEAD SCREW M4X10 WITH W	4
034	232207-2	LEAF SPRING	1
035	256117-9	PIN 4	1
036	214031-5	PLANE BEARING 4	1
037	347B50-9	LINEAR GUIDE	1
038	266034-5	TAPPING SCREW CT 4X16	4
039	141R27-0	GEAR HOUSING COVER COMPLETE	1
040-1	265132-2	PAN HEAD SCREW M4X5	1
041	620N15-1	SWITCH UNIT	1
042	326302-9	SAFETY WIRE	1
043	231659-4	TORSION SPRING 6	1
044	454483-0	TOOL OPENER	1
045	265026-1	PAN HEAD SCREW M4	1
046	267854-0	CAP WASHER 8	1
047	421815-6	DUST SEAL 8	1

048	267854-0	CAP WASHER 8	1
049	257347-5	RING 21	1
050	424569-4	DUST COVER	1
051	962063-3	RETAINING RING R-13	1
052	165724-6	ROD	1
053	256528-8	PIN 2	1
054	233314-4	COMPRESSION SPRING 4	1
055	310485-5	LOCK PIN	1
056	233591-8	TORSION SPRING 10	1
057	310547-9	BLADE HOLDER	1
058	265995-6	TAPPING SCREW 4X18	10
059	1830E6-9	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2
	C20 8073C2-4	CAUTION LABEL	1
	D10	INC. 1	
060	8142V9-0	GVJ02 NAME PLATE	1
061	312D19-4	BASE	1
062	232208-0	LEAF SPRING	1
063	345237-5	CRANK PLATE	1
064	347A23-6	BASE PLATE	1
065	265085-5	COUNTERSUNK HEAD SCREW M4X8	4
066	922231-0	HEX. SOCKET HEAD BOLT M5X20	1
067	135602-4	ROD ASS'Y	1
	D10	INC. 50-57	
A01	122C71-6	DUST NOZZLE ASSEMBLY	1
	C10 213023-1	O RING 4	1
	C20 265772-6	THUMB SCREW M5X15	1
A02	413J99-0	COVER PLATE	1
A03	415524-7	ANTI-SPLINTERING DEVICE	1
A04	783202-0	HEX. WRENCH 4	1
A05	E-10687	JIG SAW BLADE SET	2