



Parts List for HT2000 Type 2

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	394262-00	COMP. SPRING	1
3	330019-04	SCREW,PLASTITE	14
4	607662-00	ARMATURE&FIELD	1
5	607662-00	ARMATURE&FIELD	1
6	394471-00	BAFFLE	1
7	380973-00	BEARING SUPPORT	1
8	387542-00	BRUSH	2
9	381817-01	BRUSH HOLDER	1
10	394261-00	LOCK BUTTON	1
11	158495-00	SCREW,TAPTITE	8
12	630509-00	ACTUATOR	1
13	157315-00	WASHER,SPRING	1
14	394263-00	SPRING	1
15	330019-09	SCREW	2
16	148902-00	WASHER,PLAIN	1
17	90541380	SWITCH	1
18	90518506	GEARCASE ASSY	1
19	90516433SV	GEAR ASSY	1
20	000000-00	No Longer Available	1
21	88782-00	SCREW	6
22	381980-00	NUT,STOP	6
23	071653-13	SPACER	6
24	133952-00	WASHER	1
25	330062-08	CORD&PLUG	1
26	330005-06	PROTECTOR CORD	1
27	137646-00	TERMINAL	2

Parts List for HT2000 Type 2

Item Number	Part Number	Description	Qty Required
28	397049-01	GUARD	1
29	90524359	BAIL HANDLE	1
30	000000-00	No Longer Available	1
31	604507-00	ID LABEL	1
32	397298-00	WARNING LABEL	1
33	148814-00	BEARING	1
34	46629-01	CONNECTOR	1
35	397589-00	WASHER	1
36	099384-04	LOCK WASHER	4
800	429698-00	GREASE:4 LB CAN	1