



Parts List for HT500-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	477276-00	ARMATURE ASSEMBLY	1
2	490823-00	FIELD ASSY.	1
3	479253-00	MICRO SWITCH	1
4	479254-00	MICRO SWITCH	1
5	479466-01	LEADWIRE	1
6	478456-01	CLAMSHELL SET	1
7	479871-00	SPRING	1
8	479370-01	ACTUATOR	1
9	477434-00	FRONT GUARD	1
10	806128	SPRING	1
11	477742-00	ROCKER	1
12	478984-01	TRIGGER	1
13	373883	TERMINAL BLOCK	1
14	770235	CORD PROTECTOR	1
15	330120-53	CORDSET	1
16	493568-00	AXLE	1
17	477917-00	SUPPORT PLATE	1
18	371954-01	BLADE BOLT	6
19	376614-01	SPACER	6
20	798755	NUT - FLANGE	6
22	477420-00	BLADE ASSEMBLY	1
23	747329	SCREW	9
24	477425-05	NAME PLATE	1
26	582761-00	BRUSH ASSEMBLY	2
27	490824-00	LEADWIRE ASSY.	2
28	574853-08	BEARING	2