

# HT516R

Item	Part No.	Description
1	181386	Cord Assembly
2	180836	Screw
3	180170	Bearing Strap
4	181387	Switch
5	180838	Lock Button
6	182388	Screw
7	181389	Logo Decal
8	181390	Housing Assembly
9	181391	Label
10	180169	Spring Washer
11	180842	Brush Assembly
12	181392	Brush Tube
13	180163	Washer
14	181393	Washer
15	180161	Sleeve Bearing
16	180843	Field Bearing
17	180844	Armature
18	180172	Sleeve Bearing
19	180173	Gear Housing w/Bearings (includes items 18 and 20)
20	180845	Sleeve Bearing
21	181395	Washer
22	180846	Gear Assembly
23	181396	Spacer
24	180180	Washer
25	181397	Blade Assembly
26	180185	Grease Cover
27	181398	Screw
28	181399	Screw
29	181400	Data Plate Decal
30	181401	Hang Tag
31	180174	Blade Seal
32	180179	Spring Washer

