




## Hydraulic Bottle Jacks

**JHJ-2** (stock no. 453301)

**JHJ-3** (stock no. 453303)

**JHJ-5** (stock no. 453305)

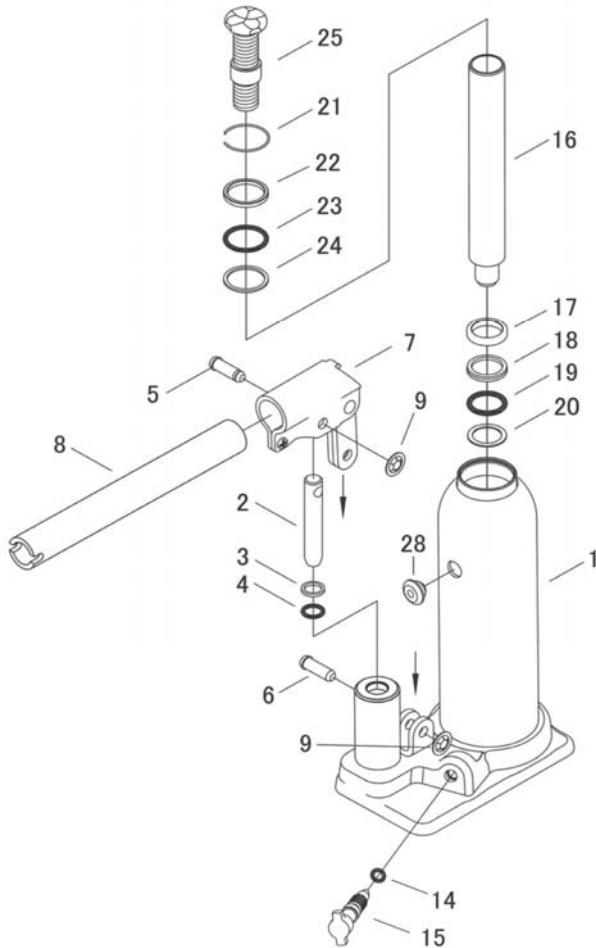

	<b>JHJ-2</b>	<b>JHJ-3</b>	<b>JHJ-5</b>
Rated capacity	2 ton	3 ton	5 ton
Minimum height (in.)	7-1/8	7-1/2	7-7/8
Piston height (in.)	4-1/2	4-1/2	4-5/8
Head screw (h/in.)	2	2-3/8	2-3/4
Maximum height (in.)	13-5/8	14-3/8	15-1/2
Base size (LxW/in.)	4-1/2 x 2-1/2	4-9/16 x 2-13/16	5-5/8 x 3-1/4
Weight (lbs)	5	6	9

**Part No. M-453301**

Revision G1 04/2014

### JET

a Division of JPW Industries, Inc.  
427 New Sanford Rd.  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
www.jettools.com

## JHJ-2

JHJ001-RK.....	Repair Kit
JHJ001-02.....	Pump Plunger
JHJ001-03*.....	Pump Backup Ring
JHJ001-04*.....	Pump Packing
JHJ001-05.....	Pump Plunger Pin
JHJ001-06.....	Pump Stay Pin (Ref JHJ001-05)
JHJ001-07.....	Handle Socket Assembly
JHJ001-08.....	Handle 2pc.
JHJ001-09.....	Pin Stopper Ring
JHJ001-14*.....	Release Packing (all sizes)
JHJ001-15.....	Release Assembly 1-7/8" (old)
JHJ001-15A.....	Release Assembly 2-1/4" (new)
JHJ001-16.....	Ram
JHJ001-17.....	Ram Packing Seat
JHJ001-18*.....	Ram Backup Ring
JHJ001-19*.....	Ram Packing
JHJ001-20.....	Ram Packing Stopper
JHJ001-21.....	Snap Ring
JHJ001-22.....	Stuffing Ring
JHJ001-23*.....	Cylinder Packing
JHJ001-24.....	Stopper Ring
JHJ001-25.....	Adjusting Screw Assembly
JHJ001-28*.....	Oil Plug (all sizes)

## JHJ-3

JHJ003-RK.....	Repair Kit
JHJ003-02.....	Pump Plunger (Ref JHJ001-02)
JHJ003-03*.....	Pump Backup Ring (Ref JHJ001-03)
JHJ003-04*.....	Pump Packing (Ref JHJ001-04)
JHJ003-05.....	Pump Plunger Pin (Ref JHJ001-05)
JHJ003-06.....	Pump Stay Pin (Ref JHJ001-05)
JHJ003-07.....	Handle Socket (Ref JHJ001-07)
JHJ003-08.....	Handle 2pc.
JHJ003-09.....	Pin Stopper Ring (Ref JHJ001-09)
JHJ003-14*.....	Release Packing (Ref JHJ001-14)
JHJ003-15.....	Release Assy Old (Ref JHJ001-15)
JHJ003-15A.....	Release Assy New (Ref JHJ001-15A)
JHJ003-16.....	Ram
JHJ003-17.....	Ram Packing Seat
JHJ003-18*.....	Ram Backup Ring
JHJ003-19*.....	Ram Packing
JHJ003-20.....	Ram Packing Stopper
JHJ003-21.....	Snap Ring
JHJ003-22.....	Stuffing Ring
JHJ003-23*.....	Cylinder Packing
JHJ003-24.....	Stopper Ring (Ref JHJ003-22)
JHJ003-25.....	Adjusting Screw Assembly
JHJ003-28*.....	Oil Plug (Ref JHJ001-28)

## JHJ-5

JHJ005-RK.....	Repair Kit
JHJ005-02.....	Pump Plunger
JHJ005-03*.....	Pump Backup Ring
JHJ005-04*.....	Pump Packing
JHJ005-05.....	Pump Plunger Pin
JHJ005-06.....	Pump Stay Pin (Ref JHJ005-05)
JHJ005-07.....	Handle Socket Assembly
JHJ005-08.....	Handle 3pc. (Ref JHJ003-08)
JHJ005-09.....	Pin Stopper Ring
JHJ005-14*.....	Release Packing (Ref JHJ001-14)
JHJ005-15.....	Release Assy Old (Ref JHJ001-15)
JHJ005-15A.....	Release Assy New (Ref JHJ001-15A)
JHJ005-16.....	Ram
JHJ005-17.....	Ram Packing Seat
JHJ005-18*.....	Ram Backup Ring
JHJ005-19*.....	Ram Packing
JHJ005-20.....	Ram Packing Stopper
JHJ005-21.....	Snap Ring
JHJ005-22.....	Stuffing Ring
JHJ005-23*.....	Cylinder Packing
JHJ005-24.....	Stopper Ring (Ref JHJ005-22)
JHJ005-25.....	Adjusting Screw Assembly
JHJ005-28*.....	Oil Plug (Ref JHJ001-28)

\* denotes part included in repair kit