



Parts List for LHT341 Type 1

Item Number	Part Number	Description	Qty Required
1	90565957	GUARD	1
2	5103541-00	SCREW	14
3	90626002	AUXILIARY HANDLE	1
5	90597573-03	BLADE & GEAR	1
6	90628613	WARNING LABEL	1
7	90570808	SUPPORT PLATE	1
8	90527921	BOLT	2
9	376614-01	SPACER	1
11	098022-16	SCREW	8
12	148641-00	NUT,LOCK	8
14	90566914	SCREW	2
17	90564147	GEARBOX ASSY	1
18	90568498	PLATE	1
19	90577627	SCREW	2
20	90628611	NAME PLATE	1
866	LBX1540	BATTERY PACK	1
871	90616337	CHARGER	1