



Parts List for LP1000-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	477791-01	ARMATURE ASSY.	1
2	588660-01	FIELD ASSY.	1
3	496839-00	BRUSH ASSEMBLY	2
4	330003-04	BEARING,BALL	1
5	330015-01	NUT,HEX	3
6	477790-00	GEAR ASSY.	1
7	477789-00	GEAR CASE COVER	1
8	588853-00	BOLT	2
9	589043-00	END CAP	1
10	478846-00	MOTOR HOUSING ASSY.	1
12	809961-00	SCREW	25
13	492209-00	LABEL	1
15	587577-00	COVER, TOP	1
16	587578-00	BAR	1
17	587587-00	JAW	1
18	590089-00	COVER	1
19	477344-00	LOCKNUT,M5	3
20	098120-16	SCREW	3
21	587580-00	SPROCKET	1
22	588088-00	GEAR	1
24	590443-00	CLAMSHELL SET	1
25	590340-00	COVER	1
26	477134-00	OIL FILLER CAP	1
27	588830-00	SPRING	2
28	588405-00	CLAMP	1
29	588034-00	ACTUATOR	2
31	806128	SPRING	4

Parts List for LP1000-B2 Type 1

Item Number	Part Number	Description	Qty Required
32	479454-00	CAPACITOR	1
33	588037-01	SWITCH	1
34	373883	TERMINAL BLOCK	1
35	821057	PAN HEAD SCREW	4
36	329301-00	CLAMP,CORD	1
37	770235	CORD PROTECTOR	1
38	330120-55	CORD SET	1
39	389118-01	FLANGE NUT	2
40	588213-00	CLAMP BAR	1
41	590444-00	CLAMSHELL SET	1
42	98120-35	SCREW	2
43	588711-00	PLATE	2
44	589042-00	SPRING	1
45	588367-00	SPRING	1
46	479786-10	LABEL	1
47	479787-05	LABEL	1
48	588087-00	CHAIN COVER	1
49	98119-16	SCREW, M4X16	3
51	479788-00	LABEL	1
52	478363-04	LABEL	1
53	588739-00	SEAL	1
54	588740-00	LEADWIRE	1
55	588740-01	LEADWIRE	1
56	90524942	OIL,BOTTLE	1
57	098123-25	SCREW	1
58	370023	NUT	1
59	477925-00	BUMPER	1

Parts List for LP1000-B2 Type 1

Item Number	Part Number	Description	Qty Required
62	489327-02	LABEL	1
63	590439-00	TOOL	1
64	490779-00	SPACER	2
65	490871-00	SPECIAL SCREW	1
800	870889-03	GREASE	1