
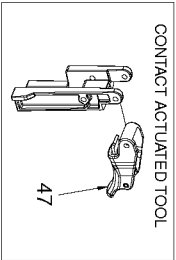
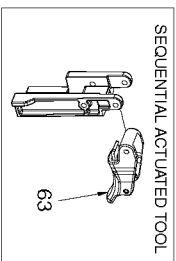
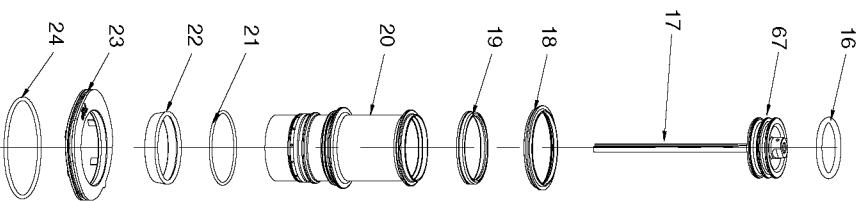


# N88WWB

**PNEUMATIC STICK NAILERS**  
**CLAVADORA NEUMÁTICA ALIMENTADA POR BARRA**  
**CLOUEUR PNEUMATIQUE EN BANDES**

125-140 IN LBS.  
OF TORQUE  
(144-161 CM-KG)

125-140 IN LBS.  
OF TORQUE  
(144-161 CM-KG)

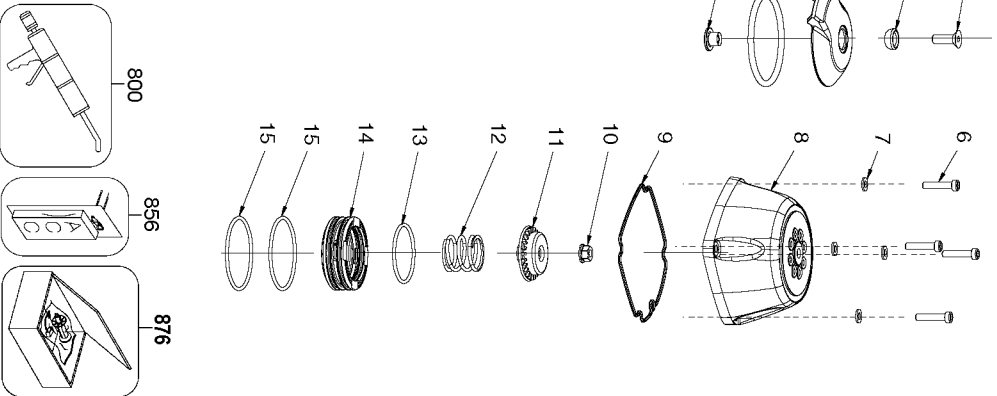

30-45 IN LBS.  
OF TORQUE  
(32-52 CM-KG)

300-330 IN LBS.  
OF TORQUE  
(346-380 CM-KG)

105-120 IN LBS.  
OF TORQUE  
(121-138 CM-KG)



6-10 IN LBS.  
OF TORQUE  
(7-12 CM-KG)

60-70 IN LBS.  
OF TORQUE  
(69-81 CM-KG)

30-45 IN LBS.  
OF TORQUE  
(35-52 CM-KG)

50-60 IN LBS.  
OF TORQUE  
(58-69 CM-KG)

12-15 IN LBS.  
OF TORQUE  
(32-52 CM-KG)

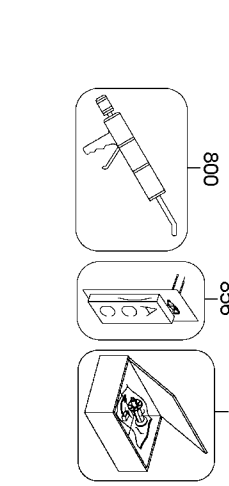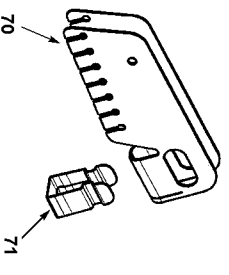

## Parts List for N88WWB Type 0

Item Number	Part Number	Description	Qty Required
1	MSF8125-25	SCREW-SFHCS M8 X 1.2	1
2	89673	O-RING	1
2	108555	MOUNT-SHOCK	1
3	112633	COVER-EXHAUST	1
4	116961	SEAL-COVER EXHAUST	1
5	108418	SPACER-COVER EXHAUST	1
6	MSC6100-30	SCREW-SHCS-M6X1.00X3	4
7	MPW6.3	WASHER-PWN M6	5
8	108559	CAP-MACHINING	1
9	108416	SEAL-FRAME	1
10	103859	NUT-HFN-M8X1.25	1
11	107236	BUMPER-PISTON STOP	1
12	107235	SPRING-COMPRESSION	1
13	112635	O-RING-1.988X.118	1
14	107234	HEAD VALVE	1
15	107658	O-RING-2.512X.118	2
16	851606-S	O-RING-1.850X.210	1
17	108721	ASSEMBLY-PISTON/DRIV	1
18	107142	RETAINER	1
19	107141	SEAL-CYLINDER SLEEVE	1
20	144625	SLEEVE-CYLINDER	1
22	175520	SEAL-CHECK	1
23	108563	RING-CYLINDER SLEEVE	1
24	108718	O-RING-3.484X.139	1
25	MHE3050-100	NUT-NYLON M3X.50	1
26	000000-00	No Longer Available	1
26	000000-00	No Longer Available	1

## Parts List for N88WWB Type 0

Item Number	Part Number	Description	Qty Required
27	107231	BUMPER-DRIVE	1
28	000000-00	No Longer Available	1
29	MSC4070-12	SCREW-SHCS-M4X0.70X1	1
30	112632	BUSHING-TRIP COVER	1
31	112628	COVER-TRIP	1
32	121472	SPACER-PUSHER LATCH	1
33	120875	LATCH-PUSHER	1
34	108228	ARM-UPPER CONTACT	1
35	116970	SPRING-CONTACT ARM	1
36	108224	CASTING-HOUSING CONT	1
37	121072	ASSEMBLY-TRIP FOOT	1
38	MSC8125-28	SCREW-SHCS M8X28	4
39	108227	ARM-LOWER CONTACT	1
40	108225	CASTING-PLUNGER	1
41	115230	SPRING-HOUSING	1
42	115143	SPRING-CONSTANT FORC	1
43	107134	NOSE	1
45	TVA11	KIT-TRIGGER VALVE	1
46	000000-00	No Longer Available	1
47	CNTK1	KIT-CONTACT TRIP CON	1
48	108562	SCREW-TRIGGER PIVOT	2
49	100298	PIN-SPIRAL M3X30	1
50	112733	PROTECTOR-FRAME	2
51	MPP030020	PIN-SPIRAL M3X20MM	1
52	MSC6100-25	SCREW-SHCS-M6X1.00X2	1
53	108560	SEAL-END CAP	1
54	108722	CAP-END	1

## Parts List for N88WWB Type 0

Item Number	Part Number	Description	Qty Required
55	T50118	WASHER-PLAIN	4
56	MSC5080-20	SCREW-SOC HD. CAP M5	4
57	159718	LINER-NAIL GUIDE-N88	1
58	MSC5080-6	SCREW-SHCS-M5X0.80X6	1
59	158766	MAGAZINE-N88WWB	1
60	116563	CAP END-MAGAZINE	1
61	149747	NUT-TEE	1
62	120878	SPRING- PUSHER LATCH	1
63	SEQ4	KIT	1
64	158612	LABEL-WARNING	1
65	112768	LABEL-N88WW	1
66	112769	LABEL-N88WW FASTENER	1
67	107232	PISTON-MAIN	1
69	116965	WASHER-PLAIN M5	1
70	112630	SHIELD-DUST	1
71	112631	SPRING-CLIP	1
72	121407	PIN-SPECIAL	1
73	100261	SCREW	1
74	MPW4	WASHER-PWN-M4	1
75	MHE4070-100	ELASTIC STOP NUT-M4	1
76	120945	HANDLE-PUSHER	1
77	100209	SCREW	2
78	89013	O-RING	1
80	158767	PUSHER-WW	1
800	100653	LUBE (2CC)	1
800	100679	LUBE (1LB.CAN)	1
876	N88ORK	REPAIR KIT	1