


**RYOBI**  
**18 VOLT BRUSHLESS HAMMER DRILL**  
**MODEL NUMBER P251**  
**REPAIR SHEET**

**ONE WORLD TECHNOLOGIES, INC.**

1428 Pearman Dairy Road, Anderson, SC 29625 • Phone 1-800-525-2579  
États-Unis, Téléphone 1-800-525-2579 • USA, Teléfono 1-800-525-2579

**[www.ryobitools.com](http://www.ryobitools.com)**

RYOBI 18 VOLT BRUSHLESS HAMMER DRILL – MODEL NUMBER P251

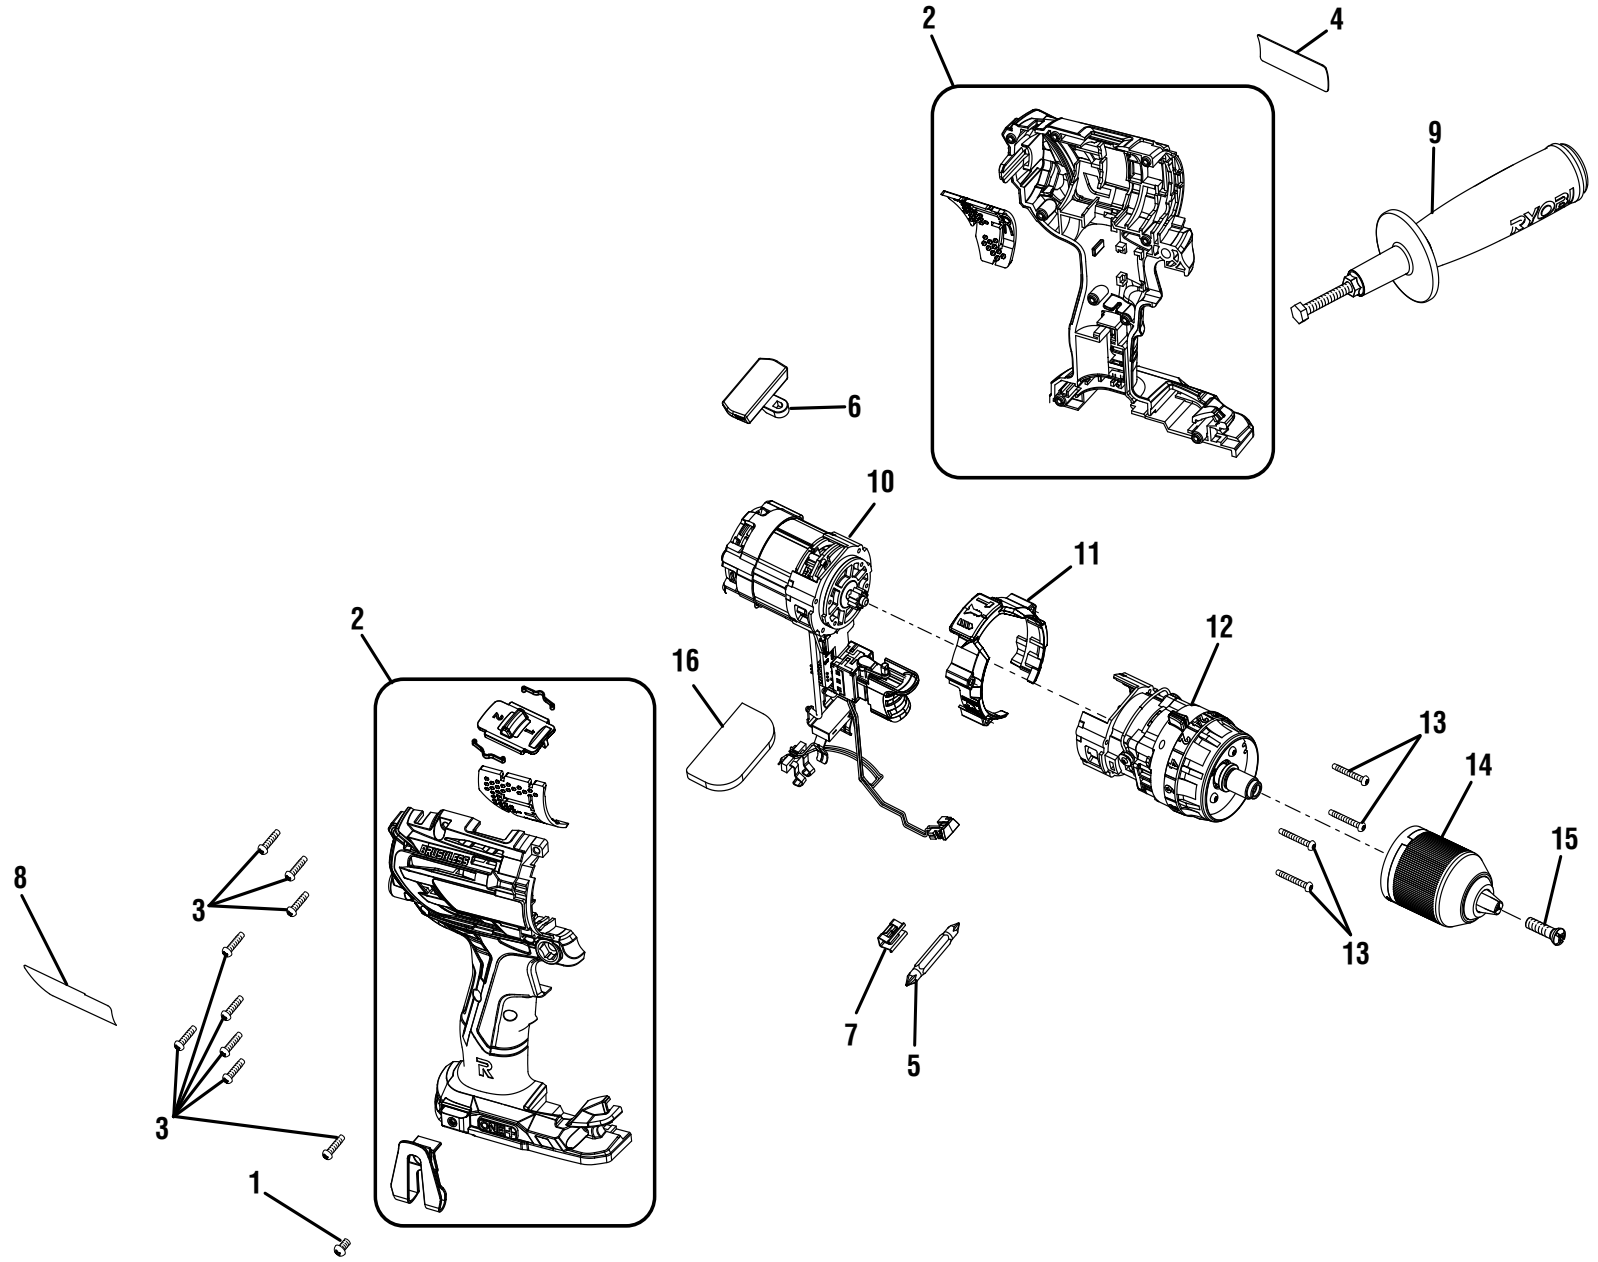


## RYOBI 18 VOLT BRUSHLESS HAMMER DRILL – MODEL NUMBER P251

The model number will be found on data label attached to the motor housing. Always mention the model number in all correspondence regarding your **HAMMER DRILL** or when ordering repair parts.

### PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	660212057	Screw (M4 x 7 mm, Pan Hd.).....	1	10	206584001	Motor, Circuit Board and Switch Assembly.....	1
2	204406003	Housing Assembly Kit.....	1	11	351572001	Trim Ring.....	1
3	660206069	Screw (M3.5 x 14 mm, Pan Hd. S.T.).....	9	12	206585001	Gear Box Assembly.....	1
4	940114178	Logo Label.....	1	13	660187009	Screw (M3 x 22 mm, T10 Torx Pan Hd.).....	4
5	670820045	Double Ended Bit (#2 Philips Head/#6 Slotted x 50 mm).....	1	14	670764003	Chuck.....	1
6	531565001	Forward/Reverse Button.....	1	15	660134006	Screw (M6 x 18 mm, Pan Hd. Left Hand Threads).....	1
7	630206007	Bit Clip.....	1	16	303001015	Magnet (56 x 30 x 5 mm).....	1
8	941121859	Data Label.....	1	<b>Not Shown:</b>			
9	204407001	Auxiliary Handle Assembly.....	1		991000927	Operator's Manual (961152643)	
					11-28-17 (Rev:04)		

RYOBI 18 VOLT BRUSHLESS HAMMER DRILL – MODEL NUMBER P251

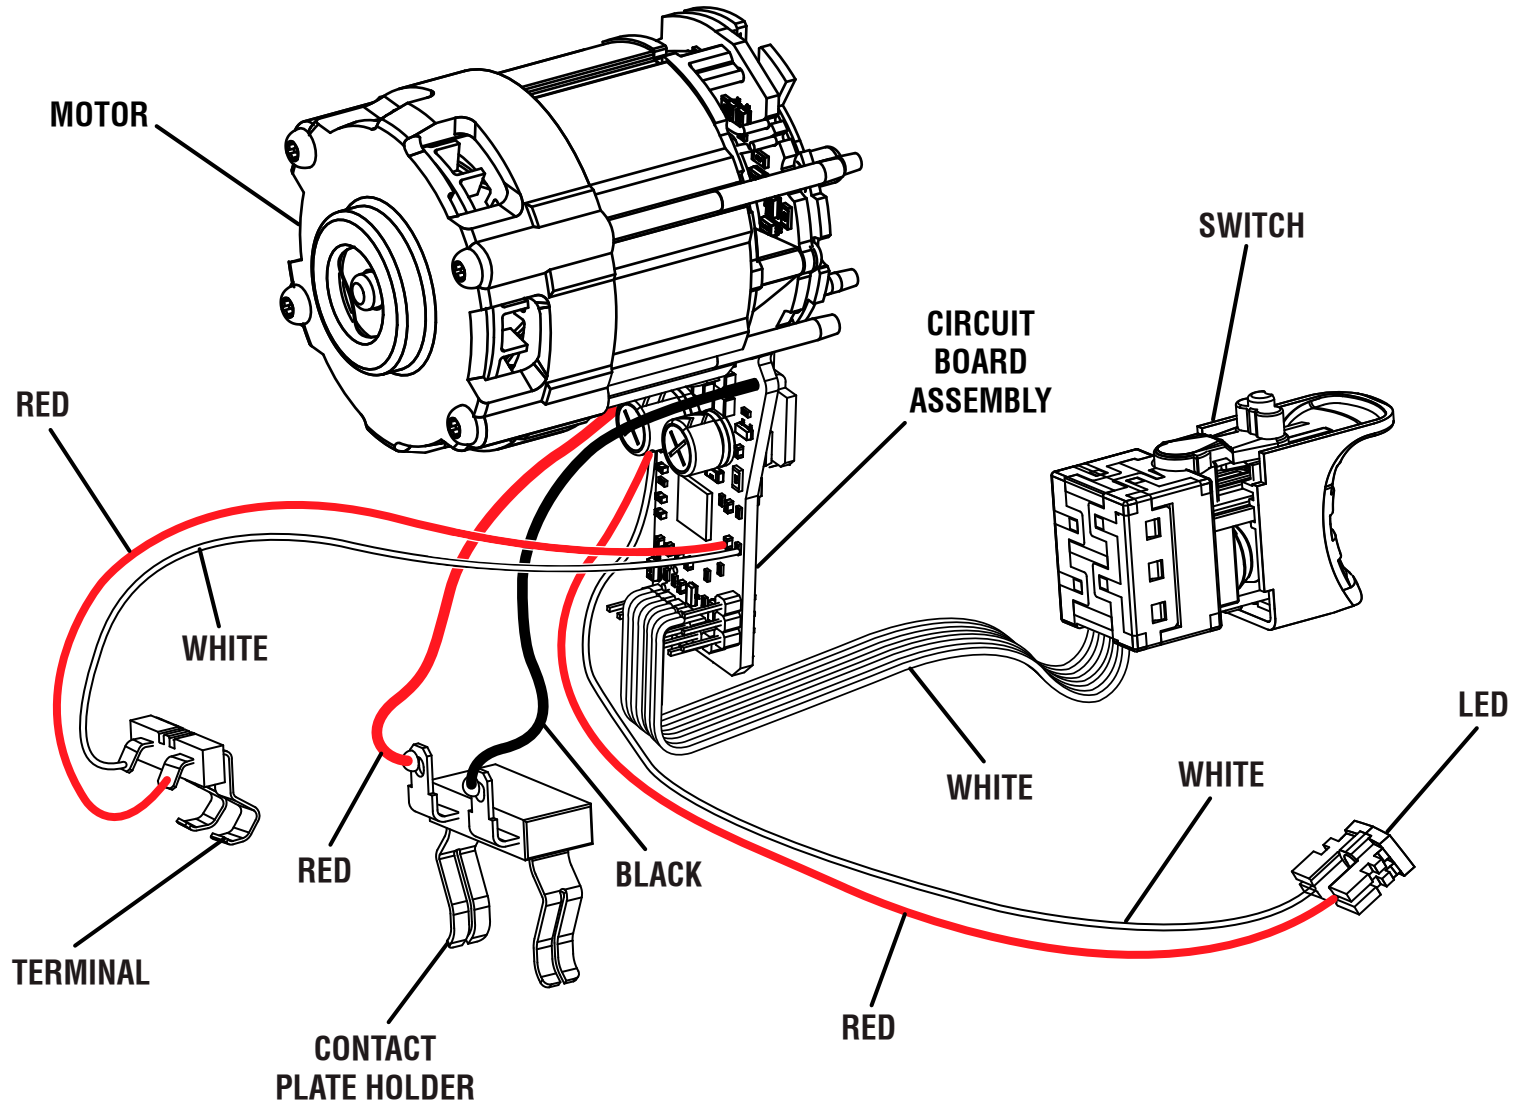

WIRING DIAGRAM