


**RYOBI**  
**18 VOLT FLOATING SPEAKER/LIGHT SHOW**  
**MODEL NO. P3520**  
**REPAIR SHEET**

**ONE WORLD TECHNOLOGIES, INC.**

1428 Pearman Dairy Road, Anderson, SC 29625 • Phone 1-800-525-2579

[www.ryobitools.com](http://www.ryobitools.com)

RYOBI 18 VOLT FLOATING SPEAKER/LIGHT SHOW - MODEL NUMBER P3520

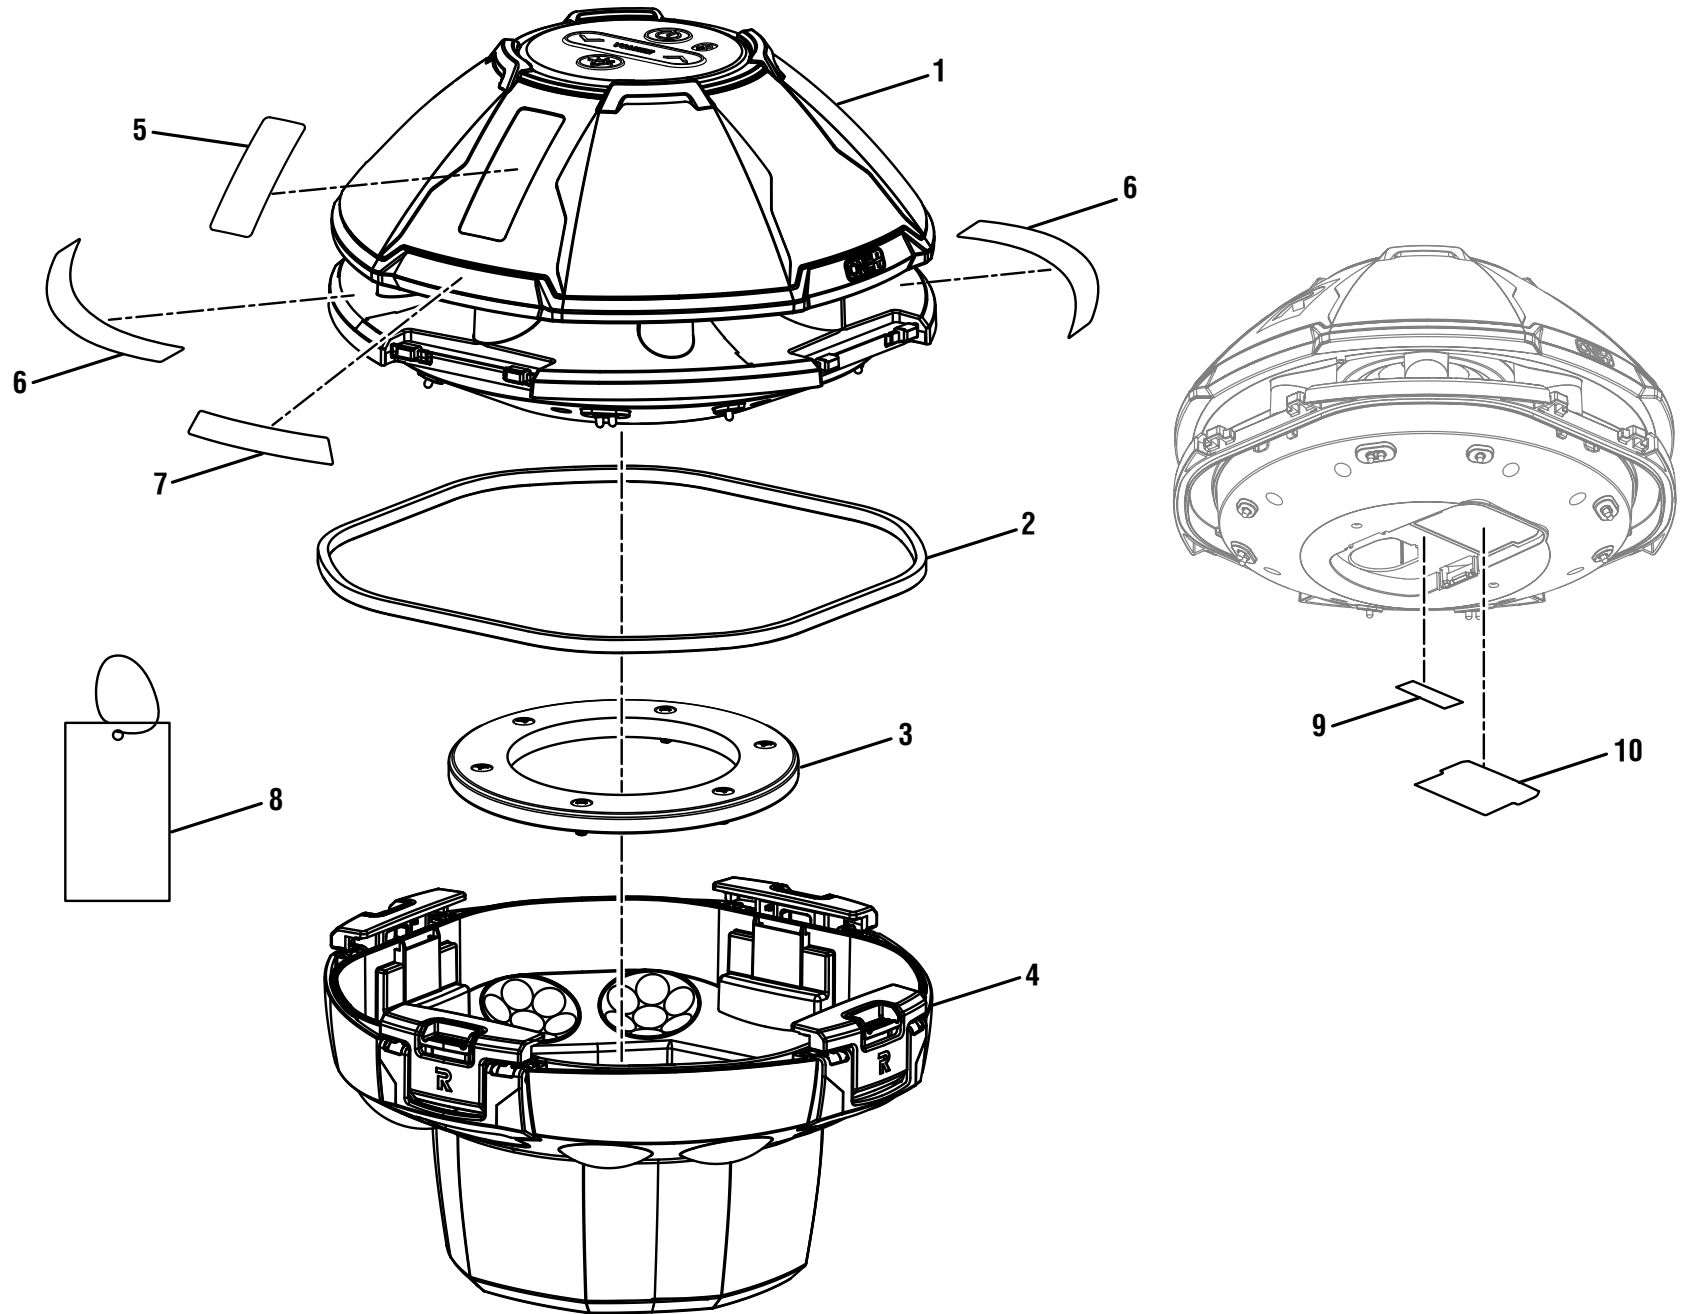

## RYOBI 18 VOLT FLOATING SPEAKER/LIGHT SHOW – MODEL NUMBER P3520

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **STICK VACUUM** or when ordering parts.

### PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	019752001111	Upper Assembly.....	1
2	019752001008	Gasket.....	1
3	019752001109	Counter Ballast Assembly.....	1
4	019752001112	Lower Assembly.....	1
5	940114531	Ryobi Logo Label.....	1
6	941120353	Latches Warning Label.....	2
7	940114532	Bluetooth Label.....	2
8	918006020	Instruction Hangtag.....	1
9	941120352	Battery Use Warning Label.....	1
10	941488289	Data Label.....	1
	<b>Not Shown:</b>		
	995000382	Operator's Manual	
	1-25-18		
	(Rev:01)		