


RYOBI 18 VOLT CORDLESS CIRCULAR SAW MODEL NUMBER P501

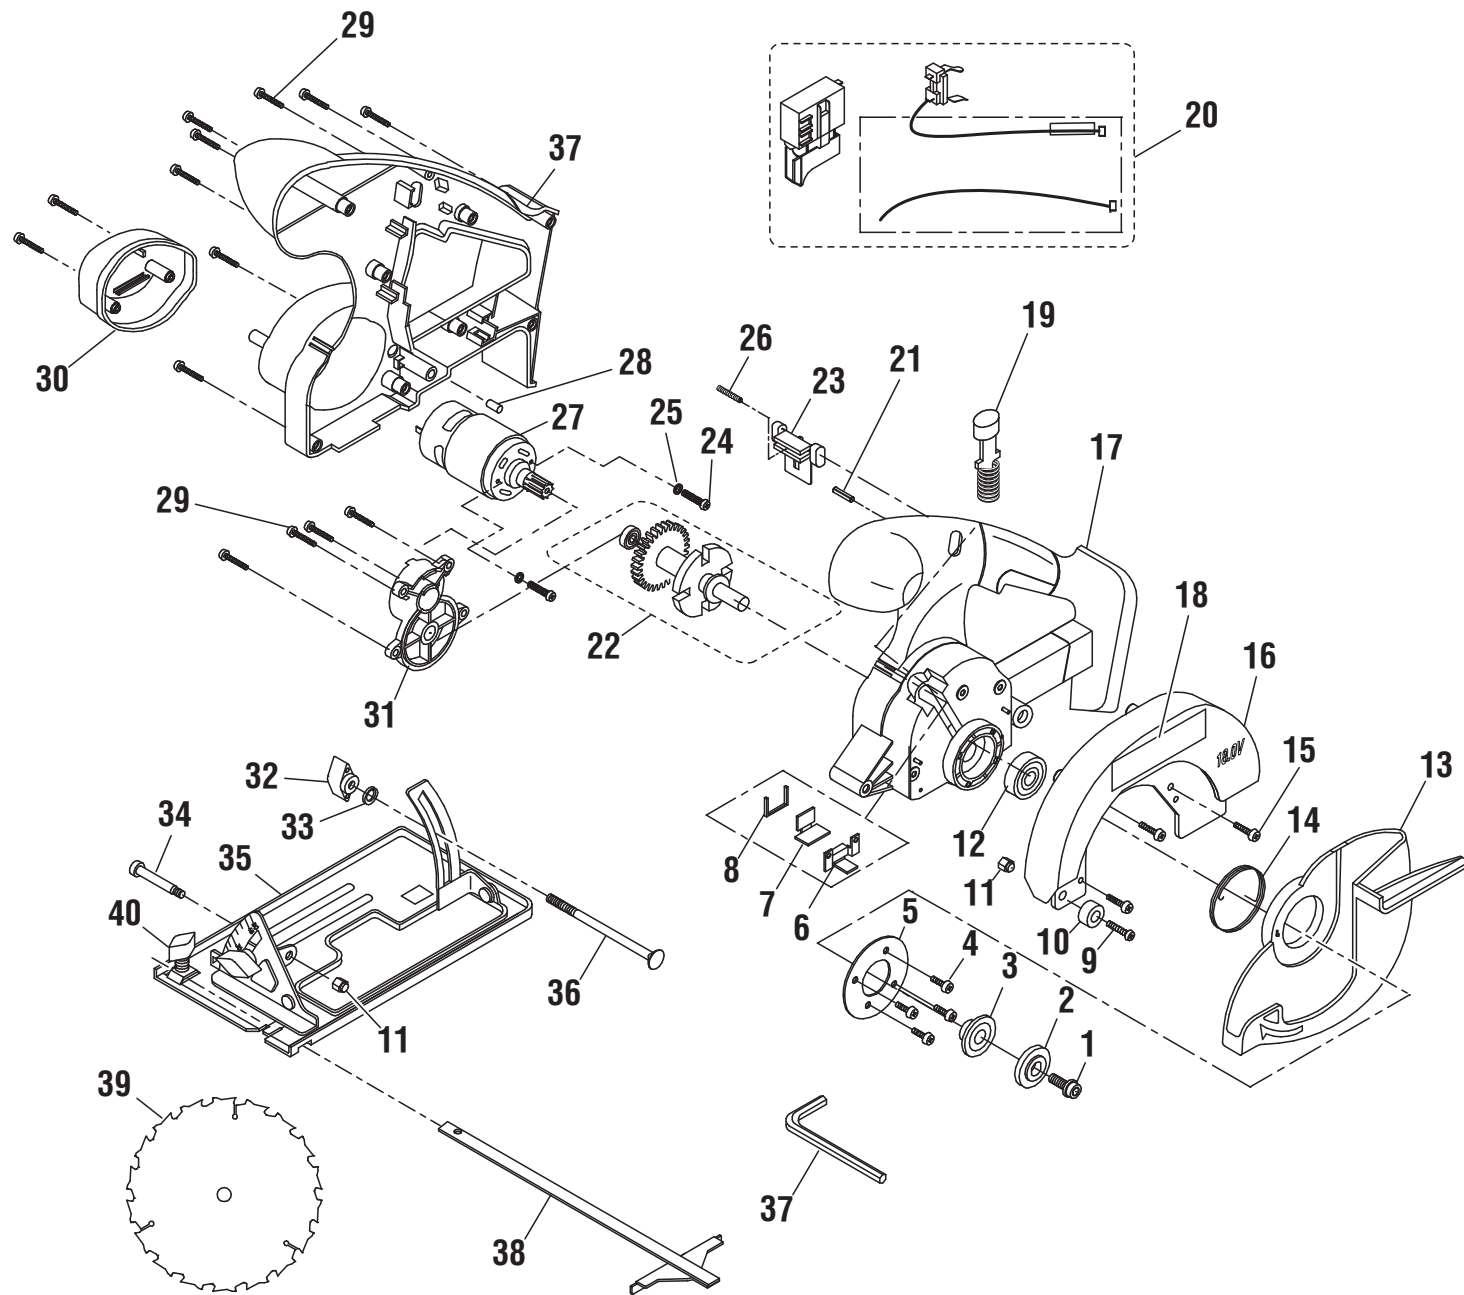

RYOBI 18 VOLT CORDLESS CIRCULAR SAW MODEL NUMBER P501

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **CORDLESS CIRCULAR SAW** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	6614401	Screw (M6 x 16 mm, LH).....	1	25	6703001	Spring Washer.....	2
2	6112101	Outer Blade Washer.....	1	26	6799802	Spring.....	1
3	6112004	Inner Blade Washer.....	1	27	2303328	Motor Assembly.....	1
4	6600506	Screw.....	4	28	5621901	Contact Plate Stopper.....	1
5	6850303	Bearing Retainer.....	1	29	6620803	Screw (M4 x 22 mm, Pan Hd.).....	14
6	6322602	Covering Plate.....	1	30	5314909	End Cap.....	1
7	9030308	Sealing Pad.....	1	31	3020811	Gear Casing Assembly.....	1
8	631030001	Cover Plate.....	1	32	520245010	Knob.....	1
9	6619302	Screw (M5 x 15.5 mm, Pan Hd.).....	1	33	5228001	Washer.....	1
10	5217802	Bumper.....	1	34	6614501	Screw (M5 x 40 mm).....	1
11	6797401	Lock Nut (M5).....	2	35	3025507	Base Assembly.....	1
12	6807001	Ball Bearing (6000zz).....	1	36	6614301	Bolt.....	1
13	5599404	Lower Blade Guard.....	1	37	6800201	Hex key (M5).....	1
14	6867201	Torsion Spring.....	1	38	6795708	Edge Guide.....	1
15	660205011	Screw (M3 x 14 mm).....	3	39	6797329	Blade.....	1
16	6456803	Upper Guard.....	1	40	520177001	Edge Guide Knob.....	1
17	200202299	Housing Assembly w/Label.....	1	Not Shown:			
18	940272007	Logo Plate.....	2	940299619	Warning Label.....	1	
19	303826002	Shaft Lock.....	1	940241012	Handle Warning Label.....	1	
20	270017041	Switch Assembly.....	1	940271025	Data Label.....	1	
21	6763101	Spring Pin.....	1	1423701	Charger.....	1	
22	3000339	Output Shaft Assembly.....	1	130224028	Battery.....	1	
23	520173015	Safety Knob.....	1	983000575	Operator's Manual		
24	6621204	Screw (M4 x 16 mm, Pan Hd.).....	2	8-16-11			
				(REV:04)			