


RYOBI 18 VOLT RECIPROCATING SAW - MODEL NUMBER P513

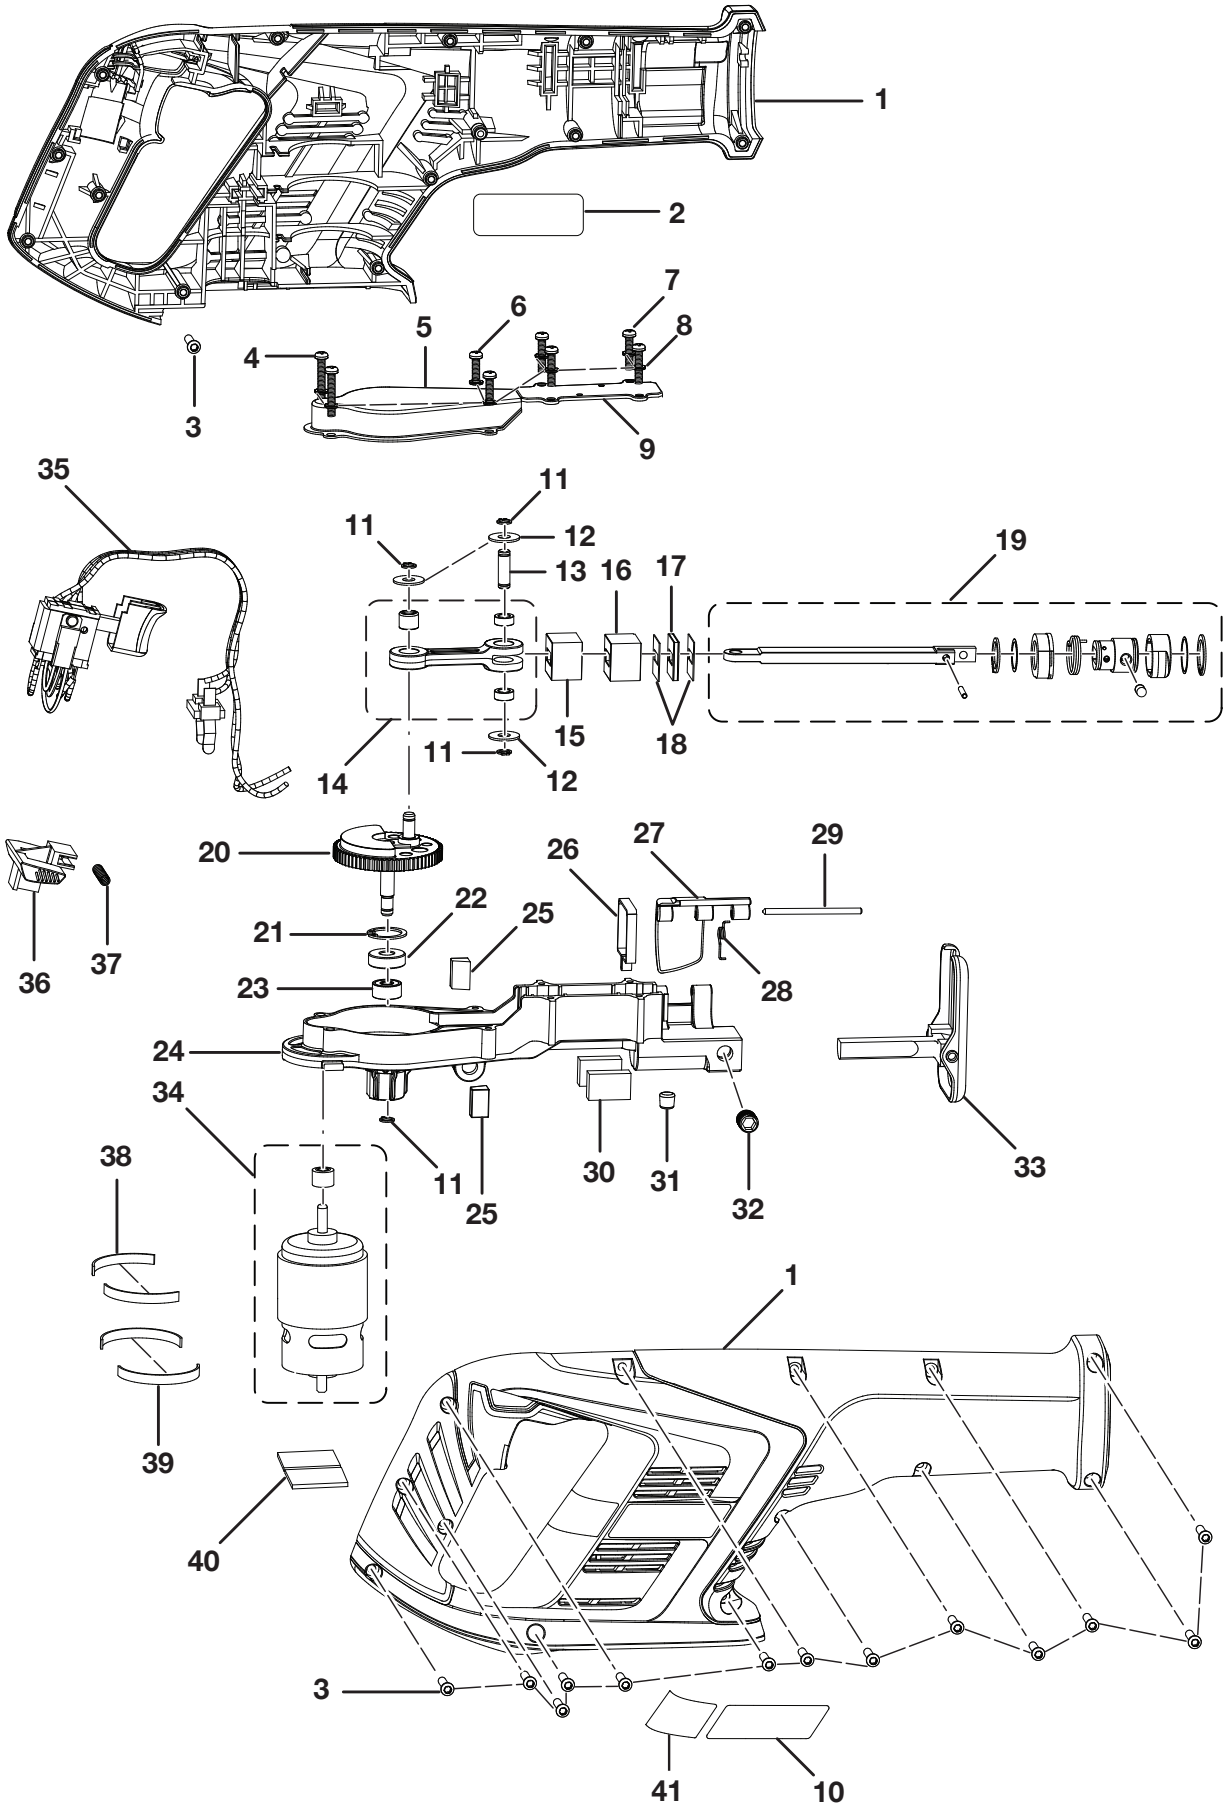

RYOBI 18 VOLT RECIPROCATING SAW – MODEL NUMBER P513

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **RECIPROCATING SAW** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	200117014	Housing Assembly	1
2	940114180	Logo Label	1
3	660024044	Screw (M4 x 16 mm)	14
4	660212050	Screw (M4 x 28 mm)	2
5	633373001	Gear Case Cover	1
6	660212049	Screw (M4 x 12 mm)	2
7	660165007	Screw (M4 x 16 mm)	4
8	670030004	Spring Washer	8
9	633372001	Sliding Rod Cover	1
10	940045145	Data Label	1
11	6770401	Retaining Ring	4
12	690915019	Washer	3
13	681081002	Pin	1
14	300592007	Connecting Rod Assembly	1
15	672355003	Sliding Bushing	1
16	672353003	Front Sliding Bushing	1
17	901512001	Fiber Sheet	1
18	631080002	Clip Plate	2
19	300309029	Sliding Rod and Blade Clamp Assembly	1
20	300308037	Gear Assembly	1
21	6902501	Retaining Ring	1
22	680999011	Ball Bearing (607-2z)	1
23	6899902	Ball Bearing (696-2z)	1
24	681140002	Gear Box	1
25	560723003	Rubber Pad (Wedge)	2
26	561319001	Foam Rubber	1
27	302152001	Lever Assembly	1
28	690475004	Torsion Spring	1
29	690476005	Pin	1
30	5670301	Rubber Bumper	2
31	5670401	Rubber Bumper	1
32	660170001	Screw (M10 x 10 mm Hex.)	1
33	300216041	Shoe Assembly	1
34	230164002	Motor Assembly	1
35	270001341	Switch Assembly	1
36	516334001	Safety Button	1
37	6799802	Spring	1
38	561320003	Foam Rubber	2
39	561320004	Foam Rubber	2
40	561980001	Foam Rubber	1
41	940230169	Warning Label	1
	Not Shown		
	690292006	Metal Cutting Blade	1
	690291006	Wood Cutting Blade	1
	987000175	Operator's Manual (960931261)	
	10-25-11		
	(REV:04)		