


RYOBI 18 VOLT JIG SAW - MODEL NUMBER P522

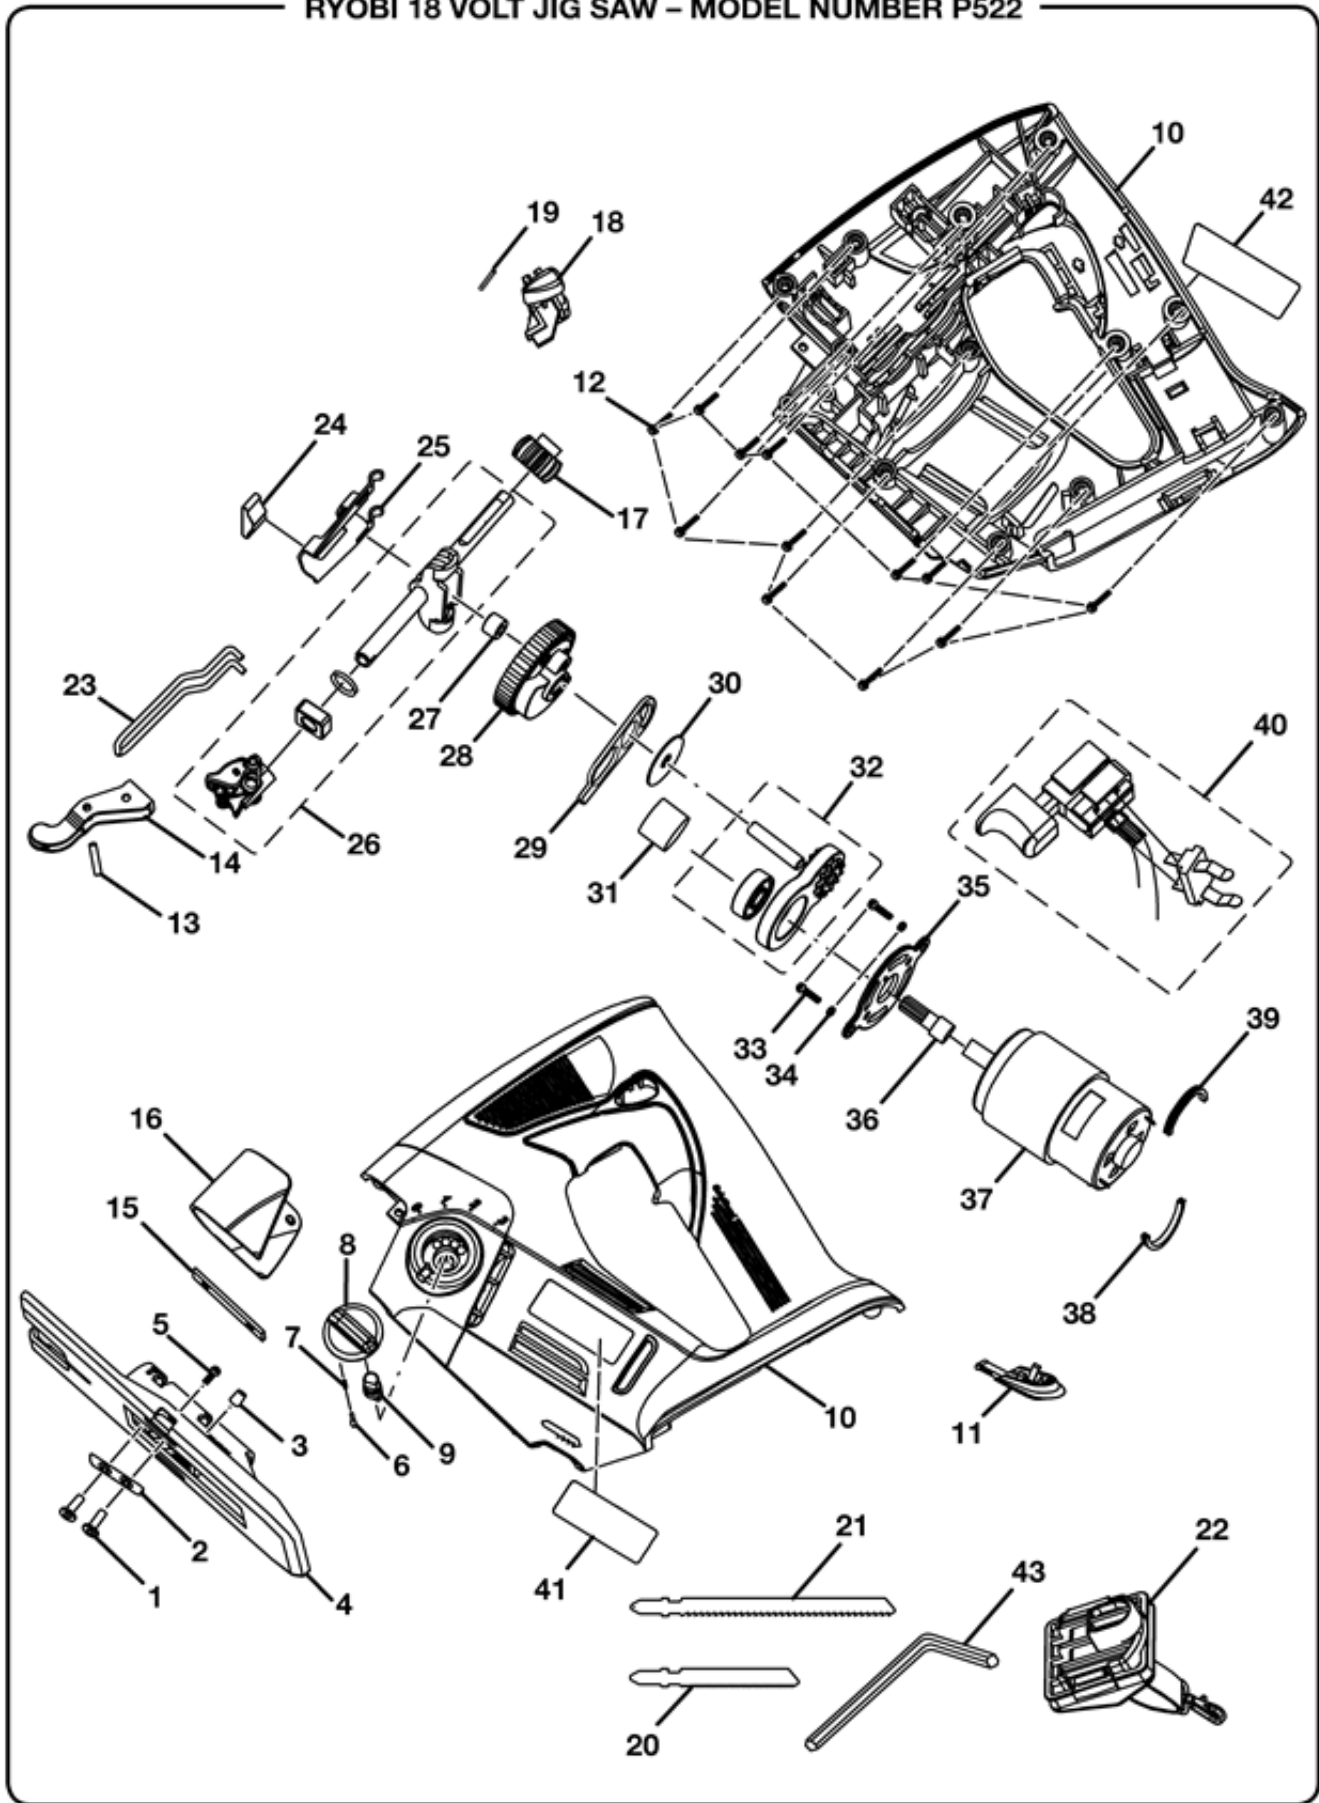

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	660302002	SCREW (10-24 X 1/2 in)	2	(Purchase locally)	
2	630847003	CLAMP PLATE	1		
3	550432001	RUBBER TUBE	1		
4	631737001	BASE	1		
5	660302001	SCREW (10-24 X 3/8 in)	1	(Purchase locally)	
6	550424002	DETENT BUTTON	1		
7	680909001	SPRING	1		
8	380042001	ORBITAL KNOB	1		
9	680910004	ROD	1		
10	200202474	HOUSING ASSEMBLY	1		
11	514047001	BLADE DOOR	1		
12	6620805	SCREW (M4 X 16 mm)	12	(Purchase locally)	
13	680906003	PIN	1		
14	300577025	BLADE GUIDE ASSEMBLY	1		
15	630848002	STRIP NUT	1		
16	514495001	TRANSPARENT COVER	1		
17	300306017	HEAT SINK ASSEMBLY	1		
18	514045001	SAFETY BUTTON	1		
19	670998004	SPRING	1		
20	690227036	CUT-METAL BLADE	1		
21	690227035	CUT-WOOD BLADE	1		
22	200292003	PLUG IN LANYARD	1		
23	681046001	METAL WIRE (BLADE GUARD)	1		
24	630849001	RETURN SPRING	1		
25	630845003	SLIDE GUIDE PLATE	1		
26	301007004	QUICK CLAMP BLADE ASSEMBLY	1		
27	300019002	BUSHING ASSEMBLY W/BEARING	1		
28	220016102	GEAR ASSEMBLY	1		
29	630843002	DRIVE PLATE	1		
30	630844001	WASHER	1		
31	671112001	SLEEVE	1		
32	300477004	BEARING BLOCK ASSEMBLY W/BEARING	1		
33	660212001	SCREW (M4 X 6 mm)	2	(Purchase locally)	

34	6703001	SPRING WASHER	2
35	630193002	MOUNTING PLATE	1
36	610377002	PINION	1
37	740527001	MOTOR	1
38	570263001	RUBBER CUSHION	1
39	570264001	RUBBER CUSHION	1
40	270001160	SWITCH ASSEMBLY	1
41	940054127	LOGO LABEL	1
42	940003472	DATA LABEL	1
43	680907001	HEX KEY (1/8 in)	1
	983000943	OPERATOR'S MANUAL	
	983000943R	REPAIR SHEET	