


RYOBI
18 Volt Jig Saw
Model No. P524
Repair Sheet

ONE WORLD TECHNOLOGIES, INC.
P.O. Box 1288, Anderson, SC 29622 • Phone 1-800-525-2579
www.ryobitools.com

RYOBI 18 VOLT JIG SAW – MODEL NUMBER P524

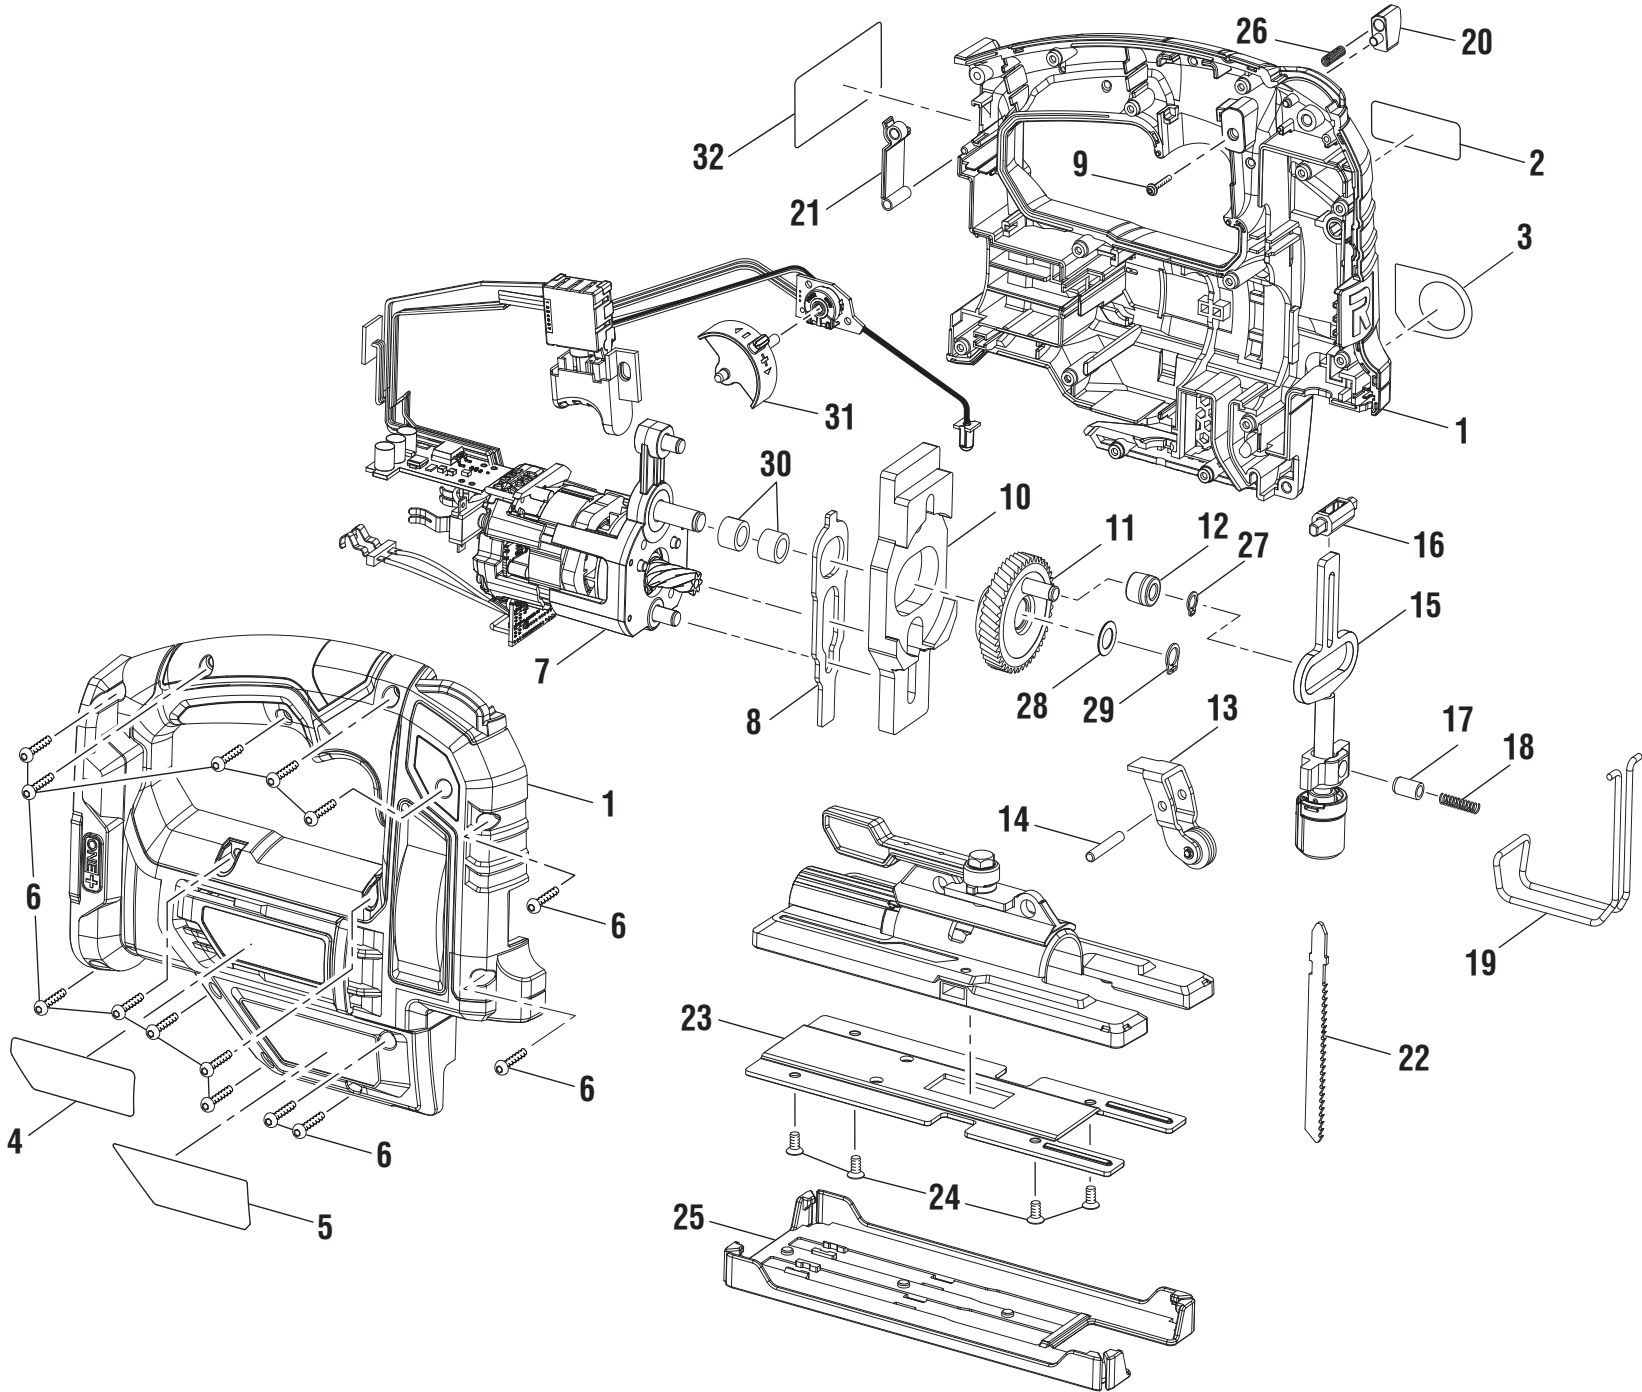

RYOBI 18 VOLT JIG SAW – MODEL NUMBER P524

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **JIG SAW** or when ordering repair parts.

PARTS LIST


KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	206796001	Housing Assembly (Inc. Key Nos. 2-5 and 32)	1
2	940114178	Logo Label	1
3	941003539	Orbital Label	1
4	941122064	Data Label	1
5	941120382	Warning Label	1
6	660031017	Screw (M3.5 x 16 mm, T-20 Pan Hd.)	14
7	206791001	Motor/Switch Assembly	1
8	637637001	Drive Plate	1
9	661902001	Screw w/Washer (M2 x 14 Torx)	1
10	613663001	Counterbalance	1
11	206792001	Gear Assembly	1
12	206793001	Drive Bushing Assembly	1
13	312418002	Guide Roller Assembly	1
14	673814001	Pin (OD4.0 x 25 mm)	1
15	304944016	Saw Bar Assembly	1
16	613286001	Saw Bar Sleeve	1
17	697080001	Spring Sleeve	1

KEY NO.	PART NUMBER	DESCRIPTION	QTY
18	696074002	Compression Spring	1
19	635656001	Blade Guard	1
20	536117001	Lock-On Button	1
21	536092001	Programming Door	1
22	681849001	Wood Cutting Blade	1
23	206795001	Base Assembly	1
24	660213025	Screw (M4 x 7 mm, Flat Hd.)	4
25	536214001	Base Cover	1
26	696074002	Compression Spring	1
27	670704001	Retaining Ring	1
28	691101001	Washer	1
29	639947001	Retaining Ring	1
30	680727002	Bushing	2
31	526393001	Speed Dial	1
32	941120403	Battery Foot Label	1

Not Shown:

995000569 Operator's Manual (961152960)
8-24-18
(Rev:01)

RYOBI 18 VOLT JIG SAW – MODEL NUMBER P524

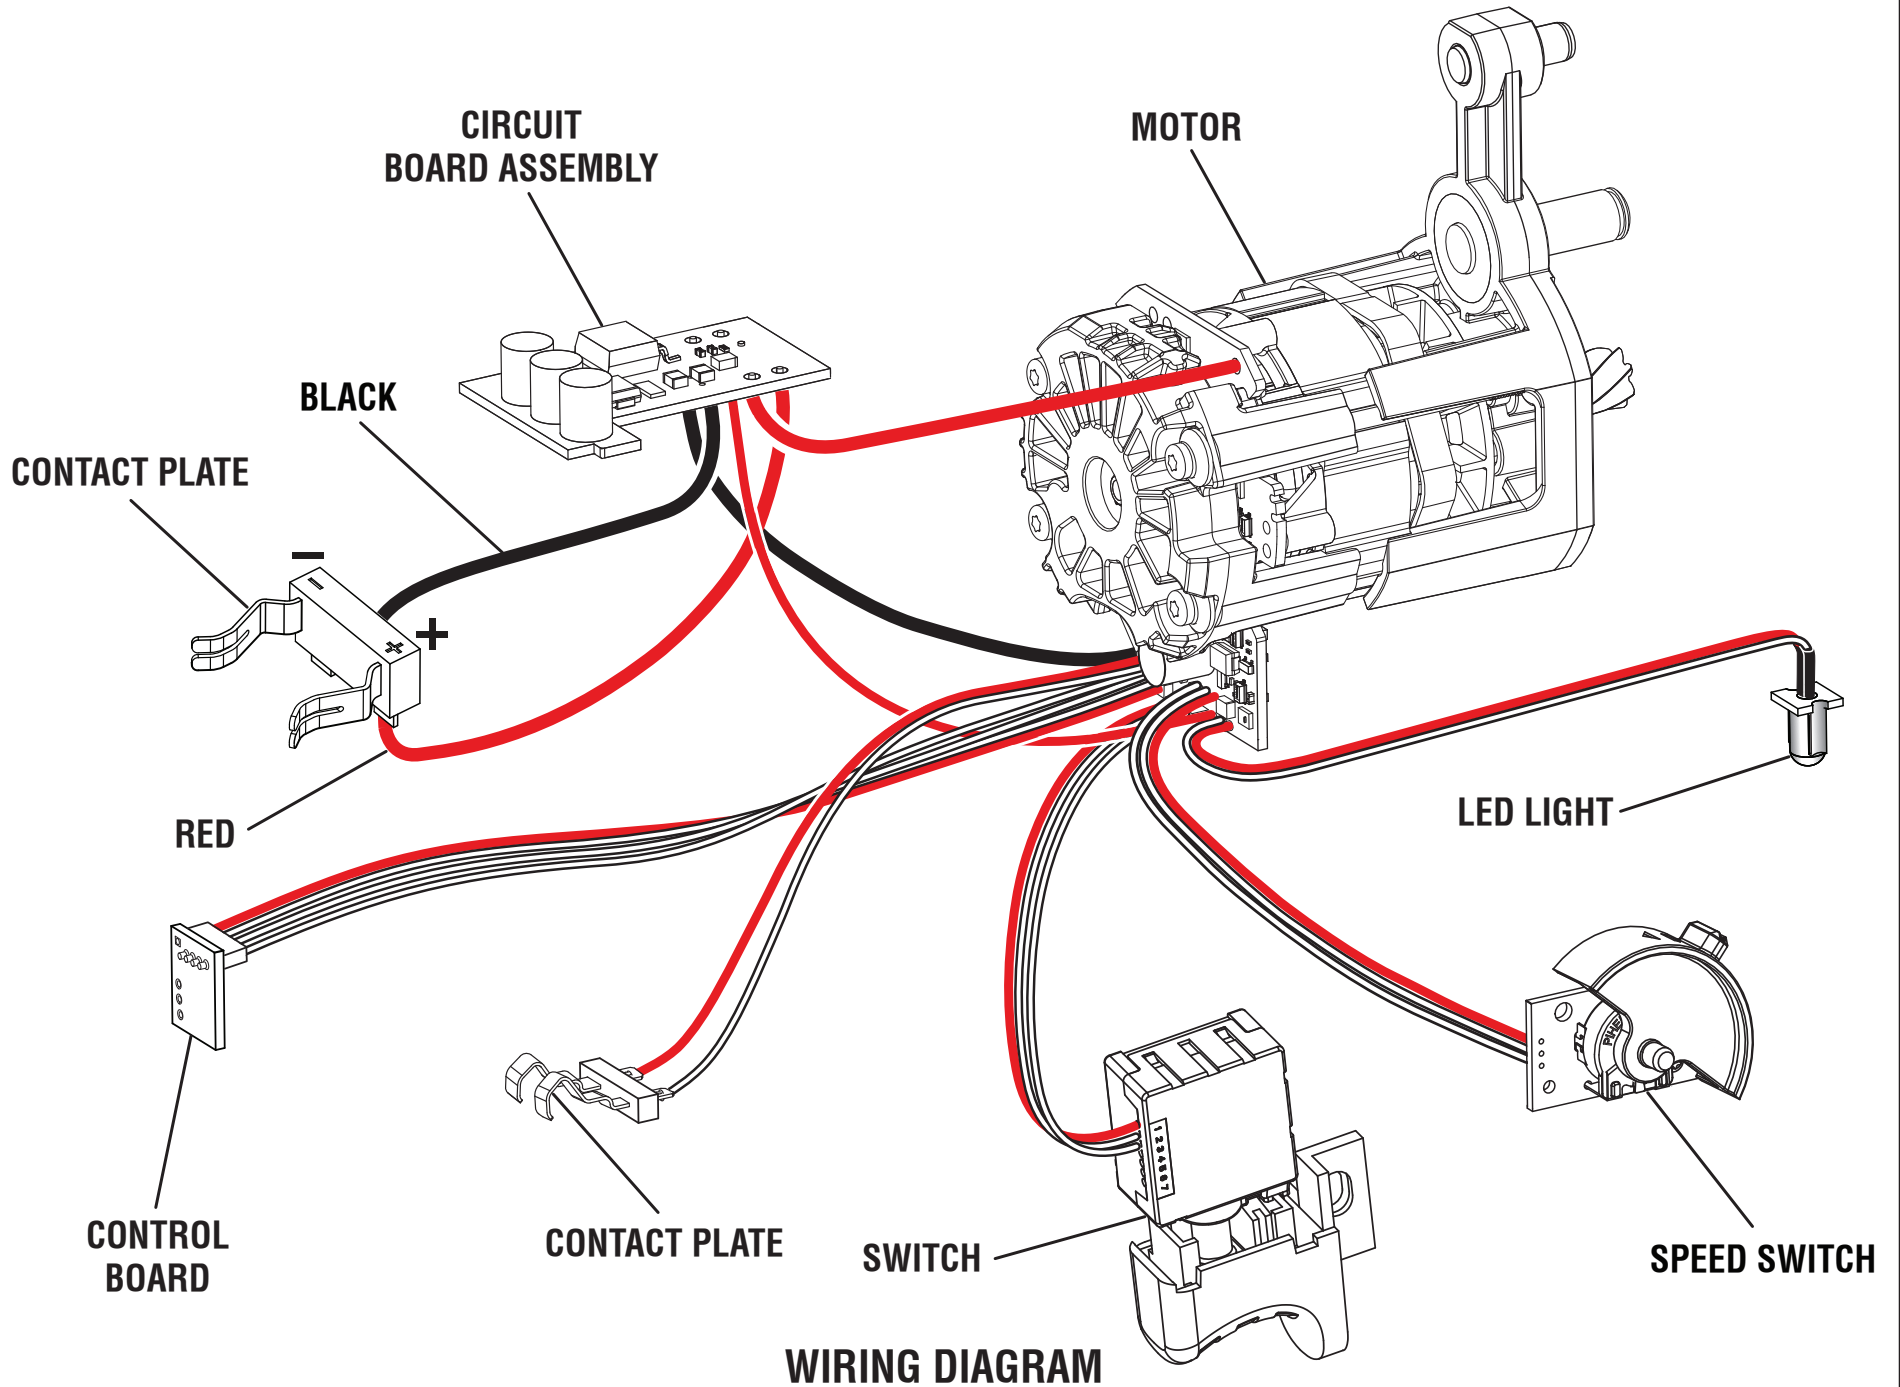

WIRING DIAGRAM