



Parts List for PC1800HD Type 2

Item Number	Part Number	Description	Qty Required
1	90552314	DRILL, HAMMER	1
2	90535668	KEYLESS CHUCK	1
3	5103096-01	SCREW	1
4	90536558	ACTUATOR FWR/REV	1
856	90536563	SIDE HANDLE ASY	1
861	90532919	KIT BOX	1
866	90533718	BATTERY PACK	1
866	PC18B	BATTERY PACK	2
867	90535852	CAP,BATTERY	1
871	90550550-02	CHARGER	1