



## Parts List for PC18CHD Type 1

Item Number	Part Number	Description	Qty Required
1	148354-03	BIT CLIP	2
2	311940-02	SCREW	1
3	90571261-01	MOTOR & GEARBOX	1
4	90569724	SWITCH, VSR	1
5	000000-00	No Longer Available	1
6	497283-01	SCREW	4
7	497283-02	SCREW	1
8	5100035-03	SPRING	2
9	5101046-01	SCREW	5
10	5103096-01	SCREW	1
11	90576973	SCREW	1
12	90530646-02	TERMINAL BLOCK	1
13	90535668	KEYLESS CHUCK	1
14	90569691	SPRING HOLDER	1
15	90569692	ACTUATOR	1
16	90569693	F/R ACTUATOR	1
21	90574328	CLAMSHELL SET	1
23	90572092	ACTUATOR	1
24	486578-00	SCREW	1
25	90517873	ROLL PIN	1
26	000000-00	No Longer Available	1
27	607918-41	SCREWDRIVER BIT	1
861	000000-00	No Longer Available	1
866	PC18B	BATTERY PACK	2
867	90535852	CAP,BATTERY	1
871	000000-00	No Longer Available	1