



Parts List for PCC791B Type 3

Item Number	Part Number	Description	Qty Required
2	90614654	LEFT SIDE FRAME	1
3	N500107	RIGHT SIDE FRAME	1
4	90624433	END CAP	1
5	90621610	RUBBER PLUG	3
6	90615767	TRIGGER	1
7	098185-20	PIN	1
8	90551259	SPRING	1
9	90620174	LOCK OFF	1
10	N500961	LEVER	1
11	90629863	PIVOT	1
12	90615568	TORSION SPRING	1
15	90633321	ROLLER	1
16	N082403	DOWEL PIN	1
18	90641347	BUMPER	1
19	90615815	SPRING	1
21	N519161	RATING LABEL	1
23	N500609	PCB ASSEMBLY	1
24	90624621	END BRIDGE	1
25	N500628	ARMATURE & BRG.	1
26	N503300	MAGNET RING	1
27	90614719	FLYWHEEL	1
28	90635366	TAPE	1
29	90559833	BALL BEARING	1
30	90615722	RETAINING RING	1
31	90622035	BEARING PLATE	1
32	330041-61	ROLLER PIN	1
33	N403227	DETENT PIN	1

Parts List for PCC791B Type 3

Item Number	Part Number	Description	Qty Required
34	588470-00	PIN	1
35	90610773	NUT	1
36	90516498	SPRING	2
37	90626630	SCREW,PLASTITE	10
39	90626633	SCREW,PLASTITE	2
40	330045-05	LOCK SCREW	7
41	90621828	WASHER	2
42	330045-07	SCREW M4X20 T20	7
43	330019-38	SCREW	3
44	90614915	SCREW	2
45	582193-00	SCREW	1
46	90626342	MACHINE SCREW	1
47	90618133	HARNESS & SWITCH ASY	1
48	N492341	HOUSING	1
100	90626069	BELT HOOK	1
120	9R195324	FOOT-CONTACT(NO MAR)	1
141	90629541	DRIVER ASSEMBLY	1
142	90629537	RETURN DEVICE	1
150	90623626	INFORMATION LABEL	1
866	PCC680L	BATTERY PACK	1
871	PCC692L	CHARGER	1