



**BOSCH**

# Accessories

PR111 | 1 600 A00 H30

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	4

Spare parts list

Item	Part Number	Description	Illustration	
2	2 610 021 520	Base Plate	1	
3	2 610 917 210	Screw	1	
4	1 600 A00 NV7	Spring	1	
5	2 610 021 525	Spring Rod	1	
6	2 610 021 529	Retaining ring	1	
8	2 610 005 516	Screw	1	
9	2 610 003 064	Washer	1	
11	2 610 001 602	Washer	1	
12	2 600 590 006	Ratchet Cap	1	
13	2 610 003 063	Shim	1	
14	2 610 003 062	Retaining ring	1	
15	1 600 A00 L28	Spring Guide Sleeve	1	
22	2 610 022 609	locking assembly	1	
23	2 610 023 209	Wear Plate	1	
24	2 609 110 290	Washer	1	
25	2 609 110 289	Hex Nut	1	
26	2 610 001 604	Contact strap	1	
28	2 910 641 122	Oval-Head Screw	DIN 7985-M4X12-4.8-H	1
29	2 916 680 005	Spring Lock Washer	B 4 DIN 127	1
30	2 610 021 528	Clamp Screw	1	
32	2 610 956 414	Sleeve	1	
33	2 610 956 415	Thumbwheel	1	
34	2 610 021 521	Stop Bar	1	
35	2 610 956 416	Indicator	1	
36	2 610 021 531	O-Ring	1	
37	2 610 021 532	Adjuster Nut	1	
40	1 600 A00 HX6	Cover	1	
41	2 610 005 997	Screw	1	
42	2 610 021 530	Handle	1	
43	2 610 021 527	Handle	1	
44	2 910 141 205	Hex Socket Head Cap Screw	DIN 912-M6x30-8.8	1
45	2 916 011 014	Plain Washer	DIN 125-A 6,4-ST	1
801	1 600 A01 9XP	Mounting Base	1	
807	2 610 003 971	Stop Device	1	

**Spare parts list**

<b>Item</b>	<b>Part Number</b>	<b>Description</b>	<b>Illustration</b>
816	1 600 A00 M2W	Carrier	1
824	2 610 003 973	Locking Lever	1

Illustration - Type - E

