



## Parts List for PS1800K Type 2

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	419233-06	KEYLESS CHUCK	1
3	5102586-10	VSR SWITCH (DC)	1
4	607918-41	SCREWDRIVER BIT	1
5	5100850-11	TRANSMISSION	1
866	HPB18	BATTERY	1
867	5102026-00	BATTERY CAP	1
871	90500932	CHARGER	1
871	5103069-12	CHARGER	1