



Parts List for PS1800K Type 4

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	5147554-00	KEYLESS CHUCK	1
3	000000-00	No Longer Available	1
4	607918-41	SCREWDRIVER BIT	1
5	5102763-02	MOTOR & PINION	1
6	311978-01	F/R ACTUATOR	1
7	148354-03	BIT CLIP	1
866	5100385-34	BATTERY PACK	1
867	5102026-00	BATTERY CAP	1
871	90500932	CHARGER	1
871	5103069-10	CHARGER	1