



**BOSCH**

# Cordless Screwdriver

PS31 | 3 601 H68 112

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	3

**Spare parts list**

<b>Item</b>	<b>Part Number</b>	<b>Description</b>	<b>Illustration</b>
1	2 609 100 824	Housing BLUE	1
4	1 607 233 377	Electronics Module	1
5	2 609 100 825	Changeover Lever	1
9	2 610 007 737	Nameplate	1
20	2 609 100 826	Lens	1
25	2 609 110 967	Keyless Chuck	1
32	2 609 199 279	Switchover Unit	1
41	2 609 132 378	Sticker	1
45	2 606 200 258	Gear Box	1
70	2 609 110 537	Clip	1
91	1 607 A35 0C5	Battery Pack GBA 12V 2.0Ah Li SCM	1
91	1 607 A35 0C8	Battery Pack BAT 414 10,8/12V 2,0Ah	1
91	2 607 337 237	Battery Pack BAT 415 10,8V712V 2,5AH	1
101	2 609 110 883	Screw	1
107	2 603 421 229	Countersunk-Head Screw M6x23 LEFTHAND THREADS	1
653	2 607 225 139	Fast Charger USA/CAN 120/10,8-12V/30 MIN.	1
653	2 607 225 519	Fast Charger USA 120/3,6-10,8V,1h	1
802	2 610 014 489	DC motor	1
808	2 609 136 766	Nameplate	1

Illustration - Type - E

3 601 H68 111  
 Stand } 13-01-31  
 Issue } **Fig./Abb. 1**

