



Parts List for PS330K Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	381329-00	SWITCH,VSR	1
6	152113-00	TRANSMISSION	1
7	151222-00	MOTOR	1
8	330013-04	SCREW	6
9	330075-25	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	046376-00	PIN	1
12	000000-00	No Longer Available	1
13	000000-00	No Longer Available	1
16	PS120	9.6V BATTERY PACK	1
861	000000-00	No Longer Available	1
871	418352-00	PS150 9.6V CHARGER	1