



BOSCH

Cordless Screw Driver

PSR 72 | 0 603 937 743

Table of Content

Spare parts list.....	2
Illustration - Type.....	3


Spare parts list

Item	Part Number	Description
1	2 605 104 509	Housing Section GREEN
2/10	2 606 316 158	Pinion Z=9
5	2 601 099 055	Adjusting Slide RED
25	2 608 572 200	Keyless Chuck
45	2 606 200 054	Planetary Gear Train
93	1 609 200 147	Screwdriver Blade 6 MM
96	2 608 040 079	Support
101	2 603 490 018	Torx Oval-Head Screw 3x18
102	2 601 329 041	Retaining Bracket
107	2 609 110 721	Countersunk-Head Screw M5x20
653	2 607 224 393	Fast Charger GB 230/7,2-14,4V, 1h
654	2 607 335 467	Slide-In Accu Package 7,2V,1,2Ah,NiCd
797	2 601 398 009	Carrying Loop
802	2 607 022 943	DC motor 7,2V
804	2 607 200 351	On-Off Switch
809	2 601 117 368	Manufacturer's nameplate
820	2 601 117 369	Reference Plate

Illustration - Type - E

0 603 937 562
 Stand } 19-04
 Issue } 01-03-02

Fig./Abb. 1

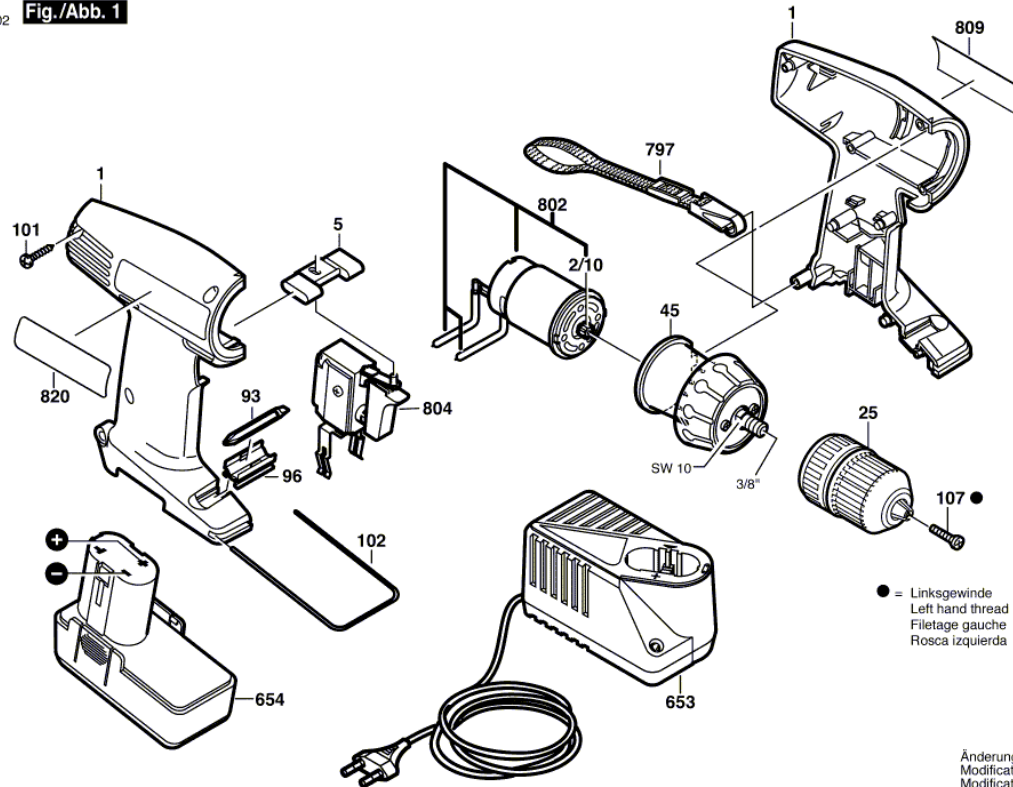

Änderungen vorbehalten
 Modifications reserved
 Modifications reserves
 Salvo modificaciones