



## Parts List for PT10-B3 Type 1

Item Number	Part Number	Description	Qty Required
1	5140064-50	OIL SEAL	1
2	5140064-51	HOUSING	1
3	5140064-52	SCREW	4
4	5140064-53	WASHER	8
5	5140064-54	WASHER	4
6	5140064-55	SCREW	4
7	5140064-56	HANDLE	1
8	5140064-57	SEAL PLATE	1
9	5140064-58	NEEDLE BEARING	1
12	5140064-61	ANVIL ASSY.	1
13	5140064-63	PIN	1
14	5140064-62	HAMMER	1
15	5140064-64	CAM	1
16	5140064-65	CAGE	1
17	5140064-66	BEARING	1
18	5140064-67	CYLINDER HOUSING	1
19	5140064-68	NUT	4
20	5140064-69	NUT	2
21	5140064-70	O-RING	2
22	5140064-71	BEARING	2
23	5140064-72	FRONT COVER	1
24	5140064-73	PIN	2
25	5140064-74	CYLINDER	1
26	5140064-75	ROTOR	1
27	5140064-76	VANE	6
28	5140064-77	PIN	1
29	5140064-78	SEAL PLATE	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.

## Parts List for PT10-B3 Type 1

Item Number	Part Number	Description	Qty Required
30	5140064-79	REAR COVER ASSY.	1
31	5140064-81	SCREW	4
32	5140064-82	TRIGGER	1
33	5140064-83	SET PIN	2
34	5140064-84	SET PIN	1
36	5140064-85	DIRECTION POLE	1
37	5140064-86	FRONT COVER PIN	1
38	5140064-87	SPRING	1
39	5140064-88	STEEL BALL	1
40	5140064-89	TRIGGER PIN	1
41	5140064-90	O-RING	1
42	5140064-91	BUTTON ACTUATOR	1
44	5140064-93	PIN	1
45	5140064-94	PIN	1
46	5140064-95	CUP PLUG	1
47	5140064-96	PLUG	1
48	5140064-97	SPRING	1
50	5140064-98	INLET	1
51	5140064-99	INLET BOLT	1
52	5140065-00	REAR COVER	1
53	5140065-01	RETAINER RING	1
54	5140065-02	OIL SEAL	1
55	5140096-06	RUBBER PROTECTOR	1
56	5140096-07	RUBBER PROTECTOR	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit [www.dewaltservicenet.com](http://www.dewaltservicenet.com) for current parts information.