



Parts List for PW1300-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	JH0001	DUST COVER	1
2	JH0002	MOTOR SHROUD	1
3	JH0003	END CAP	1
4	JH0004	NUT	1
5	JH0005	FAN	1
6	JH0006	FLAT WASHER	1
7	JH0007	SCREW,SLF.TPG	2
8	JH0008	FLAT WASHER	6
9	JH0009	SCREW, SELF-TAP	4
10	JH0010B1	BRUSH	2
11	JH0011B1	BRUSH HOLDER	2
12	JH0012	BRIDGE	1
13	JH0013	O-RING	1
15	JH0015	BEARING	1
16	JH0016B1	ROTOR	1
17	JH0017	BEARING	1
18	JH0018	WASHER	1
19	JH0019	GEAR	1
20	JH0020B1	STATOR	1
21	JH0021	HEX BOLT	4
22	JH0022	SPRING WASHER	4
23	JH0023	RUBBER CUSHION	4
24	JH0024	PLATFORM	1
25	JH0025	O-RING	2
26	JH0026	BEARING	1
27	JH0027	GEAR	1
28	JH0028	SHAFT	1

Parts List for PW1300-B2 Type 1

Item Number	Part Number	Description	Qty Required
29	JH0029	PUMP HOUSING	1
30	JH0030	OIL SEAL	1
31	JH0031	BEARING	1
32	JH0032	WOBBLE PLATE	1
33	JH0033	HEX HEAD BOLT	1
34	JH0034	BEARING	1
35	JH0035	BASE	3
36	JH0036	PISTON	3
37	JH0037	SPRING PISTON	3
38	JH0038	PUMP HOUSING	1
39	JH0039	OIL SEAL	3
40	JH0040	O-RING	6
41	JH0041	BASE	3
42	JH0042	O-RING	3
43	JH0043	O-RING	3
44	JH0044	RETAINING RING	3
45	JH0045	O-RING	3
46	JH0046	CHECK VALVE BASE	3
47	JH0047	CHECK VALVE	6
48	JH0048	VALVE SPRING	6
49	JH0049	VALVE	6
50	JH0050	CHECK VALVE	6
51	JH0051	O-RING	6
52	JH0052	O-RING	4
53	JH0053	PUMP HOUSING	1
54	JH0054	HEX HEAD BOLT	4
55	JH0055	RING	1

Parts List for PW1300-B2 Type 1

Item Number	Part Number	Description	Qty Required
56	JH0056	INLET PIPE	1
57	JH0057	HEX HEAD BOLT	4
58	JH0058	PLASTIC NUT	1
59	JH0059	FILTER	1
60	JH0060	RUBBER WASHER	1
61	JH0061	INLET CONNECT	1
62	JH0062	INTERCONNECTING CORD	1
63	JH0063	FITTING	1
64	JH0064	PIN	1
65	JH0065	SCREW	1
66	JH0066	PRESSURE CHECK VALVE	1
67	JH0067	STEEL BALL	1
68	JH0068	O-RING	1
69	JH0069	PRESSURE CHECK VALVE	1
70	JH0070	O-RING	1
71	JH0071	RETAINING RING	1
72	JH0072	PRESSURE PISTON	1
73	JH0073	O-RING	1
74	JH0074	RETAINIG RING	1
75	JH0075	O-RING	1
76	JH0076	O-RING	1
77	JH0077	VALVE SHELL	1
78	JH0078	FLAT WASHER	1
79	JH0079	PRESSURE SPRING	1
80	JH0080	LEVER	1
81	JH0081	NUT	1
82	JH0082	CAP	1

Parts List for PW1300-B2 Type 1

Item Number	Part Number	Description	Qty Required
83	JH0083	ADJUSTING SCREW	1
84	JH0084	NUT	1
85	JH0085	CHECK VALVE	1
86	JH0086	SPRING	1
87	JH0087	BRASS NUT	1
88	JH0088	NUT	1
89	JH0089	COVER	1
90	JH0090	SCREW	2
91	JH0091	SWITCH BOX	1
92	JH0092B1	PRESSURE SWITCH	1
93	JH0093	CUSHION	1
94	JH0094	SWITCH COVER	1
95	JH0095	SELF TAPPING SCREW	6
96	JH0096	SUPPORT	1
97	JH0097	TERMINAL	2
98	JH0098B1	TERMINAL	2
99	JH0099	CORD CLAMP	1
100	JH0100	SELF TAPPING SCREW	6
101	JH0101	DECORATIVE PLATE	1
102	JH0102B1	CLAMSHELL	1
103	JH0103B1	SWITCH	1
104	JH0104	SWITCH PLATE	1
105	JH0105B1	CLAMSHELL	1
107	JH0107	SELF TAPPING SCREW	6
108	JH0108	SEALING THREAD	1
109	JH0109	PIPE COVER	1
110	JH0110B1	TERMINAL COVER	2

Parts List for PW1300-B2 Type 1

Item Number	Part Number	Description	Qty Required
111	JH0111B1	TERMINAL COVER	2
112	JH0111B1	TERMINAL COVER	2
113	JH0113B1	TERMINAL	2
114	JH0114B1	TERMINAL	4
115	JH0115B1	TERMINAL COVER	4
116	JH0116	CORD PROTECTOR	1
117	JH0117	WASHER	1
118	JH0118	NUT	1
119	JH0119	TERMINAL,GROUND	1
120	JH0120B2	CORD & PLUG	1
121	JH0121	HOSE GUN ASSY.	1
122	JH0122	JET & FAN WAND	1
123	JH0123	TURBO WAND	1
124	JH0124	DETERGENT BOTTLE	1
125	JH0125	CLEAN OUT PIN	1
127	JH0127	QUICK CONNECT	2
131	JH0131B2	RATING PLATE	1
132	JH0132	O-RING	3
133	JH0133	O-RING	1
134	JH110051AR	WARNING LABEL	1
141	JH0141	PUMP ASSY.	1