


RYOBI PORTABLE POWER SOURCE – MODEL NO. RP4900

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **PORTABLE POWER SOURCE** or when ordering replacement parts.

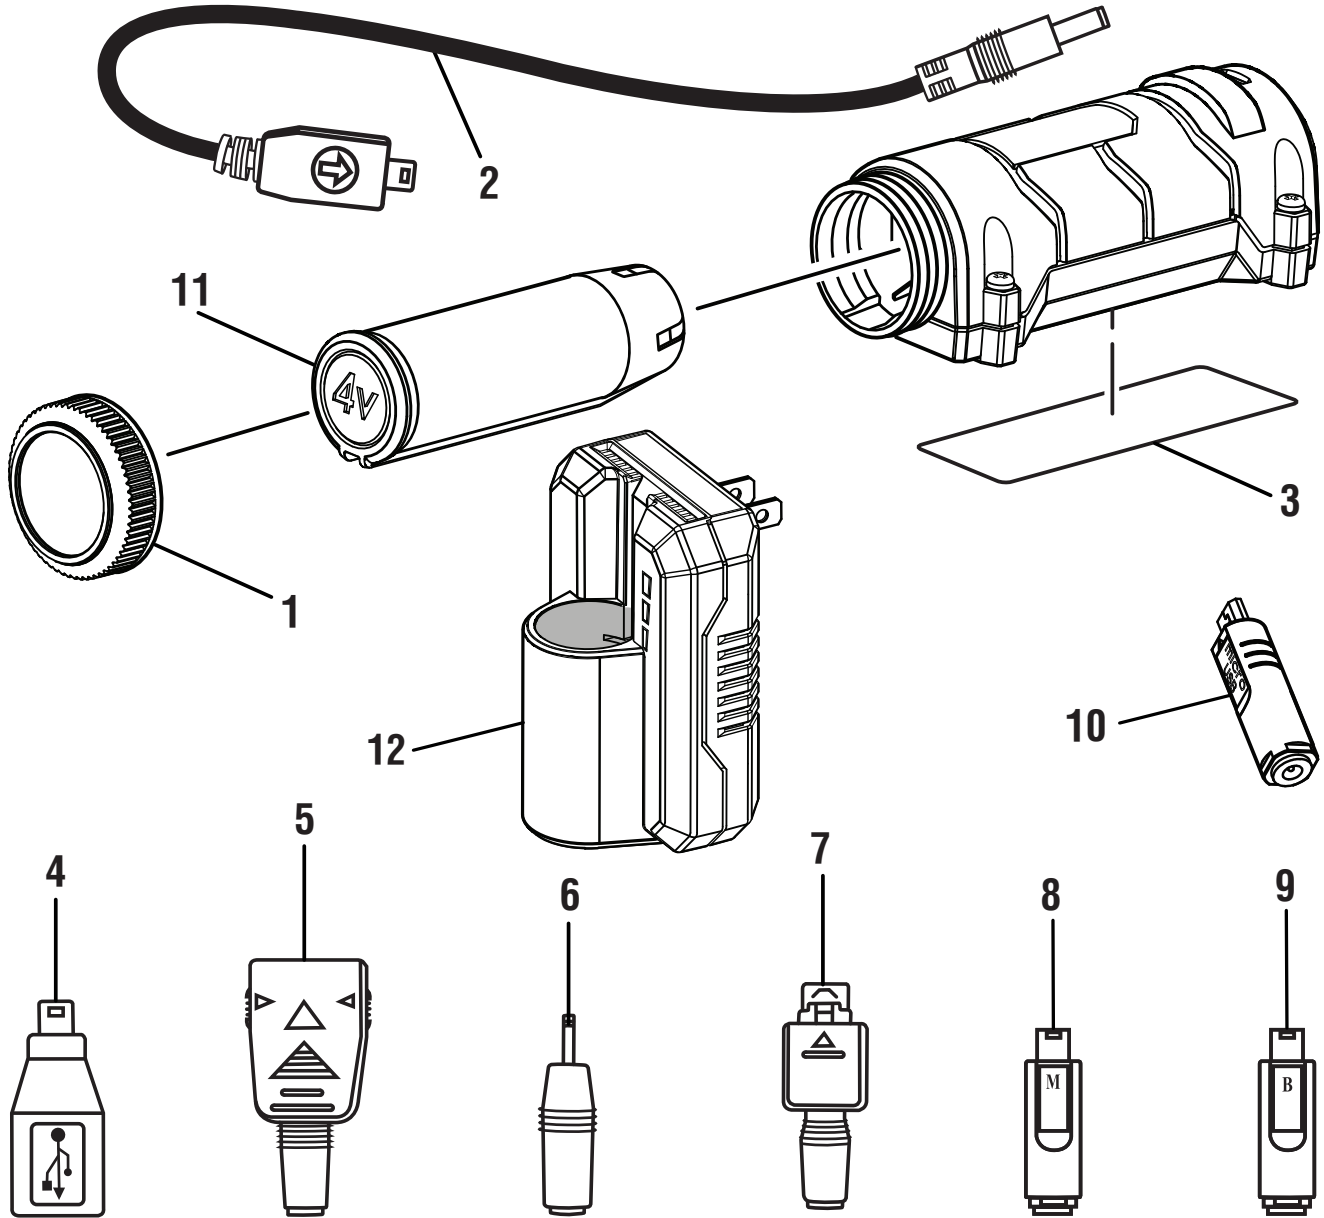

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY.	KEY NO.	PART NUMBER	DESCRIPTION	QTY.
1	019605001006	Battery Cap	1	NOT INCLUDED:			
2	019605001012	Adaptor Cord	1	11	130166003	Battery Pack (AP4001, 4 Volt Li-ion)	1
3	019605001018	Data / Warning Label	1	12	140129002	Charger (AP4700, 4 Volt Li-ion)	1
4	019605001011	Adaptor (Apple USB)	1	NOT SHOWN:			
5	019605001014	Adaptor (LG Large)	1	987000659	Operator's Manual (RP4900) ...		1
6	019605001016	Adaptor (Nokia).....	1	11-4-09			
7	019605001013	Adaptor (LG Small)	1	(REV:01)			
8	019605001010	Adaptor (Motorola).....	1				
9	019605001015	Adaptor (Blackberry).....	1				
10	019605002001	Adaptor (Micro USB)	1				