



Parts List for RS600K Type 1

Item Number	Part Number	Description	Qty Required
1	606513-00	FIELD CASE	1
2	448719-79	FIELD	1
3	383597-04	BRUSH RING	1
4	383475-00SV	ARMATURE & BRGS	1
5	627744-00	LEVER	1
6	606522-00	FAN BAFFLE	1
7	629626-01	CLAMSHELL SET	1
8	330123-03	CORD	1
9	629648-00	CORD PROTECTOR	1
10	329301-00	CLAMP,CORD	1
11	90552860	SWITCH	1
12	606550-00S	SHAFT ASSEMBLY	1
13	629631-01	GEAR CASE	1
14	629627-02	HOUSING & COVER	1
15	609470-00	FELT SEAL	1
16	604644-01	BEARING	1
17	629628-00	SHOE ASSEMBLY	1
18	385238-00	NEEDLE BEARING	1
19	448503-16S	GEAR	1
20	144424-01	THRUST RING	1
21	143462-02	PLATE,YOKE	1
22	609312-00	COVER PLATE	1
23	137382-02	SLEEVE	1
24	609479-00	FELT SEAL	1
25	632061-00	ID LABEL	1
26	90589186	NAME PLATE	1
27	615628-00	SPRING	1

Parts List for RS600K Type 1

Item Number	Part Number	Description	Qty Required
28	612863-00	COLLAR	1
29	606590-00	SLIDER	1
30	612805-00	COLLAR	1
31	000903-00	BALL	1
32	613204-00	CLAMP PIN	1
33	330019-18	SCREW,PLASTITE	2
34	330019-15	SCREW	4
35	158472-00	SCREW	2
36	616037-00	SCREW	4
37	330019-13	SCREW,M4X19	2
38	330019-03	SCREW	6
39	330045-07	SCREW M4X20 T20	1
40	562097-00	SCREW	2
41	330019-14	SCREW	5
42	629635-01	ACTUATOR	1
43	629647-00	SPRING	1
45	633159-01	ELECTRONIC MOD.	1
46	629655-01	BUTTON	1
47	627741-00	SPRING	1
48	330024-04	SCREW	1
49	627738-00	LOCK PLATE	1
54	627698-00	BRACKET	1
55	098197-03	LOCK WASHER	1
80	383387-00	SPRING,BRUSH	2
81	384719-04	BRUSH	2
82	330003-09	BEARING,BALL	1
83	330003-09	BEARING,BALL	1

Parts List for RS600K Type 1

Item Number	Part Number	Description	Qty Required
84	696060-00	SNAP RING	1
85	135531-00	BEARING,NEEDLE	1
86	383476-00	PLATE,BEARING	1
800	429698-00	GREASE:4 LB CAN	1
856	610795-00SV	BLADE PACK	1
861	612430-06	KIT BOX	1