









## Parts Breakdown

RST250

*Products with multiple versions are listed in subsiding order with the newest version on top not indented*

<u>Fig #</u>	<u>Part ID</u>	<u>Part Name</u>	<u>Quantity</u>
1	616-10060-00	FLEXIBLE PIPE UNIT, RST250 T1	1
1	6161009000	N/A	1
1	616-10090-01	FLEXIBLE PIPE UNIT, RST200	1
2	616-10050-31	FLEXIBLE SHAFT, RST250	1
3	616-30020-02	GEAR CASE CPL.,RST250,T1	1
3	616-30030-00	GEAR CASE CPL.,RST250	1
4	616-50060-02	CONTROL LEVER ASS'Y, RST250-T1	1
4	6165006003	N/A	1
4	616-50060-04	CONTROL LEVER ASS'Y, RST250	1
5	616-55006-01	LEVER, RST250	1
6	616-55007-01	CONNECTOR, RST250	1
7	616-50090-01	SWITCH, RST250,T1	1
7	616-50090-02	SWITCH, RBE250,RBC221	1
8	015-00499-20	TAPPING SCREW, RST250	2
8	015-00499-20	TAPPING SCREW, RST250	3
9	015-00499-10	TAPPING SCREW, RST250	1
9	015-00499-11	TAPPING SCREW, RST250	1
10	616-40020-02	HANDLE CPL., RST250	1
10	616-40020-03	HANDLE COMPLETE, RST250	1
11	616-45002-00	SPACER, RBC251	1
12	001-70064-50	BOLT M6X45, RST250	1
12	010-00698-20	BOLT W/WASHER, RST250	1
13	002-37060-00	FLANGE NUT, RBL500	1
14	003-11060-00	WASHER, RBL500	1
15	6168004001	PROTECTOR ASS'Y, RST250 T1	1
15	6168004002	PROTECTOR ASS'Y,RST250	1
15	6168004003	PROTECTOR ASSEMBLY	1
15	6168004004	N/A	1
16	616-10050-41	SPACER, RST250	1
17	063-00399-00	CONTROL CABLE, RST250	1
18	523-10110-00	CRANKCASE CPL., RST250	1
18	523-10110-01	CRANK CASE ASS'Y, RBC256	1
19	523-15022-02	CRANKCASE GASKET, RST250	1
20	523-20110-06	CRANKSHAFT CPL., RST250-T2	1
20	523-20150-00	CRANKSHAFT CPL.,RST250-T1	1
20	525-20160-00	CRANK SHAFT COMPLETE,RBC251	1
21	523-25019-02	PISTON, RST250	1
22	524-25007-01	PISTON RING, RBC260	1
23	523-25026-00	PISTON PIN, RST250	1
24	056-50899-70	CLIP, BBX2500	2
25	523-15023-02	CYLINDER GASKET, RST250,T1	1
25	523-15023-03	CYLINDER GASKET, RST250, T2	1
25	523-15023-04	CYLINDER GASKET, RBE250,RBC221	1
26	523-15018-02	CYLINDER, RST250,T1	1
26	523-15018-03	CYLINDER, RBE250-T1	1
26	523-15018-04	CYLINDER, RBC251	1
27	011-90597-30	S.H. BOLT M5X20, RBC221	2
27	011-90597-30	S.H. BOLT M5X20, RBC221	2
27	014-00597-00	SCREW M5X20, RST250	2
28	523-35039-02	INSULATOR GASKET, RST250	2
29	523-35040-01	CARBURETOR INSULATOR, RST250	1
30	523-30380-01	INSULATOR ,RST250	1
31	523-35041-02	INSULATOR GASKET, RST250-T1	1
31	523-35041-03	INSULATOR GASKET, RST250	1
32	014-00595-00	P.H. SCREW M5X25, RST250	2
32	014-00595-20	SCREW M5X25, RBL250	2
33	616-55002-01	WIRE, RBC201	1
33	616-55012-00	WIRE, RST250	1
34	523-35043-02	MUFFLER GASKET, RST250	1
35	523-35044-02	MUFFLER INSULATOR, RST250	1
36	523-30370-03	EXHAUST MUFFLER, RST250	1
36	525-30260-01	EXHAUST MUFFLER, RST250	1
37	003-10050-00	WASHER M5, EH760	2
38	011-90596-00	S.H. BOLT M5X45, RBE250	2



## Parts Breakdown

RST250

38	011-90596-50	S.H. BOLT, RBC230	2
39	523-70310-10	FLYWHEEL, RST250,T1	1
39	523-70310-11	FLYWHEEL, RBE250	1
39	525-70020-10	FLYWHEEL, RBC255	1
40	523-70310-22	COIL, RST250	1
40	523-70310-23	COIL, RBC255	1
40	523-70310-24	COIL, RBC256	1
41	004-33042-00	SCREW M4X20, RST250-T1	2
41	014-00499-20	SCREW M4X20, RST250	2
42	523-75032-02	GROMMET, RST250	1
43	065-40099-31	PLUG CAP SPRING,RBC221	1
43	065-40099-40	PLUG CAP SPRING, RBC230,T1	1
44	523-75033-01	PLUG CAP, RST250	1
45	065-01498-10	SPARK PLUG BM7A, RBC230	1
46	616-20050-02	CLUTCH , RBC251	1
47	616-20040-02	CLUTCH DRUM CPL., RST250	1
48	523-50200-01	ENGINE COVER, RST250	1
49	003-15100-00	OUTER SNAP RING 10, RST250	1
50	014-00593-60	SCREW & WASHER ASS'Y, RBC2510	3
50	014-00595-10	SCREW M5X20, RST250	3
50	014-00597-00	SCREW M5X20, RST250	3
51	521-50030-02	PULLY, RST250	1
52	523-55047-00	BOLT, RBC251	1
53	523-50190-03	STARTER COVER, RST250,T1	1
53	523-50190-04	STARTER COVER, RST250	1
53	523-50210-00	REWIND STARTER, RST250, T1	1
54	168398-2	PRIMER PUMP, RST250	1
54	523-65043-00	PUMP, RST250	1
55	004-36051-80	SCREW ASSEMBLY, RBC230	4
55	0140059350	N/A	4
55	014-00594-50	SCREW M5X18, RBC255	4
56	523-65041-01	FUEL TANK, RST250	1
57	525-60580-00	FUEL TANK CAP ASSEMBLY, RBL500	1
57	531-60020-03	FUEL TANK CAP, RBC230	1
57	531-60140-00	FUEL TANK CAP,RBL500	1
57	531-60150-00	FUEL TANK CAP,	1
58	523-60480-01	TUBE, RST250, T1	1
58	523-60480-02	TUBE, RST250, T2	1
58	523-60480-03	TUBE, RBC256	1
59	523-65039-00	FILTER, RBL500	1
60	503-65003-00	PLATE RBC230	1
61	503-65002-00	PLATE, RBC230	1
62	521-65002-00	DAMPER, RBC230	2
63	004-36053-00	SCREW ASS'Y, RST250	2
64	002-27050-00	NUT M5, RBC230	2
65	015-00599-50	TAPPING SCREW M5X8,RST250	1
66	0150059800	N/A	1
66	523-55046-00	TAPPING SCREW M5X18, RST250	1
67	523-60470-03	CARBURETOR, RST250,T1	1
67	523-60470-04	CARBURETOR, RST250-T2	1
67	523-60570-00	CARBURETOR, RBC221	1
68	085-11499-60	TUBE 2.5X5X140, RST250,T2	1
68	523-65046-01	TUBE 3X5X140, RST250, T1	1
69	523-35046-02	AIR CLEANER CASE, RST250	1
70	523-35047-00	AIR CLEANER ELEMENT, RST250	1
71	004-36056-50	SCREW M5X62, RBC251	2
71	014-00594-70	SCREW M5X62, BBX7600	2
72	523-30480-01	CLEANER PLATE, RST250	1
72	523-35045-02	CLEANER PLATE, RST250,T1	1
73	523-35042-00	CARBURETOR GASKET, RST250	1
74	523-35048-01	CHOKE LEVER, RST250	1
75	523-35050-02	CHOKE PLATE, RST250	1
76	003-11040-00	WASHER, RBC251	1
77	015-00499-80	TAPPING SCREW M4X8, RST250	1
78	010-50649-70	STUD, RBC251	1
78	523-25024-02	STUD, RBC251 (T1)	1
79	616-30020-21	CUTTER SHAFT, RST250,T1	1



## Parts Breakdown

RST250

79	616-30030-20	CUTTER SHAFT, RST250	1
80	616-30020-31	BALL BEARING 608LLU, RST250	1
80	616-30020-41	METAL BUSH, RST250,T1	1
81	616-30020-31	BALL BEARING 608LLU, RST250	1
82	616-30020-51	WASHER, RST250 .	1
83	616-30020-61	SPRING WASHER,RST250	1
84	616-85008-00	RECEIVE WASHER, RST250	1
85	616-30021-21	BOLT,RST250	1
86	001-70051-00	CROSS RECESS H.BOLT 5X10,RST250	1
86	0040151000	N/A	1
86	004-31051-00	SCREW M5X10, RST250	1
87	523-60180-40	SWIVEL, RBC230	1
88	520-60081-10	PLUG, RBC230	1
89	520-60080-30	P.H. SCREW, RBC221	2
90	523-60470-22	THROTTLE VALVE, RST250	1
91	531-60051-20	RING, RBC230	1
92	524-60010-10	O RING, RBC230	1
93	503-60020-10	JET, RBC230	1
93	523-60290-10	JET, RBC221,T1	1
93	523-60570-10	JET, RBC221	1
94	524-60010-30	PUMP GASKET, RBC230	1
95	524-60010-40	PUMP DIAPHRAGM, BBX7600	1
96	501-60040-10	INLET SCREEN, RBC230	1
97	501-60041-30	GASKET, RBC221	1
98	531-60052-50	METERING DIAPHRAGM ASS'Y,RBC260	1
99	531-60050-30	PRIMER PUMP COVER, RBC221	1
100	521-60020-20	P.H. SCREW, RBC221	1
101	521-95000-00	HOLDER, RBC221	1
102	521-50020-20	REEL, RBC230	1
103	521-50020-30	SPIRAL SPRING, BHX2500	1
104	521-50020-60	STARTER ROPE, RBC230	1
105	522-50040-20	STARTER KNOB, RBC221	1
106	542-50030-10	SET SCREW, RBC221	1
107	044-01299-70	OIL SEAL, RBC221	1
108	044-01299-70	OIL SEAL, RBC221	1
109	616-30030-41	SPACER, RST250	1
110	056-10599-90	HOSE CLAMP, EM4251	1
111	523-35066-00	SPARK ARRESTER, RBC256	1
111	525-30330-10	SPARK ARRESTER, RBC2510	1
1,001	5019001000	TOOL KIT, RBL500	1
1,001	6169019000	TOOL KIT, RST250	1
1,002	B-02668	NYLON CUT. HEAD, RST250	1
5,003	525-60670-00	STRAP, RBL500	1
5,003	625-50210-02	STRAP UNIT, RBC201	1