



RY40030 EDGER ATTACHMENT

The model number will be found on a label attached to the motor housing. Always mention the model number of your **ATTACHMENT** when requesting service or ordering repair parts.

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	308483001	Push Nut (10 mm).....	1	17	940657063	Shield Icon Warning Label	1
2	525397001	Wheel (Plastic).....	1	18	941748001	Wheel Depth Adjustment Label.....	1
3	679995001	C-Ring (OD 10.59 x ID 8.94).....	1	19	941588024	Data Label	1
4	639142001	Washer (Wheel Adjuster)	1	20	220573001	Motor and Gear Train Assembly.....	1
5	311153001	Push Cap.....	1	21	525395001	Motor Housing (Right)	1
6	525802001	Wheel (Edger Depth Restrictor).....	1	22	311063001	Boom Assembly	1
7	311152001	Pivot Bracket Assembly	1	23	660206055	Screw (M3.5 x 14 mm, Pan Hd.)	4
8	311150001	Depth Adjustment Lever.....	1	24	525398001	Baffle	1
9	311151001	Bracket Assembly (Anti-Skid Pad)	1	25	525396001	Motor Housing (Left).....	1
10	678128002	Hex Nut w/Lock Washer	1	26	525390001	Motor Cover	1
11	638017001	Cupped Washer	1	27	941651002	Ryobi Logo Label	1
12	638006008	Blade	1	28	941720002	Connexion Logo Label	1
13	678011001	Flange Washer.....	1	29	941767001	Warning Label (French & Spanish)	1
14	661817001	Screw (M4 x 14 mm, T15 Torx Pan Hd.).	17	30	940657062	Icon Warning Label	1
15	525399001	Guard.....	1		NOT SHOWN		
16	941112006	Ryobi Connexion Logo Label.....	1		990000215	Operator's Manual	