


RYOBI
EXPAND-IT BRUSH CUTTER ATTACHMENT
ITEM NO. RYBRC77
MFG. NO. 090109015
REPAIR SHEET

RYOBI EXPAND-IT BRUSH CUTTER ATTACHMENT – ITEM NUMBER RYBRC77

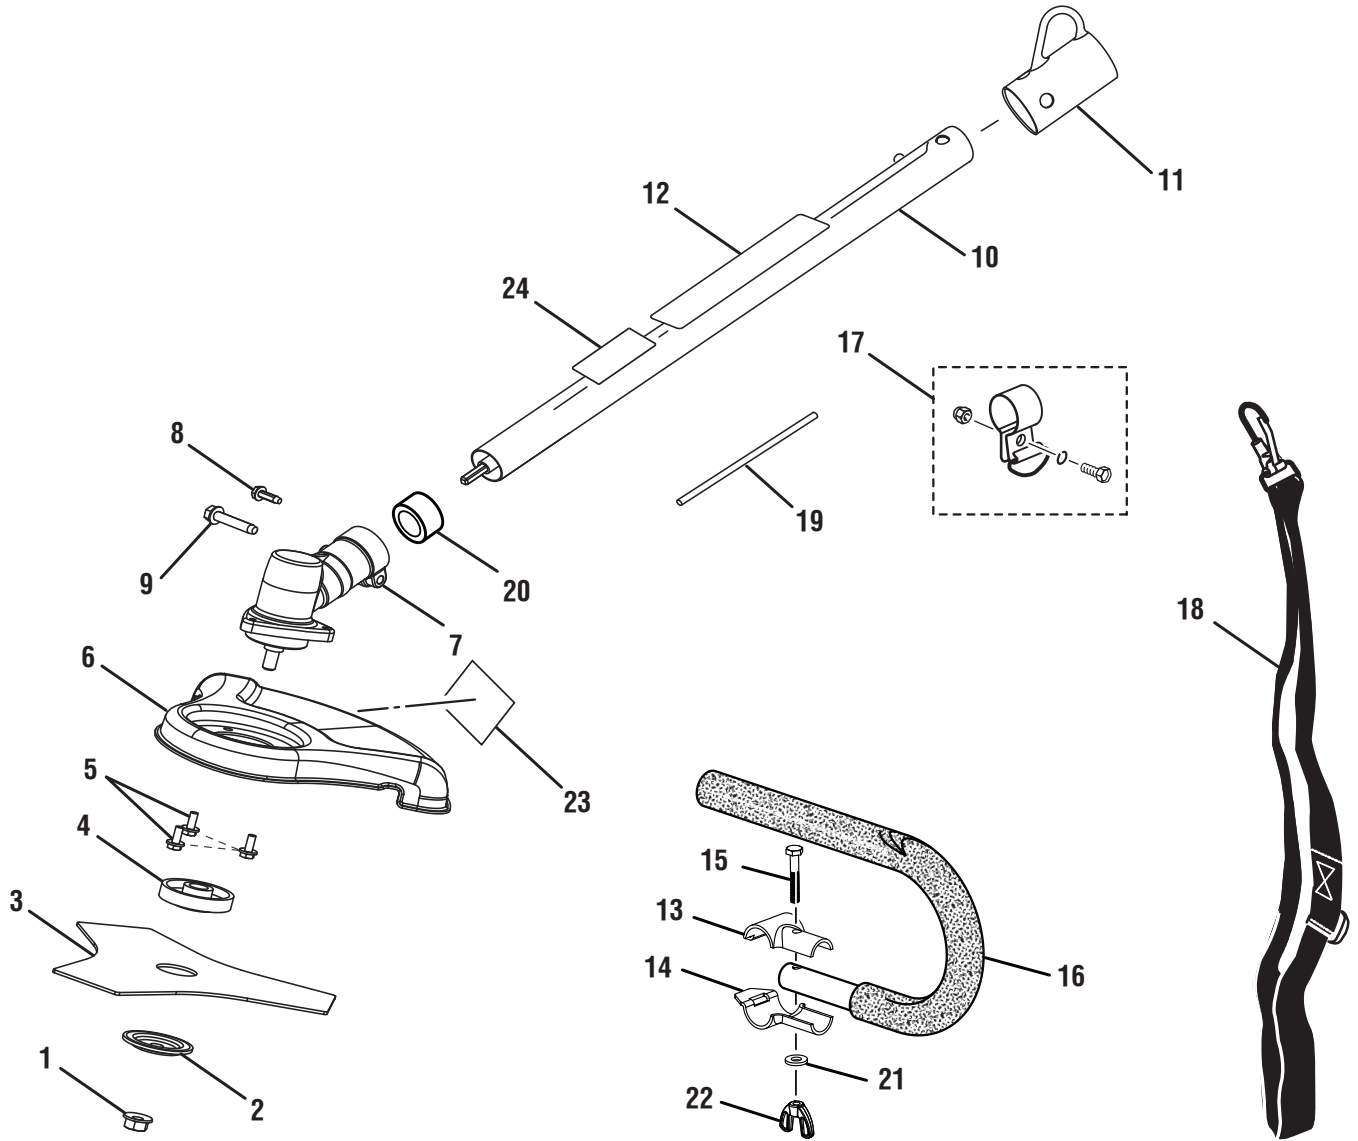

RYOBI EXPAND-IT BRUSH CUTTER ATTACHMENT – ITEM NUMBER RYBRC77

The item number and manufacturing number can be found on a label attached to the unit. Always mention the item number and manufacturing number in all correspondence regarding your **BRUSH CUTTER ATTACHMENT** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	678018001	Blade Nut (M8, Left Hand Threads).....	1
2	638017001	Cupped Washer.....	1
3	638006004	Blade (Tri-Arc®)	1
4	678011001	Flanged Washer.....	1
5	660737001	Screw w/Washer (10-24 x 1/2 in., Hex Hd.)	3
6	638120004	Brush Cutter Guard	1
7	308210008	Gear Head Assembly	1
8	660641001	Screw (10-24 x 5/8 in.)	1
9	660642001	Screw (1/4-20 x 1-1/4 in.).....	1
10	308035058	Boom Assembly (Inc. Key Nos. 11-12 and 24).....	1
11	518019002	Hanger Cap	1
12	940657027	Warning Label	1
13	638564001	Top “J” Handle Clamp.....	1
14	638565001	Bottom “J” Handle Clamp.....	1
15	660643001	Bolt (1/4-20 x 1-1/2 in., Hex Hd.)	1
16	308046005	“J” Handle and Grip	1
17	308224001	Strap Hanger	1
18	308487001	Shoulder Harness Assembly	1
19	678020001	Head Locking Tool.....	1
20	518367001	Spacer	1
21	678013001	Washer	1
22	518949001	Wing Nut (1/4-20)	1
23	940705021	Logo Label.....	1
24	940726013	Logo Label.....	1

NOT SHOWN:

991000566 Operator's Manual
6-24-15
(Rev:02)