



Parts Catalog

Trimmer/Brushcutter

Model: TBC-210


Units Prior To Serial No. G 199639

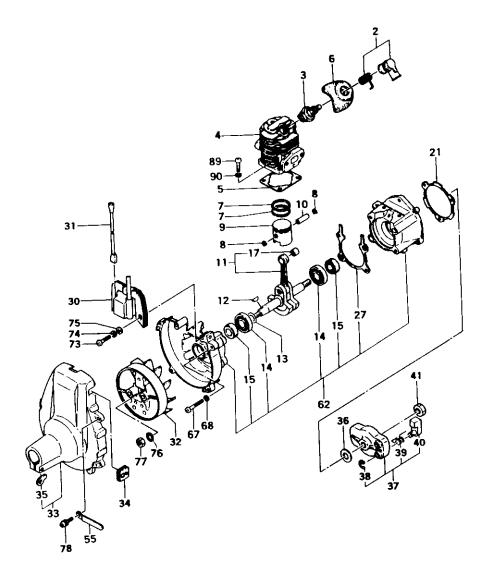

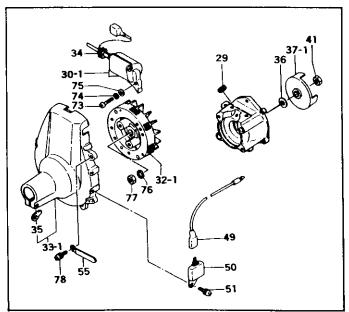

/	BR				111 15
REF	NER PARNER	PARMANE	/	ø	SERIANS REMARKS
1-002 1-003 1-004 1-005 1-006 1-007	157-11666-900 018-01805-200 002-0609A-200 017-06091-201	SPARK PLUG CAP ASS'Y SPARK PLUG CJ8 CYLINDER CYLINDER GASKET SPARK PLUG RUBBER COVER	1 1 1 1 1 2		
1-008 1-009 1-009 1-010 1-011 1-011		PISTON PISTON	1 1 1	RN	-G001000 G001001- -G001000 G001001-
1-012 1-013 1-013 1-013 1-013 1-013 1-014	330-00200-210 330-00200-220 330-00200-230 330-00200-240	WOOD-RUFF KEY 3X13X4.5 GEAR SHAFT SHIM 0.10 GEAR SHAFT SHIM 0.15 GEAR SHAFT SHIM 0.20 GEAR SHAFT SHIM 0.30 BALL BEARING #6001, 28MM/OD	1 V V V 2		
1-015 1-017 1-021 1-027 1-029 1-030,1	999-62071-127 810-06091-200 090-06000-202 203-06000-200	OIL SEAL 12227 NEEDLE BEARING F-79 RECOIL STARTER GASKET CRANK CASE GASKET PRIMARY CORD GROWNET IGNITION COIL COMP.	2 1 1 1 1 1	D	G141091- -G001000
1-032	178-06090-800 155-21702-800 155-20511-800 112-0609A-900	IGNITION COIL COMP. STOP CORD COMP. MAGNETO ROTOR COMP. NAGNETO ROTOR COMP. FAN CASE ASS'Y FAN CASE ASS'Y	1 1 1 1 1	N N N N	G001001- G001001- -G001000 G001001- -G001000 G001001-
1-034 1-034 1-035 1-036 1-037,1 1-037	203-0604A-202 324-33410-201 359-10112-203 798-06094-200	PRINARY CORD GRONNET GRONNET GEAR CASE WASHER Clutch Washer B Starter Pulley Starter Pulley ASS'Y	1 1 1 1 1	M	-G001000 G001001-
1-038 1-039 1-040 1-041 1-049 1-050	788-0162V-200 991-16080-003 173-01620-800	STOP RING 5 STARTER PAWL SPRING STARTER PAWL NUT 8 (L.H. THREAD) IGNITOR LEAD WIRE COMP., R110M IGNITOR COMP. TTI-1F	1 1 1	N N D D	G001001- G001001- G001001- G001001- G001001- G001001-
$1 - 051 \\ 1 - 055 \\ 1 - 055 \\ 1 - 062 \\ 1 - 062 \\ 1 - 067$	072-06092-900	CORD CLANP CORD CLANP COMP. CRANK CASE ASS'Y CRANK CASE ASS'Y	1 1 1 1		G001001- -G001000 G001001- -G001000 G001001-
1-068 1-073 1-073 1-074 1-074 1-075	992-10050-012 990-11040-181 990-11050-201 992-10040-012 992-10050-012 992-00040-011	SCREV 4X18 SCREV 5X20 S.VASHER 4	4 2 2 2 2 2 2	N	-G001000 G001001- -G001000 G001001- -G001000
1-075 1-076 1-077 1-078 1-089 1-089	065-00000-200		2 1 4 4 4	N	G001001- -G001000 G001001-
1-090	992-10050-012	S.WASHER 5	4		

FIG.2 ENGINE COMPONENTS

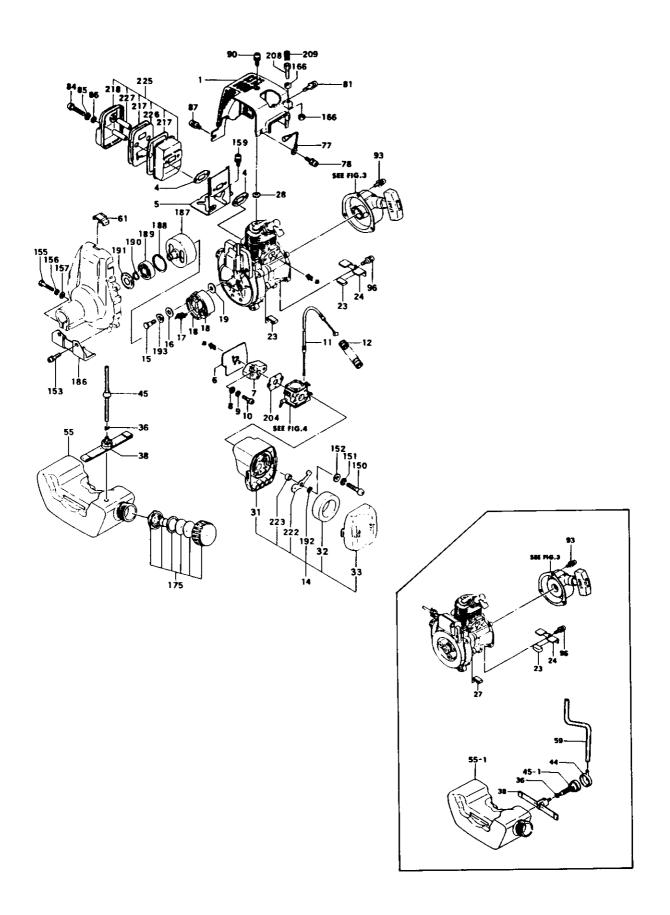



/	JER		
REF	NER PARNER	PARTNAME	ET SERVICER REMARKS
2-001 2-001 2-004 2-005 2-006 2-007	738-0608C-200 738-0608C-201 737-06100-210 133-0604A-203 403-0609A-200	NUFFLER PROTECTOR NUFFLER PROTECTOR NUFFLER GASKET	1 R -G001000 1 G001001- 2 1 1 1
2-008 2-009 2-010 2-011 2-012 2-012	164-10014-400	S.VASHER 5	2 2 2 1 1 I -F176279 1 F176280-
2-014 2-015 2-016 2-017 2-018 2-019	357-00601-200 348-0602R-200 342-0605A-201 290-00501-802	CLEANER ASS'Y STEP BOLT CLUTCH PLATE A CLUTCH SPRING CLUTCH SHOE COMP. CLUTCH WASHER B	1 2 2 2 1 2 2 2
2-023 2-023 2-024 2-027 2-028 2-031	655-06100-200 653-06000-200		$ \begin{array}{cccccccccccccccccccccccccccccccccccc$
2-032 2-033 2-036 2-036 2-038 2-038 2-044	424-06092-202 680-04019-210 680-00731-201 675-0608A-900	CLIP 7	1 1 1 -G001000 1 N G001001- 1 1 D G001001-
2-045,1 2-045 2-055,1 2-055 2-059 2-061	223-0162B-900 591-0608A-203 591-0609A-200 700-03005-130	FUEL PIPE ASS'Y Tank	1 -G001000 1 N G001001- 1 -G001000 1 N G001001- 1 D G001001- 1 D G001001- 1
2-077 2-078 2-081 2-084 2-085 2-085 2-086	994-15040-122	S. VASHER 5	1 1 1 2 2 2 2
2-087 2-090 2-093 2-098 2-150 2-151	994-16050-122 994-16050-162		1 1 3 1 2 2
2-152 2-153 2-155 2-156 2-156 2-157 2-159	992-10050-062 992-00050-061	SCREW 5X10/S H.T. BOLT 5X20	2 2 1 1 1 1 1
2-166 2-175 2-186 2-187 2-188 2-189	941-06092-200 289-06020-801 993-51032-002	TANK CAP ASS'Y	2 1 1 1 1 1 1
2-190 2-191 2-192	801-0604A-201	STOP RING C-12 EX STEP WASHER WAVE WASHER 8	

- To be cont'd -

	NER PARNER	at sk	SERVINER REMARKS
2-193	992-05080-030	BEND VASHER 8	2 1 2
2-204 2-208	894-01226-200 	CARBURETOR GASKET THROTTLE VIRE ADJUSTER	
2-209 2-217 2-218	892-06092-200 739-0602B-200 717-0608A-200	TOP SPRING NUFFLER COUPLING GASKET NUFFLER BODY B	1 2 1
2-222 2-223 2-225	528-0602V-202 470-0602N-200	CHOKE VALVE Cleaner Collar Nuffler Ass'y	1 2 1
2-226 2-227	722-0608A-800	NUFFLER PARTITION PLATE CONP.	
2-221	740-06028-201	NUFFLER COLLAR	2


FIG.3 RECOIL STARTER

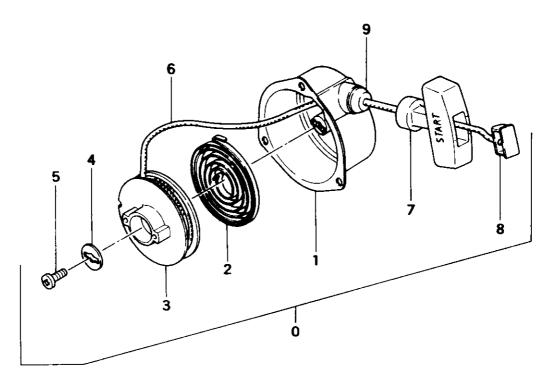

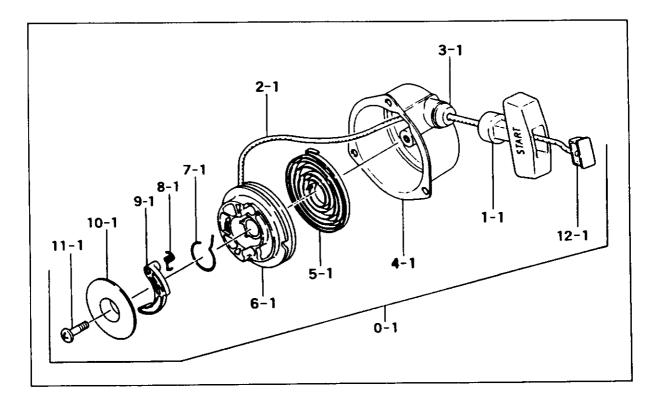


af		111 5
REF. NER PARNER	PARNAME	ET SERIANBR REMARKS
3-000, 1 762-06092-901	RECOIL STARTER BODY ASS'Y RECOIL STARTER BODY ASS'Y STARTER HANDLE ROPE 3.5X890L ROPE GUIDE	1 - G001000 1 N G001001 - 1 1 1 1 1 1
$\begin{array}{c} 3-005,1\\ 779-01250-200\\ 3-006,1\\ 769-06092-200\\ 3-007,1\\ 836-06092-200\\ 3-008,1\\ 832-06092-200\\ 3-009,1\\ 788-06092-200\\ 3-010,1\\ 837-06092-200 \end{array}$	STARTER ROPE REEL FRICTION SPRING RETURN SPRING STARTER PAWL	
3-002 779-0136U-200 3-003 774-0162V-200	SCREW 5X12 STARTER HANDLE CAP RECOIL STARTER BODY RECOIL SPRING STARTER ROPE REEL ROPE REEL WASHER	
3-005 990-15050-126 3-006 783-06092-200 3-007 785-06097-200	SCREW 5X12 Rope 3.5x890L Starter Handle Starter Handle Cap	

FIG.4 CARBURETOR

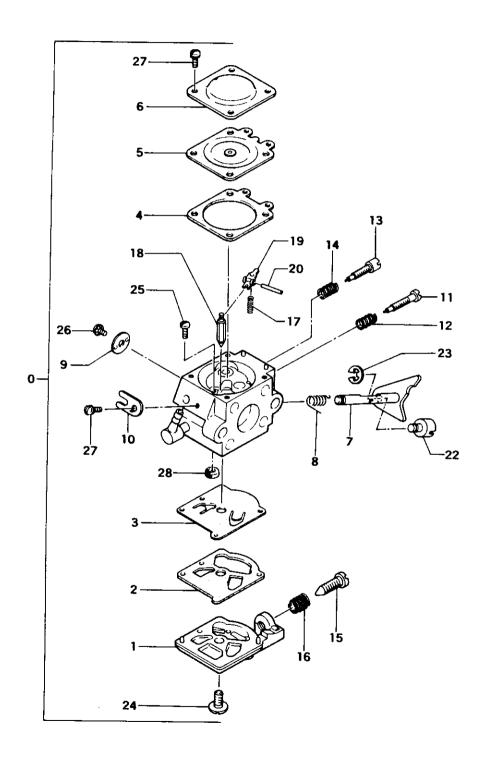

	BR		111 .9
REF	PARTIER PARTIER	PARNAME	SERVINER REMARKS
4-000 4 4-001 5 4-002 5 4-003 5 4-004 4	455-25039-900 575-25013-200 577-25007-200 576-25006-200 475-25001-200	CARBURETOR ASS'Y WA-195A PUNP BODY PUNP GASKET PUNP DIAPHRAGN DIAPHRAGN GASKET NETERING DIAPHRAGN CONP.	
4-007 4 4-008 4 4-009 4 4-009 4	164-25006-800 186-25009-200 188-25006-200 188-25039-200	DIAPHRAGN COVER THROTTLE SHAFT COMP. THROTTLE SPRING THROTTLE VALVE THROTTLE VALVE THROTTLE SHAFT CLIP	1 1 1 1 1 1 N G001000 1 1 N
4-012 4 4-013 4 4-014 6 4-015 4	85-25003-200 61-25039-200 23-25001-200 62-25006-200	HIGH ADJUST SCREW HIGH ADJUST SPRING LOV ADJUST SCREW HIGH/LOW ADJUST SPRING IDLE ADJUST SCREW IDLE ADJUST SPRING	
4-018 6 4-019 4 4-020 6 4-022 5	77-25013-200 03-25001-200 73-25001-200 05-25001-200 39-25008-200 89-25008-200	NEEDLE VALVE VALVE HINGE HINGE PIN SVIVEL	
4-025 5- 4-026 40 4-027 5-	14-25001-200 46-25001-200 67-25003-200 48-25012-200 78-25007-200	HINGE PIN SET SCREW Shutter Screw Set Screw	1 1 1 5 1

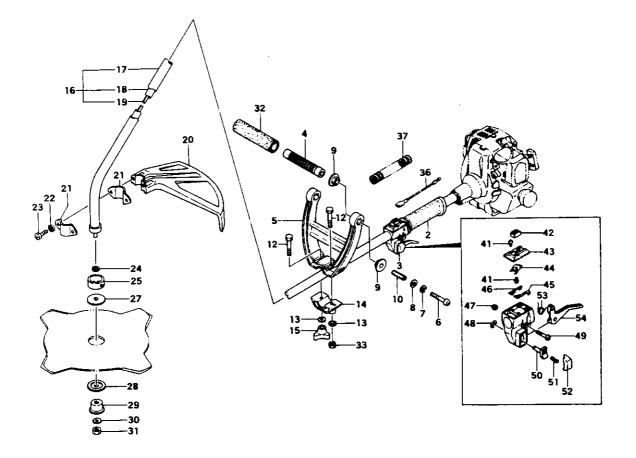

/	af		111 .5
REF	NER PARNER	PARNAME	SIT SERVINER REMARKS
5-002 5-003 5-004 5-005 5-008 5-007	504-37400-200 870-37400-900	SHAFT GRIP THROTTLE LEVER ASS'Y HANDLE INNER COMP. HANDLE SCREV 6X55	
5-008 5-009 5-010 5-012 5-013 5-014	513-37400-200 990-21060-504 359-02103-200	WASHER A 2.3 CUSHION RUBBER HANDLE HOLDER HEX. BOLT 8X50 CLUTCH WASHER B HANDLE BRACKET A	2 4 2 2 2 1
5-015 5-016 5-017 5-018 5-019 5-020	341-37400-900 341-37400-800 350-37400-800 344-37400-200	HANDLE KNOB COMP. DRIVE SHAFT PIPE ASS'Y DRIVE SHAFT PIPE COMP. FLEXIBLE LINER COMP. FLEXIBLE SHAFT SAFETY GUARD COMP.	
5-021 5-022 5-023 5-024 5-025 5-027	992-10060-062 990-23060-154 760-33005-200 370-37400-200	GUARD BRACKET S.WASHER 6 HEX. BOLT 6X15 W/PLUS SPECIAL WASHER CUTTER CASE COVER CUTTER HOLDER	2 2 2 1 1 1
5-028 5-029 5-030 5-031 5-032 5-033	316-33005-200 992-29080-000		1 1 1 1 1 1 1
5-036 5-037 5-041 5-042 5-043 5-044	164-10012-600 993-42030-081 162-37101-200 259-37101-200	STOP CORD COMP. PROTECTION TUBE 10X126L TAPPING SCREW 3X8 STOP SWITCH STOP SWITCH BASE STOP SWITCH BASE STOP SWITCH SPRING	2 1 3 1 1 1 1
5-045 5-046 5-047 5-048 5-049 5-050	176-37101-200 991-86050-000 993-55060-001 994-31050-251		
5-051 5-052 5-053 5-054	956-37101-200	RETURN SPRING	

FIG.6 TOOLS & NYLON HEAD

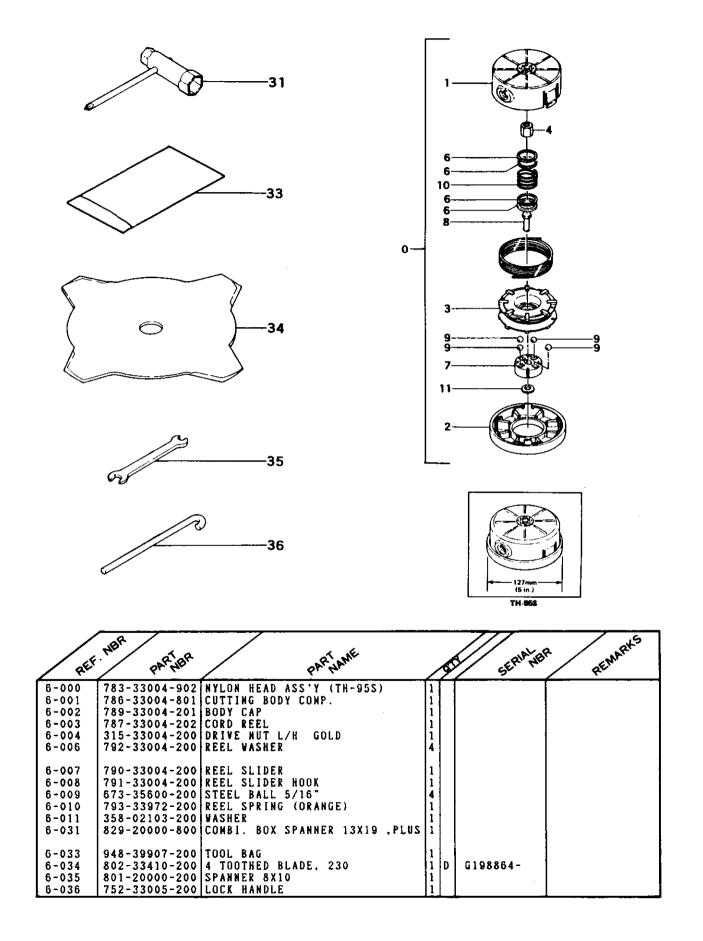


FIG.7 MARKS









CAUTION TO AVOID POSSIBLE INJURY. GUARD MUST BE IN PLACE DURING OPERATION. FOR SAFE USE, FOLLOW INSTRUCTIONS IN OWNER'S MANUAL EYE PROTECTION EYE PROTECTION SHOULD BE WORN BY USER OF THIS UNIT.

-4

