

Parts Catalog

Hedgetrimmer

Model: THT-200

Part # 12240 3-10-97

THT-200 OPTIONS AND ACCESSORIES


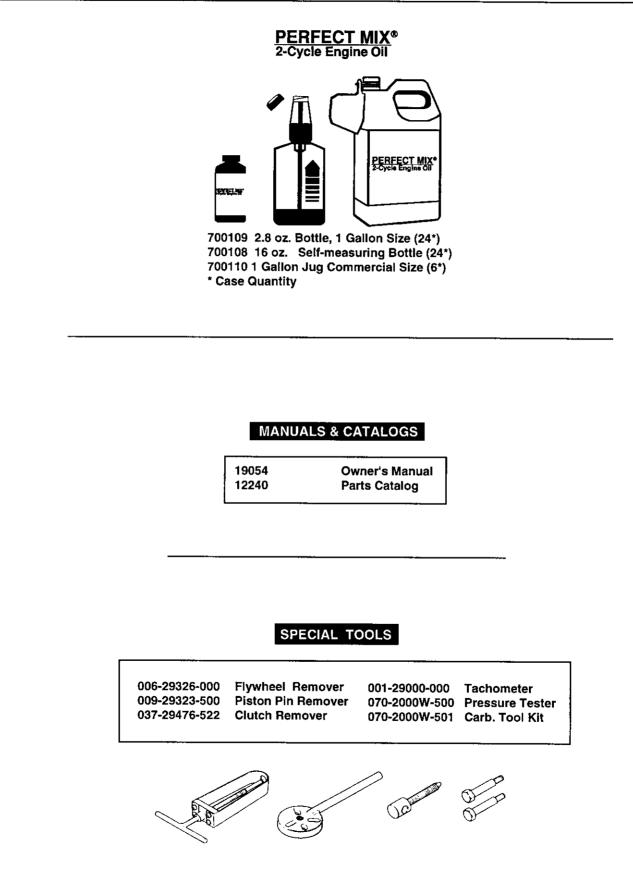


FIG.1 ENGINE

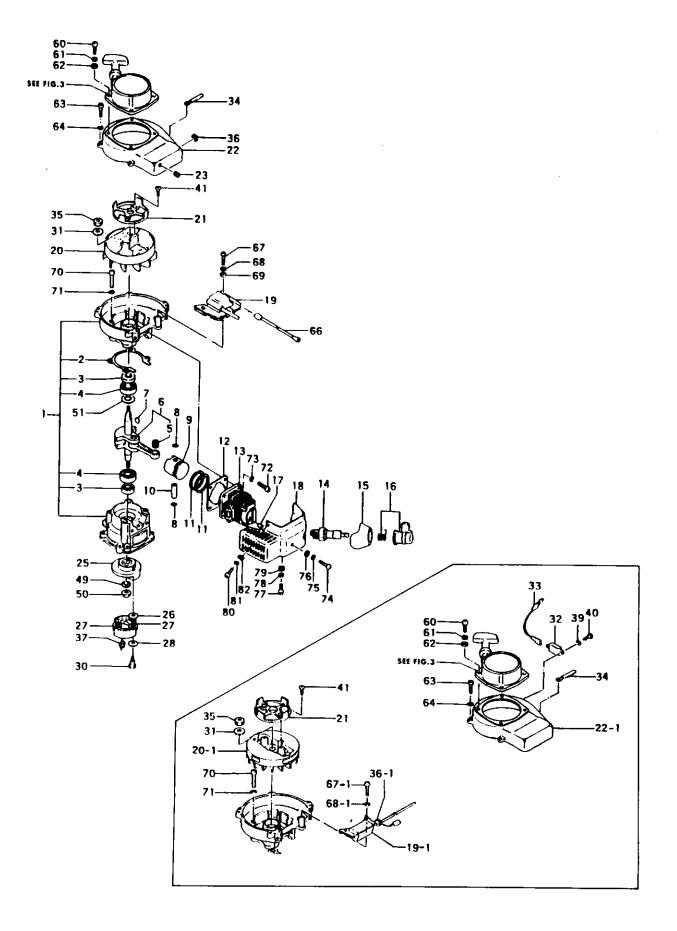


THT-200 PARTS LISTING


REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1	072-0639W-900	CRANKCASE,ASS'Y	1		D	~G076401	Includes bearings, seals & gasket.
1	072-0639W-910	CRANKCASE,ASS'Y	1		D		Includes bearings, seals & gasket.
2	090-06000-202	GASKET,CRANKCASE	1		С		
3	999-66122-240	SEAL,OIL,12227	2		Α		
4	999-61600-100	BEARING,BALL,#6001	2		в		
5	999-62071-127	BEARING,NEEDLE,F-79	1		С		
6	046-0639W-801	CRANKSHAFT	1		С	~G076401	
6	046-0639W-802	CRANKSHAFT	1		D	G076402~	
7	068-10100-200	KEY,WOODRUFF,3X13X4.5	1		С		
8	039-06100-200	CIRCLIP, PISTON PIN	2		Α		
9	031-06320-200	PISTON	1		С		
10	037-06097-200	PIN,PISTON	1		В		
11	041-00000-210	RING, PISTON, LOWER	2		Α		
12	017-06091-201	GASKET,CYLINDER	1		В		
13	002-06092-803	CYLINDER	1		С		
14	018-01805-200	PLUG,SPARK	1		в		
15	255-0630G-210	COVER,RUBBER,SPARK PLUG	1		D		
16	157-01570-900	CAP,SPARK PLUG,ASS'Y	1		С		
17	011-0630B-200	COLLAR	1		D		
18	738-0632R-201	PROTECTOR, MUFFLER	1		D		
19-1	167-20745-801	COIL,IGNITION	1		C	~G076401	
19	167-20508-800	COIL,IGNITION	1		В	G076402~	
20-1	155-21718-800	ROTOR, MAGNETO	1		D	~G076401	
20	155-20512-800	ROTOR, MAGNETO	1		D	G076402~	
				ĺ			
		PULLEY,STARTER	1		D		
22-1	112-0639W-200	CASE,FAN	1		D	~H271500	
22	112-0639A-210	CASE,FAN	1		D	H271501~	
23		GROMMET, SECONDARY CORD	1		c		
25	347-0639W-800	FLANGE,CLUTCH	1		D	~G076401	
25		FLANGE,CLUTCH	1		I	G076402~	
		WASHER,CLUTCH,B	2		в		
27		SHOE,CLUTCH	2			~G076401	
27		SHOE,CLUTCH	2			G076402~	
		WASHER,CLUTCH A	2			~D019779	
28	358-02103-200	WASHER,CLUTCH A	2		A	D019780~	
		BOLT,STEP,CLUTCH	2		I	~G076401	
		BOLT,STEP	2			G076402~	
31	065-00000-200	WASHER, FLYWHEEL	1		D		
L							

FIGURE 1 cont.

REF.	PART NO.	PART DESCRIPTION	Γο			SERIAL NO	REMARKS
32	159-21401-872	IGNITOR,TTI-1F	$\frac{10}{1}$	\sim		~G076401	REMARKS
33	173-01620-800	CORD, PRIMARY				~G076401	
34	198-05015-800	CLAMP,CORD			c	-0070401	
35	327-00201-201	NUT,L.H,7			D		
36-1	203-0604A-202	GROMMET			c	~G076401	
36	203-0639A-200	GROMMET				~G076401 G076402~	
	200-0003A-200		'			G076402~	
37	342-00501-204	SPRING,CLUTCH	1		C	~G076401	
37		SPRING,CLUTCH				G076402~	
39	992-10040-012	WASHER,S,4	1		В	010402-	
40	990-11040-081	SCREW,4X8	1		С		
41	990-12060-151	SCREW,FH,6X15	2		D		
49	992-00080-011	WASHER,8	1		D		
			·				
50	991-16080-003	NUT,8/L.H	1		D		
51	330-00200-210	SHIM,12.2X19X.10	v		D		Shims are "as needed" to obtain
51	330-00200-220	SHIM,12.2X19X.15	v		D		correct c/s side clearance.
51	330-00200-230	SHIM,12.2X19X.20	V		D		
51	330-00200-240	SHIM, 12.2X19X.30	v		D		
60	990-11040-121	SCREW,4X12	4		В		
					ĺ		
61	992-10040-012	WASHER,S,4	4		в		
62	992-01040-011	WASHER,4	4		С		
63	990-11050-161	SCREW,5X16	4		в		
64	992-10050-012	WASHER,S,5	4		Α	i	
66	178-0639A-800	CORD,STOP	1		D	G076402~	
67-1	990-11040-181	SCREW,4X18	2		D	~G076401	
67	990-11050-201	SCREW,MX20	2		D	G076402~	
68-1	992-10040-012	WASHER,S,4	2		в	~G076401	
68	992-10050-012	WASHER,S,5	2		A	G076402~	
69	992-00050-011	WASHER,SMALL,5	2		c		
70	990-11050-301	SCREW,5X30	4		c		
71	992-10050-012	WASHER,S,5	4		A		
	990-11050-201	SCREW,MX20	4		D		
	992-10050-012	WASHER,S,5	4		A		
1 1	990-11050-181	SCREW,5X18	1		в		
	992-10050-012	WASHER,S,5	1		A		
	992-01050-011	WASHER,5	1		A		
77	990-11050-121	SCREW,5X12	1		A		
78	992-10050-012	WASHER,S,5	-				
	992-01050-012 992-01050-011	WASHER,5			A A		
I I	990-11040-121	SCREW,4X12			В		
I I	992-10040-012	WASHER,S,4	귀		В		
I I	992-01040-012	WASHER,4	4		C		
	002-010-0-011				<u>v</u>		

FIG.2 ENGINE COMPONENTS

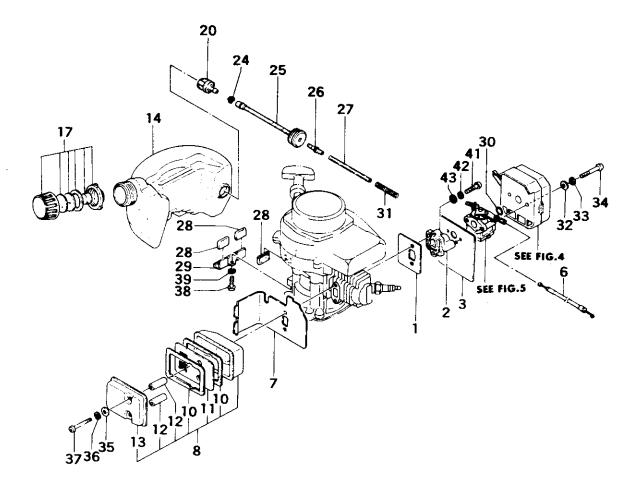

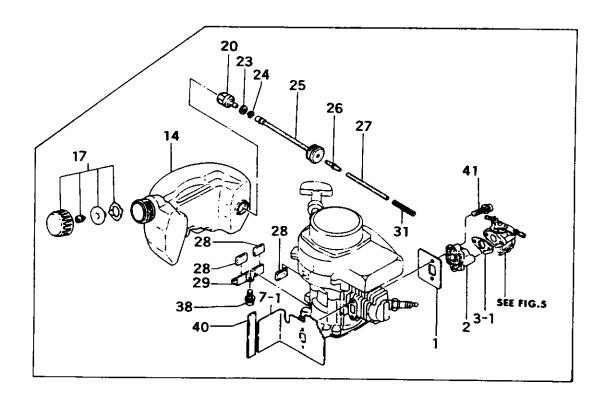

REF.	PART NO.	PART DESCRIPTION	-	С		SERIAL NO	REMARKS
1	403-0602K-201	GASKET, INLET MANIFOLD	1	_	Ā		
2	404-0639W-802	INSULATOR, CARBURETOR	1		A		
3-1	402-0602K-21	GASKET,CARBURETOR	1		I i	~G142158	
3	402-0639W-200	SHIELD,HEAT	1		С	G142159~	
6	885-0639W-800	WIRE, THROTTLE	1		С		
7	133-0602K-204	SHIELD,HEAT	1		D		
8	706-0602B-900	MUFFLER,ASS'Y	1		С		
10	739-0602B-200	GASKET, MUFFLER COUPLING	2		В		
11	722-0602B-800	PLATE, MUFFLER PARTITIVE	1		С		
12	740-0602B-201	COLLAR, MUFFLER	2		D		
13	717-0602B-200	BODY,MUFFLER,B	1		D		
14	591-0639W-201	TANK	1		С		
4-		.					
	595-0650A-90		1		A		
	675-04042-80	FILTER,FUEL	1		Α		
	992-01050-011	WASHER,5	1		Α		
24	680-04019-210	CLIP,7	1		В		
	678-0602W-200		1		С		
26	497-32350-200	JOINT,PIPE	1		С		
27	700-03005-110	PIPE,FUEL,3X5X110			в		
		CUSHION, TANK	4		A		
1	653-06000-200	BRACKET,TANK			c		
	431-0602K-200	GASKET,CLEANER			c		
	702-02004-200	COIL, FUEL PIPE			D		
	992-00050-011	WASHER,SMALL,5	2	Ì	c		
					Ŭ		
33	992-10050-012	WASHER,S,5	2		A		
34	990-11050-451	SCREW,5X45	2		c		ĺ
35	992-01050-011	WASHER,5	2		A		
36	992-10050-012	WASHER,S,5	2		A		
37	990-11050-421	SCREW,5X42	2		D		
38	990-11050-141	SCREW,5X14	1		D		
	992-10050-012	WASHER,S,5	1		A		
	599-0602K-200	CUSHION	1		D		
	990-11050-241	SCREW,5X24	2		D		
	992-10050-012	WASHER,S,5	2		A		
43	992-00050-011	WASHER, SMALL, 5	2		С		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER

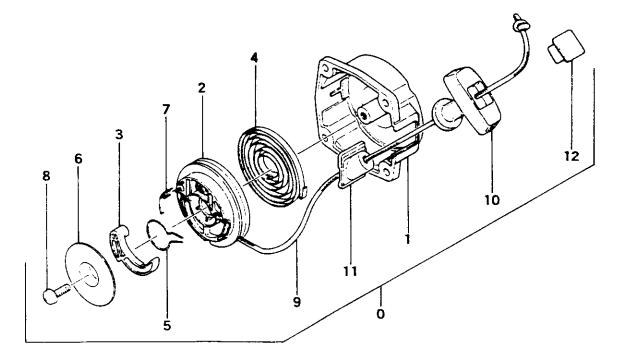


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	762-06150-901	STARTER, RECOIL ASS'Y	1		С		
1	772-06150-200	BODY, RECOIL STARTER	1		D		
2	769-01250-200	PULLEY,STARTER	1		С		
3	788-01250-200	PAWL,STARTER	1		D		
4	779-01250-200	SPRING,RECOIL	1		в		
5	836-06092-200	SPRING, FRICTION	1		D		
6	837-06092-200	PLATE, FRICTION	1		С		
7	832-01250-200	SPRING, RETURN	1		D		
8	990-15050-121	SCREW,5X12	1		Α		
9	783-0162V-200	ROPE,STARTER,3.5X890	1		D		
10	785-06097-200	HANDLE,STARTER	1		С		
11	780-06150-200	GUIDE,ROPE	1		С		
12	795-0602K-200	CAP, STARTER HANDLE	1		D		

FIG.4 AIR CLEANER


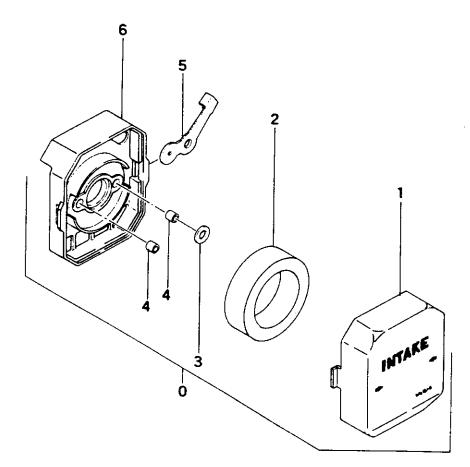


FIGURE 4


REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
0	410-0602D-901	CLEANER, AIR ASS'Y	1		A		
1	424-0602K-201	CAP,CLEANER	1		A		
2	446-0602K-200	ELEMENT, CLEANER	1		c		
3	453-0602K-200	COLLAR	1		c		
4	470-0602K-200	COLLAR	2		D		
5	528-0602D-200	PLATE, CHOKE, 2MM	1		D		
6	423-0602K-000	SET, CLEANER BODY	1		D		

FIG.5 CARBURETOR

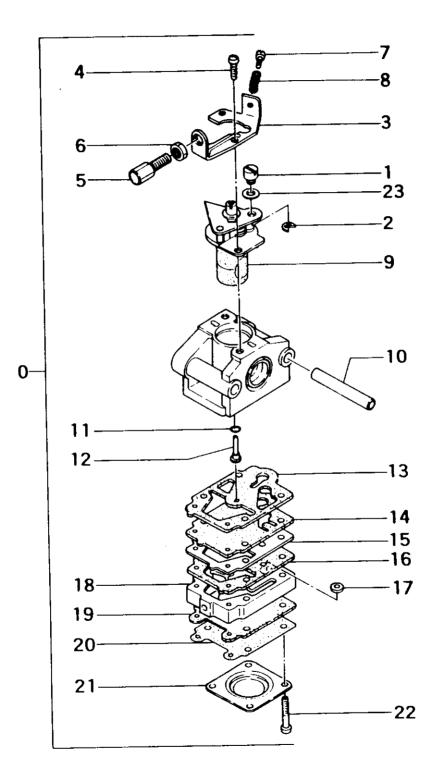

THT-200 PARTS LISTING

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	455-25103-903	CARBURETOR,ASS'Y	1		С		
1	539-25101-200	SWIVEL	1		D		
2	489-25100-200	RING,STOP	1		С		
3	544-25100-200	STAY,ADJUST	1		D		
4	514-25100-200	SCREW, THROTTLE SET	2		D		
5	894-01401-201	RECEIVER,OUTER	1		В		
6	991-01060-013	NUT,6	1		В		
7	462-25100-20	SCREW, IDLE ADJUST	1		D		
8	463-25100-200	SPRING,IDLE ADJUST	1		D		
9	488-25100-800	VALVE,THROTTLE	1		D	~G221000	
9	488-25106-800	VALVE,THROTTLE	1		D	G221001~	
10	437-25100-200	SLEEVE	2		D		
		O-RING	1		С		
		JET,JET,#52	1		С	~G221000	
12	599-2000W-480	JET,MAIN,#48	1		D	G221001~	
13	~~~	*GASKET,PUMP	1		В		* Contained in Carb. Repair Kit
14	~~~	*DIAPHRAGM,PUMP	1		В		650-25100-910
15	523-25100-201	PLATE,PUMP	1		С		(Not availiable individually)
	522-25100-200	PLATE,CIRCUIT	1		С		
17	~~~	*SCREEN,INLET	1		С		
	575-25100-800	BODY,PUMP	1		D		
19	~~~	*GASKET,DIAPHRAGM	1		Α		
20	~~~	*DIAPHRAGM,METERING	1		A		
21	476-25004-200	COVER,DIAPHRAGM	1		D		
		SCREW,SET	4		D		
23	549-25100-200	WASHER,THRUST	1		D		
L							

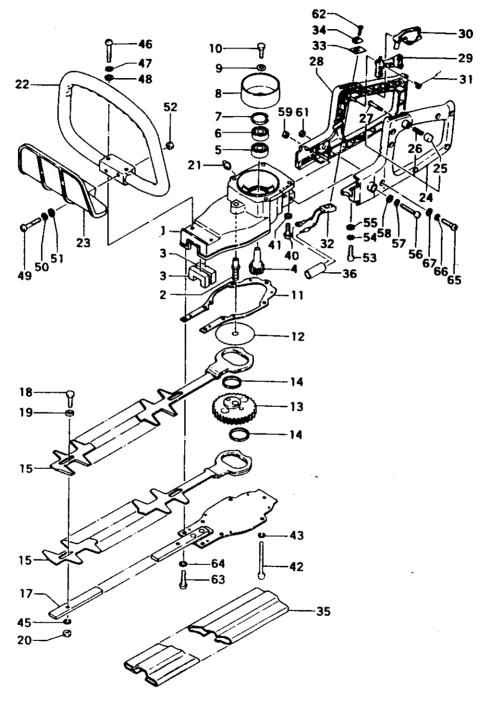



THT-200 PARTS LISTING

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1	300-33150-201	CASE,GEAR	1		С		
2	305-33150-200	SHAFT,GEAR	1		D		
3	085-33150-200	SEAL, GREASE A	2		c		
4	306-33150-200	GEAR,1	1		D		
5	999-61600-000	BEARING,BALL,#6000	1		c		
6	999-61600-003	BEARING,BALL,#6000D	1		c		
		,	1.		Ŭ		
7	993-51026-002	RING,STOP,IN,C-26	1		С		
8	288-0602W-822		1		в		
9	368-32350-200	WASHER, BRAKE SHAFT	1		c		
•	990-21050-106	BOLT,HT,5X10	1		c		
11	303-33150-200	GASKET,GEAR CASE			c		
12	075-33150-200	PLATE, GUIDE			D		
			1				
13	307-33150-200	GEAR,#2	1		D		
	109-33150-200	RING,CAM	2		С		
	CB-19A	BLADE, CUTTER, THT-200	2		Ă		
	122-33150-800	GUIDE,CUTTER			в		
	124-33202-206	BOLT,BLADE,A	4		A		
		WASHER,7	4		A		
					$\left \right $		
20	123-33202-200	NUT,CUTTER FIXING	4		Α		
		NIPPLE,GREASE			D		
	210-33150-801	HANDLE			С		
	052-33150-200	GUARD, HAND			D		
	050-33150-801	HANDLE,A			D		
	725-32600-202	CAP, PUSH PIN			c		
					Ĩ		
26	066-32300-201	SPRING,STOPPER	1		D		
27	064-32530-200	PIN,PUSH	1		c		
28	051-33150-201	HANDLE,B	1		D		
29	230-33150-200	LEVER,THROTTLE	1		D		
30	231-33150-200	LEVER,SAFETY	1	ĺ	D		
31	232-33150-200	SPRING, THROTTLE LEVER	1		D		
32	170-0639W-800	BUTTON,STOP	1		D		
33	925-32530-200	DECAL, STOP BUTTON	1		c		
34	258-11650-20	BUTTON,STOP	1		c		
35	138-33151-200	COVER,CUTTER 19"	1		c		
36	279-11003-005	TUBE, PROTECTION	1		D		
40	990-11050-161	SCREW,5X16	2		в		
	992-10050-012	WASHER,S,5	2		A		
	990-11050-651	SCREW,5X65	2		A		
43	992-10050-012	WASHER,S,5	2		A		
					_		


FIGURE 6 cont.

THT-200 PARTS LISTING

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
45	992-10060-012	WASHER,S,6	4		A		
46	990-11050-351	SCREW,5X35	2		в		
47	992-10050-012	WASHER,S,5	2		C		
48	992-01050-011	WASHER,5	2		Α		
49	990-11050-351	SCREW,5X35	2		в		
50	992-10050-012	WASHER,S,5	2		Α		
	-						
	992-01050-011	WASHER,5	2		С		
52	991-78050-010	NUT,LOCK 5	2		C		
	990-11060-181	SCREW,6X18	1		в		
	992-10060-012	WASHER,S,6	1		А		
	992-01060-011	WASHER,6	1		А		
56	990-11050-451	SCREW,5X45	1		С		
	992-10050-012	WASHER,S,5	1		Α		
	992-00050-011	WASHER,SMALL,5	1		С		
	991-78050-010	NUT,LOCK 5	1		С		
[991-01040-011	NUT,4	7		С		
	990-11030-101	SCREW,3X10	1		в		
63	990-11050-121	SCREW,5X12	5		А		
1	992-10050-012	WASHER,S,5	5		Α		
	990-11040-251	SCREW,4X25	7		C		
66	992-10040-012	WASHER,S,4	7		в		
67	992-00040-011	WASHER,4	7		в		
70	036-29331-501	SPANNER,COMBI	1		D		





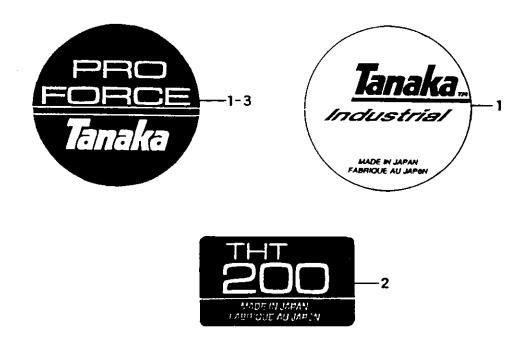

Tanaka. PROFORCE. -3

FIGURE 7	

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1-2	906-0639W-201	DECAL	1		D		
1-3	950-37900-200	DECAL,PRO-FORCE A	1		C		
1	929-3210A-200	DECAL, INDUSTRIAL	1		C		
2	906-33150-200	DECAL,THT-200	1		D		
3	951-37900-200	DECAL,PRO-FORCE	1		D		