## Tanaka<sup>\*</sup>


# Parts Catalog

### **Hedge Trimmer**

Model: THT-230

Serial No. -J243610


FIG. 1 ENGINE

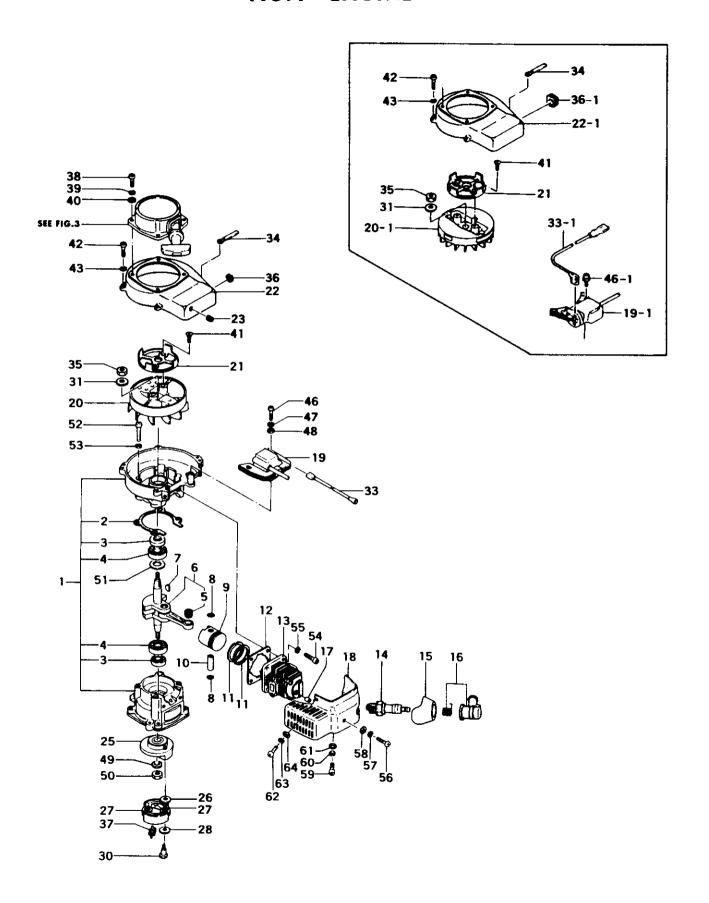

	JER /		/// / 15
REF	NER PARTIER	PARMAME	SERVINER REMARKS
1-001 1-001 1-002 1-003 1-004 1-005	072-0639T-900 072-0639T-910 090-06000-202 999-66122-266 999-61600-100	CRANK CASE ASS'Y CRANK CASE ASS'Y CRANK CASE GASKET OIL SEAL 12227 BALL BEARING #6001, 28MM/OD NEEDLE BEARING F-79	1
1-006 1-006 1-007 1-008 1-009 1-009	046-0639W-802	PISTON	1 R -G076701 G076702- 1 R -G076701 G076702-
1-010 1-011 1-011 1-012 1-013 1-014	002-06092-803	PISTON RING	1 2 I -H242200 H242201-
1-015 1-016 1-017 1-018 1-019,1	157-11666-900 011-0630B-200 738-0632R-201 167-21852-800	SPARK PLUG RUBBER COVER SPARK PLUG CAP ASS'Y CYLINDER COVER COLLAR MUFFLER PROTECTOR IGNITION COIL COMP. IGNITION COIL COMP.	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
1-020	155-20512-800   798-0639W-200   112-0639W-200   112-0639W-210		-G076701 1 N G076702- 1 1 -G076701 1 N G076702- 1 N G076702-
1-025 1-025 1-026 1-027 1-027 1-028	347-0639W-801 359-02103-200 290-00501-802	CLUTCH FLANGE COMP. CLUTCH FLANGE COMP. CLUTCH WASHER B CLUTCH SHOE COMP. CLUTCH SHOE COMP. WASHER	1 R -G076701 G076702- 2 2 N G076702- 2 0 76702-
1-030 1-030 1-031 1-033,1 1-033 1-034	178-0136M-800 178-0639A-800	STEP BOLT STEP BOLT FLYWHEEL WASHER STOP CORD COMP. STOP CORD COMP. CORD CLAMP COMP.	2   N   -G076701   G076702 -
1-035 1-035 1-036,1 1-036 1-037 1-037	327-00201-201	GROMMET  Clutch Spring	1
1-038 1-039 1-040 1-041 1-042 1-043	990-11040-121 992-10040-012 992-01040-011 990-12080-151 990-11050-161 992-10050-012	S.VASHER 4 VASHER 4 F.H. SCREW 6X15 SCREW 5X16	4 4 4 2 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4
1-046,1 1-046 1-047 1-048 1-049	990-11050-201 992-10050-012 992-00050-011 992-10080-012	SCREW 5X20 S.VASHER 5 SMALL VASHER 5	2
1-050 1-051 1-051	330-00200-210	NUT 8 (L.H. THREAD) GEAR SHAFT SHIM 0.10 GEAR SHAFT SHIM 0.15	1


REF	MER			REMARKS
1-051	330-00200-230	GEAR SHAFT SHIN 0.20	V SERVE WER	REM
1-051	330-00200-240 990-11050-301	GEAR SHAFT SHIM 0.30	v 4	
1-054	992-10050-012 990-11050-201	SCREW 5X20	4 4	
1-056 1-057	992-10050-012 990-11050-181 992-10050-012	SCREW 5X18 S.Washer 5	1 1	
1-058	992-01050-011 990-11050-121	WASHER 5		
1-060 1-061	992-10050-012 992-01050-011 990-11040-121	S. WASHER 5 Washer 5		
1-063	992-10040-012 992-01040-011	S. WASHER 4		
	:			
				1
				Ī

#### FIG.2 ENGINE COMPONENTS

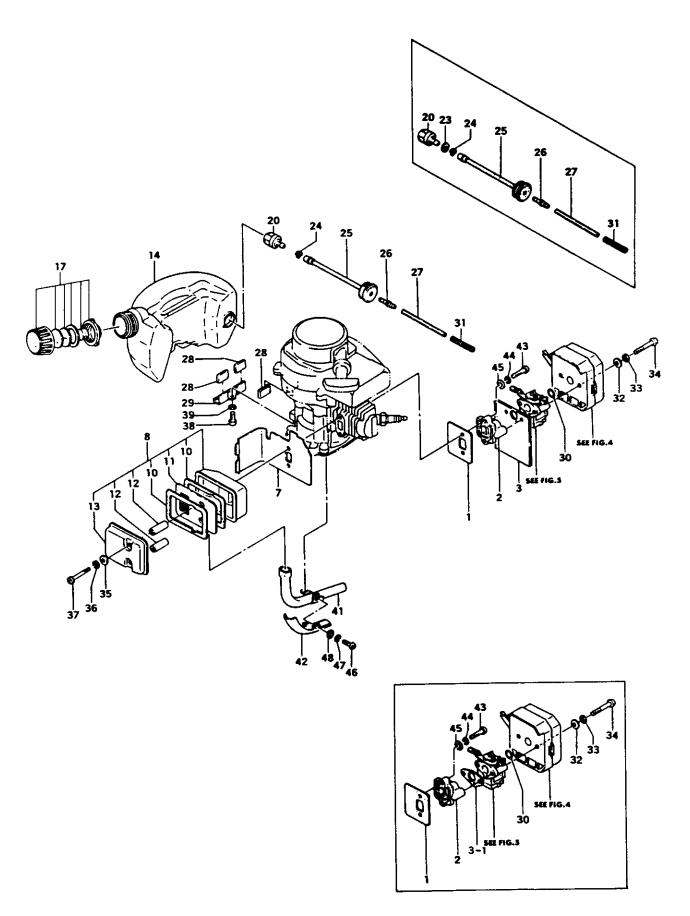


/	-4				- 6
ae.	NER PARTIER	PARTHAME	100	SERVA NER P	EMPRIS
2-001 2-002 2-002 2-003, 1 2-003 2-007	403-0602K-201 404-0639W-801 404-0639W-802 402-0602K-200	INLET MANIFOLD GASKET CARBURETOR INSULATOR COMP. CARBURETOR INSULATOR COMP. CARBURETOR GASKET CARBURETOR GASKET	1 R -G2: 1 R -G2: 1 R -G2:	34770 34771 - 34770 34771 -	
2-008 2-010 2-011 2-012 2-013 2-014	739-0602B-200 722-0602B-800 740-0602B-201	MUFFLER ASS'Y MUFFLER COUPLING GASKET MUFFLER PARTITION PLATE COMP. MUFFLER COLLAR MUFFLER BODY B COMP. TANK	1 2 1 2 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
2-017 2-020 2-020 2-023 2-024 2-025	675-06020-900	CLIP 7	1 G2:	34770 34771- 34771-	
2-026 2-027 2-028 2-029 2-030 2-031	655-06100-200 653-06000-200 431-0602K-200	PIPE JOINT FUEL PIPE 3X5X110 FUEL TANK CUSHION RUBBER FUEL TANK BRACKET AIR CLEANER GASKET FUEL PIPE COIL	1 1 4 1 1 1		
2-032 2-033 2-034 2-034 2-035 2-036	992-00050-011 992-10050-012 990-11050-701 990-11050-451 992-01050-011 992-10050-012	SCREW 5X70 SCREW 5X45 WASHER 5	2 2 2 2 2 2 2 2 2		
2-037 2-038 2-039 2-041 2-042 2-043		SCREW 5X14 S.WASHER 5 TAIL PIPE COMP. MUFFLER PROTECTOR B	2 1 1 1 1 1 2 N		
2-043 2-044 2-045 2-046 2-047 2-048	990-11050-241 992-10050-012 992-00050-011 990-11040-101 992-10040-012 992-01040-011	S. WASHER 5 SMALL WASHER 5 SCREW 4X10 S. WASHER 4	2 2 2 2 1 1		

#### FIG.3 RECOIL STARTER

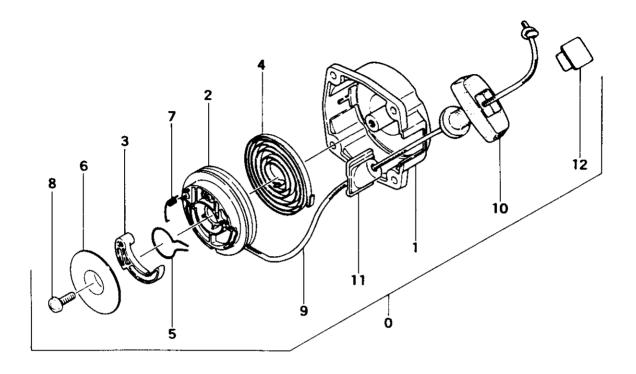


REF	NER PARTER	PARNAME	SERIA NER REMARKS
3-000		RECOIL STARTER BODY ASS'Y	1
3-001 3-002		RECOIL STARTER BODY STARTER ROPE REEL	
3-003	788-01250-200	STARTER PAVL	
3-004	779-01250-200	RECOIL SPRING  FRICTION SPRING	
3-005	836-06092-200	FRICTION SPRING	
3-006		FRICTION PLATE	
3-007	832-01250-200		
3-008 3-009	990-15050-121		
3-010		STARTER HANDLE	
3-011	780-06150-200	ROPE GUIDE	
3-012	795-0602K-200	STARTER HANDLE CAP	1

#### FIG.4 AIR CLEANER

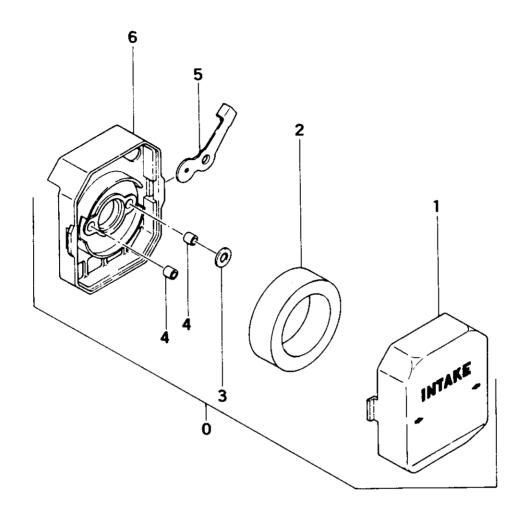


RES	HER PARTIER	PARMANE	SERIANDER REMARKS
4-000 4-001 4-002 4-003 4-004	424-0602K-201		
4-005	528-0602D-200 423-0602K-210	CHOKE PLATE, V/2NN HOLE	

#### FIG.5 CARBURETOR

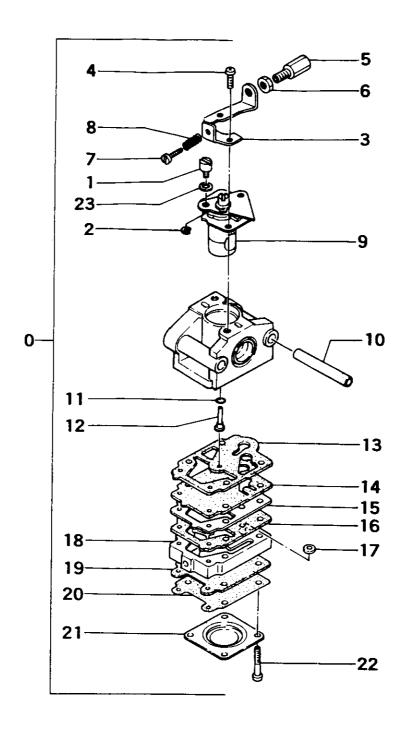


/	<u>a</u> /		
REF	MER	CARBURETOR ASS'Y WY-84	SE SERVINER REMARKS
5-000 5-000 5-000 5-000 5-001 5-001	455-25102-901 455-25102-902 455-25102-902	CARBURETOR ASS'Y WY-8B CARBURETOR ASS'Y WY-8B CARBURETOR ASS'Y WY-8C SWIVEL	1 P -G234770 -H020391 1 R -H020391 H020392-
5-002 5-003 5-004 5-005 5-006 5-007	514-25100-200 614-25100-200 613-25100-200	STOP RING ADJUSTER STAY THROTTLE SET SCREW CABLE ADJUSTER CABLE ADJUST NUT IDLE ADJUST SCREW	1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
5-008 5-009 5-009 5-010 5-011 5-012	488-25100-800	O-RING	1 1 N -G234770 G234771-
5-012 5-012 5-012 5-012 5-013 5-014	599-2000W-460 599-2000W-460 599-25100-248 599-2000W-480 577-25100-200 576-25100-200	MAIN JET #46 MAIN JET #48 MAIN JET #48	1 N -H020391 1 N -H020391 1 N H020392-
5-015 5-016 5-017 5-017 5-018 5-019	578-25001-200 578-25007-200 575-25100-800	CIRCUIT PLATE INLET SCREEN	1 1 1 R -G234770 G234771-
5-020 5-021 5-021 5-022 5-022 5-023	476-25004-200 476-25006-200 548-25101-200 548-25100-200		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

FIG.6 GEAR CASE & CUTTER

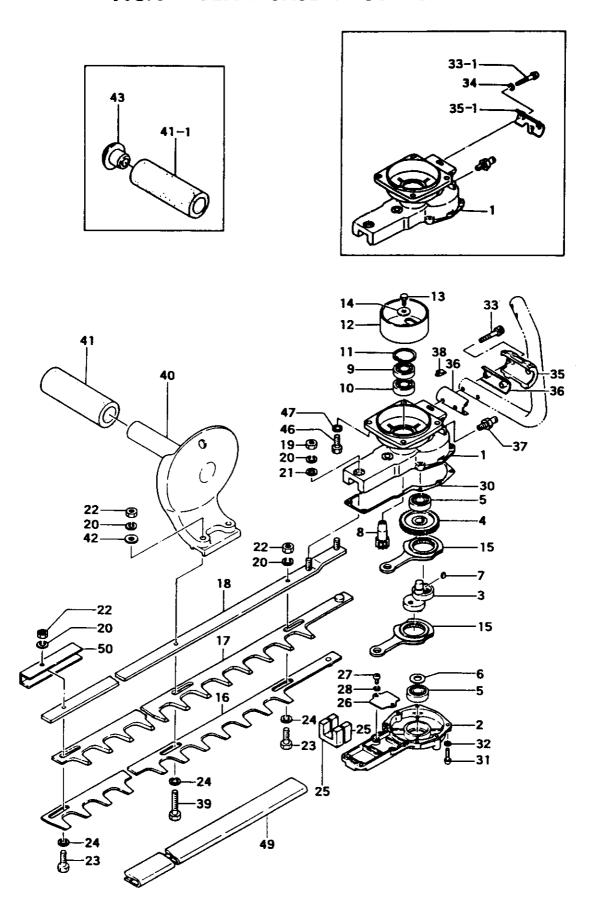


OE!	MER CARINER	PARTIANE	SE SECHNING REMARKS
6-001 8-001 6-002 6-003 6-004 6-005	300-33230-210 300-33230-220 301-33230-200 100-33210-203 307-33230-200	GEAR CASE A GEAR CASE A GEAR CASE B CAN SHAFT	1   -G234770 1   M   G234771- 1   1 2   -G234771-
6-006 6-006 6-006 6-007 6-008 6-009	016-35100-201 022-35100-200 068-00300-200 306-33230-210	SHAFT SHIM 0.1 (9.3X18) SHAFT SHIM 0.2 (9.3X18) SHAFT SHIM 0.3 (9.3X18) WOOD-RUFF KEY 3X10X3.7 GEAR 1 BALL BEARING 6000D, 26MM/OD	V V V V 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
6-010 6-011 6-012 6-013 6-014 6-015	993-51026-002 288-0602W-821 990-21050-106 368-32350-200	BALL BEARING #6000, 26NM/OD STOP RING C-26 IN CLUTCH DRUM COMP. H.T. BOLT 5X10 BRAKE SHAFT WASHER CAM ROD COMP.	
6-016 6-017 6-018 6-019 6-020 6-021	121-33202-203	S. VASHER 6	1 1 1 2 7 7 2 7 2 7 9 9 9 9 9 9 9 9 9 9 9 9 9
6-022 6-023 6-024 6-025 6-026 6-027	124-33202-206 129-33202-201 085-33230-200	GREASE SEAL A CAN ROD GUIDE PLATE	5 4 5 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2
6-028 6-030 6-031 6-032 6-033,1 6-033	990-11040-161 992-10040-012 990-11050-271	GEAR CASE GASKET SCREW 4X16 S.WASHER 4	2 1 6 6 2 2 N G234770 G234771-
6-034 6-035,1 6-035 6-036 6-036	057-33250-200 060-33250-200 060-33250-200	S.WASHER 5 HANDLE HOLDER HANDLE HOLDER DAMPER RUBBER DAMPER RUBBER DAMPER RUBBER	2 D G234771- 1 -G234770 1 N G234771- 2 N G234771- 2 H161320 P H161321-
6-037 6-038 6-039 6-040 6-041,1	176-33410-200 125-33202-205 051-33210-820		1
6-042 6-043 6-046 6-047 6-049 6-050	992-10060-012 138-33215-202	GROWNET PLUS BOLT 6X16	1 D H242201-

#### FIG.7 HANDLE

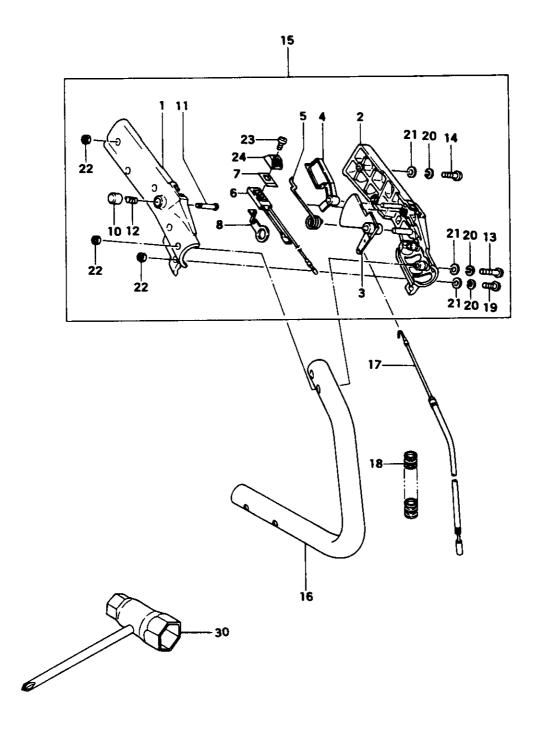

_	AP /		/// 15
REF.	PARNER	PARTHAME	SERVINER REMARKS
7-001 7-002 7-003 7-004 7-005	053-33231-220 054-33231-220 230-33210-201 231-33210-200 061-32600-201	HANDLE GRIP A HANDLE GRIP B THROTTLE LEVER	1 1 1 1 1 1 1
7-008 7-010 7-011 7-012	319-37900-200 725-32600-202 064-32530-200	PUSH PIN STOPPER SPRING	1 1 1 1 1 2
7-015 7-016 7-016 7-017	050-33250-201 050-33250-210 885-0639T-800	HANDLE GRIP ASS'Y HANDLE A	1
7-019 7-020 7-021 7-022	990-11040-141 992-10040-012	S.WASHER 4 SMALL WASHER 4 U-NUT 4	1 3 6 6 6 6 1 1
7-024 7-030	258-11600-200 036-29331-501	BUTTON STOP COMBI. BOX SPANNER 10X19 ,PLUS	

#### FIG.8 MARKS

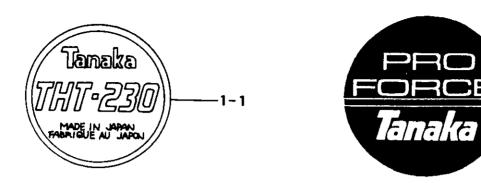



## Tanaka. PROFORCE.

REF. NER PARTIER		PARTAME	SET SERIAMER REMARKS
8-002 906-33260-200	PROFORCE MARK		1