



Parts List for TV300 Type 2

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	000000-00	No Longer Available	1
3	385682-00	GEAR	1
4	330016-09	WASHER	1
5	385681-00	FRONT BRG PLATE	1
6	283186-00	CHUCK & KEY	1
7	000000-00	No Longer Available	1
8	385988-00	GEAR & PINION	1
9	000000-00	No Longer Available	1
10	037653-00	RING, RETAINING	1
11	148902-00	WASHER,PLAIN	1
12	158478-00	SINK,HEAT	1
13	037381-00	WASHER	1
14	385849-00	FIELD	1
15	385995-01	REVERSE RING	1
16	606398-00	REVERSE LEVER	1
17	385623-03	VSR SWITCH	1
18	330073-98	CORD/8 FT/18-2	1
19	385693-00	CORD PROTECTOR	1
20	380414-00	CLAMP,CORD	1
21	330019-03	SCREW	10
22	330019-08	SCREW	2
23	000000-00	No Longer Available	1
24	000000-00	No Longer Available	1
25	385733-01	BRUSH	2
28	389818-00	FELT WASHER	1
30	330034-00	KEY,CHUCK	1