



Operating Instructions and Parts Manual

18-inch Metal/Wood Cutting Band Saw

Model VBS-18MW




JET

427 New Sanford Road
LaVergne, TN 37086-4184, USA
Ph.: 800-274-6848
www.jettools.com

Part No. M-414418
Revision C1 01/2016
(ECR TW0126)
Copyright © 2016 JET


17.1.1 Upper Wheel Assembly

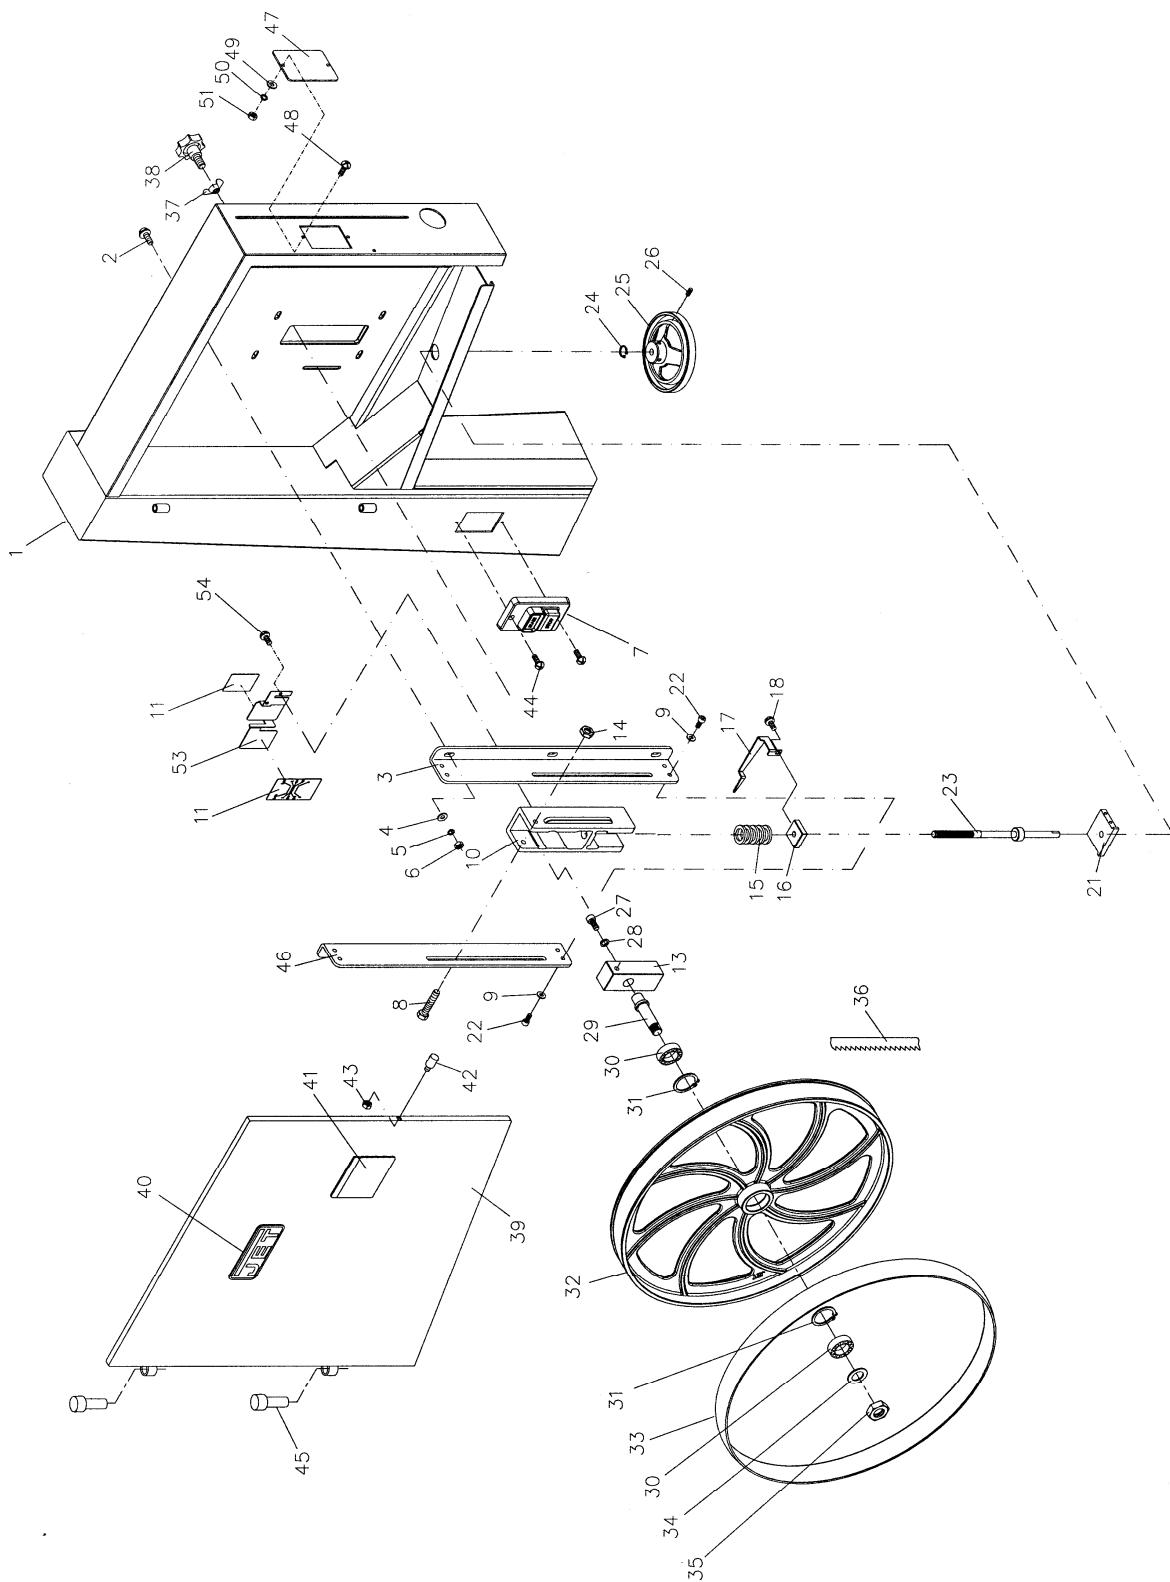

17.1.2 Parts List: Upper Wheel Assembly

Index No.	Part No.	Description	Size	Qty
1.....	VBS18MW-101G	Saw Body		1
2.....	TS-0152011	Carriage Bolt	5/16-18x1	6
3.....	JWBS18DX-103.....	Upper Wheel Bracket (Right Side)		1
4.....	TS-0680031	Flat Washer	5/16	6
5.....	TS-0720081	Lock Washer	5/16	6
6.....	TS-0561021	Hex Nut	5/16-18	6
7.....	JWBS18-107.....	Switch		1
8.....	TS-1490151	Hex Cap Screw	M8x80	1
9.....	TS-0680021	Flat Washer	1/4	4
10.....	JWBS18DX-110.....	Sliding Bracket		1
11.....	VBS18MW-111	Blade Tension Indicator		2
13.....	JWBS18DX-113.....	Shaft Bracket		1
14.....	TS-1540061	Hex Nut	M8	1
15.....	JWBS18-115.....	Spring		1
16.....	JWBS18-116.....	Square Nut		1
17.....	JWBS18DX-117.....	Pointer		1
18.....	JWBS18-118.....	Screw	M5x8	1
21.....	JWBS18DX-121.....	Bracket		1
22.....	TS-0050021	Hex Cap Screw	1/4-20x5/8	4
23.....	JWBS18DX-123.....	Blade Adjusting Screw		1
24.....	JWBS18-124.....	E-Ring	E-9	1
25.....	JWBS18-125.....	Hand Wheel		1
26.....	TS-0267041	Set Screw	1/4-20x3/8	2
27.....	TS-0209021	Socket Head Cap Screw	3/8-16x5/8	1
28.....	TS-0720091	Lock Washer	3/8	1
29.....	JWBS18-129.....	Upper Wheel Shaft		1
30.....	BB-6203ZZ	Ball Bearing	6203ZZ	2
31.....	JWBS18-131.....	Retaining Ring	R40	2
32.....	JWBS18-132.....	Upper Wheel		1
33.....	JWBS18DX-133.....	Tire		1
34.....	JWBS18-134.....	Flat Washer		1
35.....	JWBS18-135.....	Hex Nut	5/8-18UNF L.H.	1
36.....	Blade (<i>local purchase</i>)	137"	1
37.....	TS-0590061	Wing Nut	5/16-18	1
38.....	JWBS18-138.....	Lock Knob	5/16	1
39.....	JWBS18DX-139G	Upper Front Door		1
40.....	JET-165	JET Logo with 3M adhesive	165X68mm	1
41.....	JWBS18-141.....	Warning Label		1
42.....	JWBS18-142.....	Bolt		1
43.....	TS-0561011	Hex Nut	1/4-20	1
44.....	TS-081C052	Screw	#10-24x3/4	2
45.....	JWBS18-39A	Door Hinge Pin		2
46.....	JWBS18DX-146.....	Upper Wheel Bracket (Left Side)		1
47.....	JWBS18DX-147.....	Tracking Window		1
48.....	TS-081C032	Screw	#10-24x1/2	2
49.....	TS-1550031	Flat Washer	M5	2
50.....	TS-2361051	Lock Washer	M5	2
51.....	TS-0560071	Hex Nut	#10-24	2
53.....	JWBS18DX-153G	Scale Bracket		1
54.....	TS-081C022	Screw	#10-24x3/8	2

17.2.1 Lower Wheel and Motor Assembly

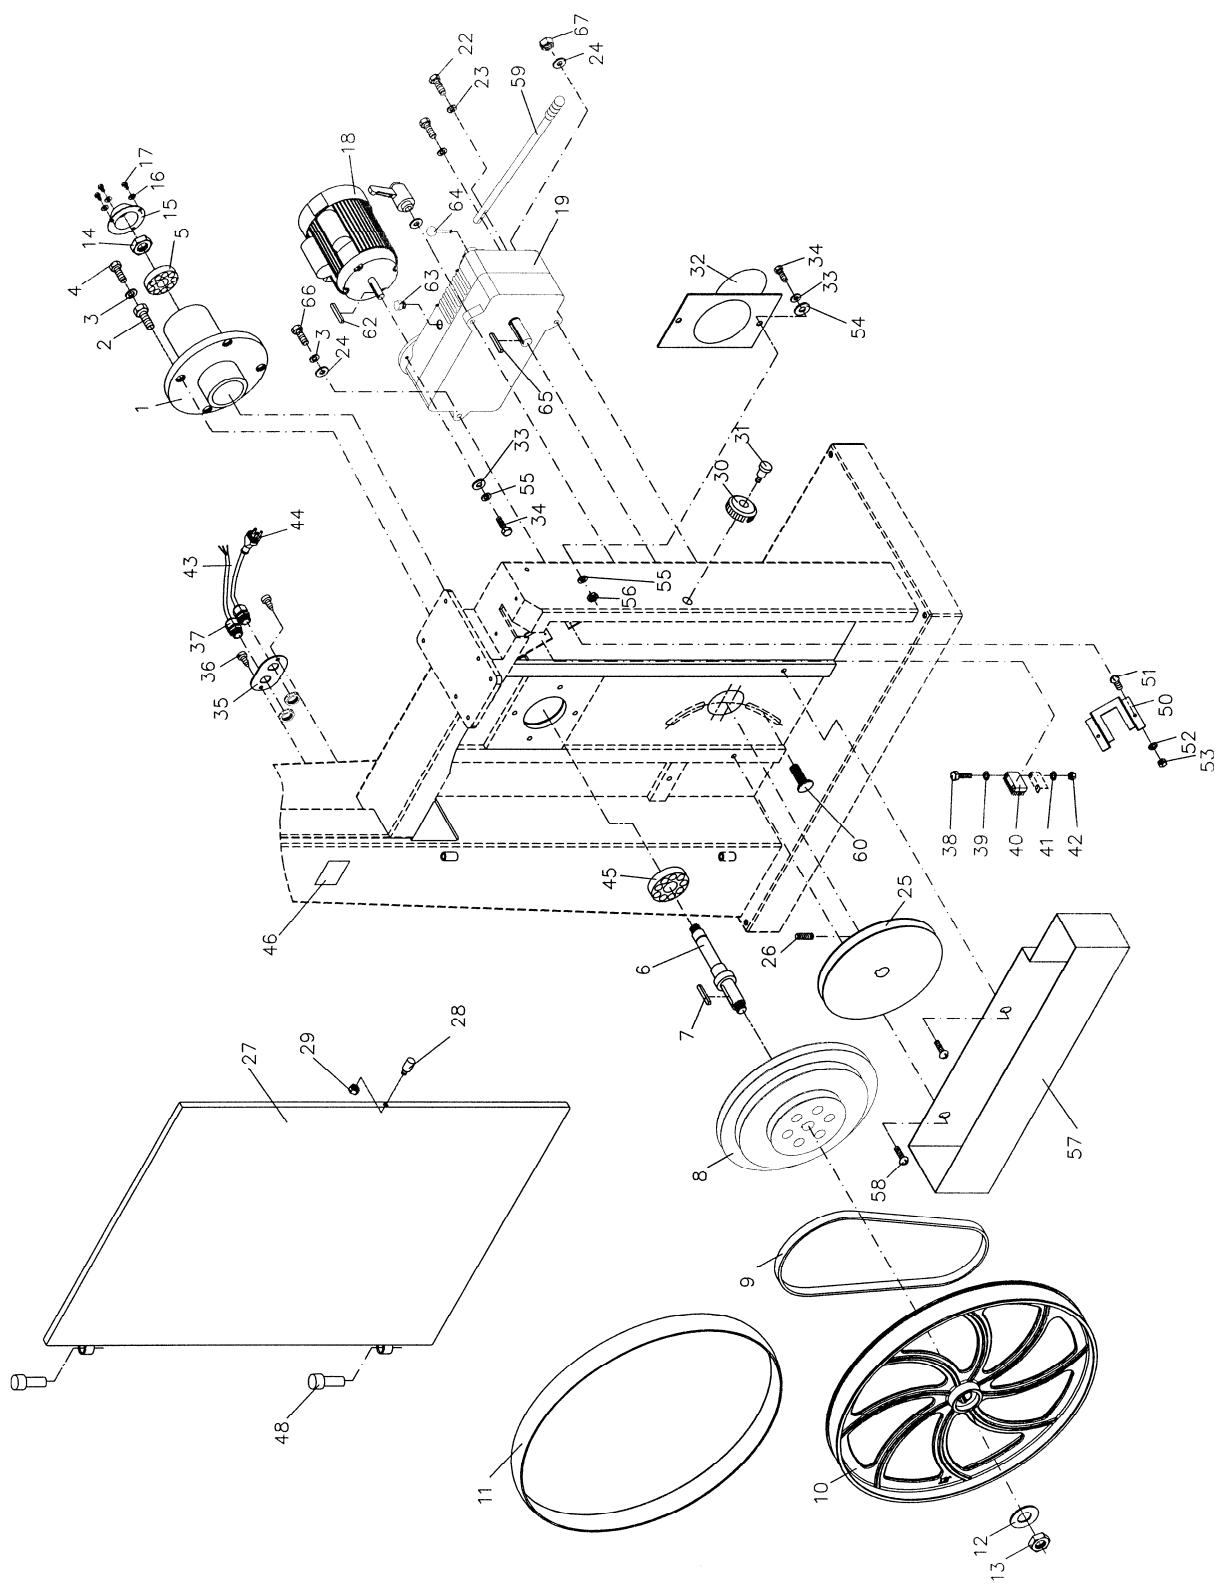


17.2.2 Parts List: Lower Wheel and Motor Assembly

Index No.	Part No.	Description	Size	Qty
1.....	JWBS18-201N.....	Bearing Base.....		1
2.....	JWBS20-62.....	Adjusting Bolt.....		4
3.....	TS-0720091.....	Lock Washer	3/8.....	5
4.....	TS-0060081.....	Hex Cap Screw	3/8-16x1-3/4	4
5.....	BB-6204ZZ	Ball Bearing.....	6204ZZ.....	1
6.....	VBS18MW-206.....	Spindle.....		1
7.....	VBS18MW-207.....	Key	7x7x65	1
8.....	VBS18MW-208.....	Spindle Pulley		1
9.....	VB-B48	V-Belt.....	B-48	1
10.....	JWBS18-210.....	Lower Wheel		1
11.....	JWBS18DX-133.....	Tire		1
12.....	TS-0680081.....	Flat Washer.....	5/8.....	1
13.....	JWBS18-135.....	Hex Nut.....	5/8-18UNF L.H.	1
14.....	JWBS18-214.....	Hex Nut.....	5/8-18UNF R.H.	1
15.....	JWBS18-215.....	Bearing Cover		1
16.....	TS-0720051.....	Lock Washer	#10.....	3
17.....	TS-081C022	Screw.....	#10-24x3/8	3
18.....	VBS18MW-218.....	Motor.....	1-1/2HP, 1PH, 115/230V....	1
	JWBS18X-MFC.....	Motor Fan Cover (not shown)		1
	VBS18MW-218MF	Motor Fan (not shown)		1
	VBS18MW-218CS	Centrifugal Switch (not shown)		1
	VBS18MW-218SC.....	Starting Capacitor Cover (not shown)		1
	VBS18MW-218RCC.....	Running Capacitor Cover (not shown)		1
	VBS18MW-218SC	Starting Capacitor (not shown)	200MFD, 125VAC	1
	VBS18MW-218RC	Running Capacitor (not shown).....	40μF, 250VAC	1
	VBS18MW-218JB	Junction Box (not shown)		1
	VBS18MW-218JBC.....	Junction Box Cover (not shown)		1
19.....	VBS18MW-219.....	Gear Box Assembly.....		1
22.....	TS-0050051.....	Hex Cap Screw	1/4-20x1	2
23.....	TS-0720071.....	Lock Washer	1/4.....	2
24.....	TS-0680041.....	Flat Washer.....	3/8.....	3
25.....	VBS18MW-225.....	Motor Pulley		1
26.....	TS-0270031.....	Set Screw.....	5/16-18x3/8	2
27.....	JWBS18DX-227G	Lower Front Door		1
28.....	JWBS18-142.....	Bolt		1
29.....	TS-0561011.....	Hex Nut	1/4-20	1
30.....	JWBS20-2	Lock Knob		1
31.....	TS-081F052.....	Screw	1/4-20x3/4	1
32.....	JWBS20-8G.....	Dust Chute		1
33.....	TS-0680031.....	Flat Washer	5/16.....	6
34.....	TS-0051051.....	Hex Cap Screw	5/16-18x1	6
35.....	JWBS18-235.....	Plate		1
36.....	TS-081C032	Screw	#10-24x1/2	2
37.....	JWBS18-237.....	Strain Relief Bushing.....		2
38.....	TS-081C082	Screw	#10-24x1-1/2	2
39.....	TS-1550031.....	Flat Washer	M5.....	2
40.....	JWBS18-240.....	Brush		1
41.....	TS-2361051.....	Lock Washer	M5.....	2
42.....	TS-0560071.....	Hex Nut	#10-24	2
43.....	JWBS18-243.....	Motor Cord		1
44.....	JWBS18-244.....	Power Cord		1
45.....	BB-6205ZZ	Ball Bearing.....	6205ZZ	1
46.....	VBS18MW-246.....	ID Label		1
48.....	JWBS18-39A.....	Door Hinge Pin		2
50.....	JWBS18DX-250G	Shelf		1

Index No.	Part No.	Description	Size	Qty
51.....	TS-081C032	Screw.....	#10-24x1/2	2
52.....	TS-1550031	Flat Washer.....	M5.....	2
53.....	TS-0560071	Hex Nut.....	#10-24.....	2
54.....	JWBS18DX-254.....	Plastic Washer	5/16.....	1
55.....	TS-0720081	Lock Washer	5/16.....	6
56.....	TS-0561021	Hex Nut.....	5/16-18.....	2
57.....	VBS18MW-257G	Lower Chip Tray.....		1
58.....	TS-081F032.....	Pan Head Screw	1/4-20x1/2	2
59.....	VBS18MW-259	Handle		1
60.....	TS-0160021	Carriage Bolt	3/8-16x1-1/2	2
61.....	VBS18MW-261	Lock Handle		1
62.....	VBS18MW-262	Key	6x6x40	1
63.....	VBS18MW-263	Plug		1
64.....	VBS18MW-264	Handle		1
65.....	VBS18MW-265	Key	6x6x45	1
66.....	TS-0060091	Hex Cap Screw	3/8-16x2	1
67.....	TS-0640091	Nylon Lock Hex Nut.....	3/8-16.....	1

17.3.1 Blade Guide Assembly

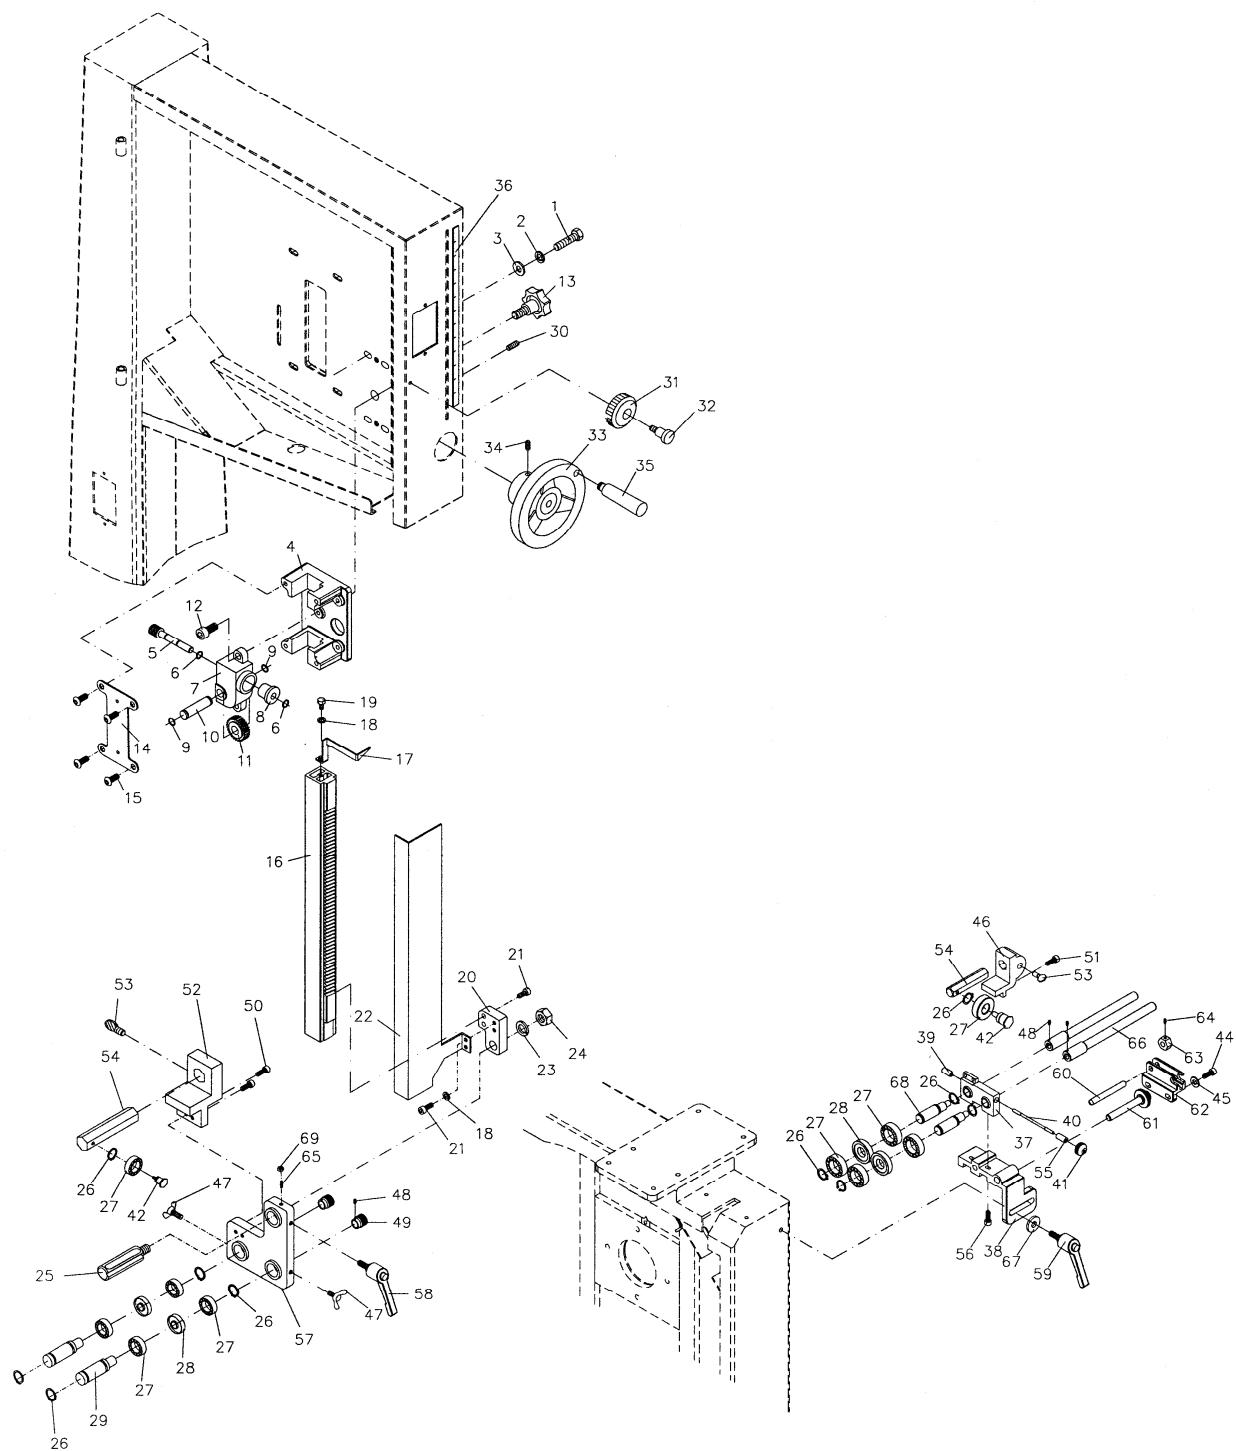


17.3.2 Parts List: Blade Guide Assembly

Index No.	Part No.	Description	Size	Qty
1.....	TS-0051051.....	Hex Cap Screw5/16-18x1	4
2.....	TS-0720081.....	Lock Washer5/16.....	4
3.....	TS-0680031.....	Flat Washer.....	.5/16.....	8
4.....	JWBS18DX-304.....	Guide Bar Bracket		1
5.....	JWBS18-305.....	Worm		1
6.....	JWBS18-306.....	E-Ring.....	E-8	2
7.....	JWBS18-307.....	Gear Base		1
8.....	JWBS18-308.....	Bushing		1
9.....	JWBS18-309.....	C-Ring.....	S-12	2
10.....	JWBS18-310.....	Shaft		1
11.....	JWBS18-311.....	Gear		1
12.....	TS-0208071.....	Socket Head Cap Screw5/16-18x1-1/4	2
13.....	JWBS18-313.....	Lock Knob5/16.....	1
14.....	JWBS18DX-314.....	Plate		1
15.....	TS-0255021.....	Button Head Socket Screw.....	.5/16-18x1/2	4
16.....	JWBS18DX-316.....	Guide Bar		1
17.....	JWBS18DX-317.....	Pointer		1
18.....	TS-0720071.....	Lock Washer1/4.....	3
19.....	TS-0050011.....	Hex Cap Screw1/4-20x1/2	1
20.....	JWBS18-320N.....	Guide Bracket		1
21.....	TS-0207021.....	Socket Head Cap Screw1/4-20x1/2	4
22.....	JWBS18X-322R.....	Blade Guard		1
23.....	TS-0720111.....	Lock Washer1/2.....	1
24.....	TS-0561051.....	Hex Nut1/2-13.....	1
25.....	JWBS18DX-325.....	Locking Shaft		1
26.....	JWBS20-326.....	C-Ring		10
27.....	BB-6202ZZ.....	Ball Bearing6202ZZ	10
28.....	JWBS20-328.....	Spacer		4
29.....	JWBS20-329.....	Shaft		2
30.....	TS-0270031.....	Set Screw5/16-18x3/8	2
31.....	JWBS20-2.....	Lock Knob		1
32.....	TS-081F052.....	Screw1/4-20x3/4	1
33.....	JWBS18-333.....	Hand Wheel		1
34.....	TS-0267041.....	Set Screw1/4-20x3/8	1
35.....	JWBS20-103A.....	Handle		1
36.....	JWBS18DX-336.....	Cutting Height Scale		1
37.....	JWBS18DX-337.....	Bracket		1
38.....	JWBS18DX-338.....	Base		1
39.....	JWBS20-339.....	Threaded Lock Bushing		1
40.....	JWBS20-340.....	Bolt		1
41.....	JWBS18DX-341.....	Lock Knob		1
42.....	JWBS20-342.....	Screw		2
44.....	TS-0207041.....	Socket Head Cap Screw1/4-20x3/4	2
45.....	TS-0680021.....	Flat Washer1/4.....	2
46.....	JWBS20-360.....	Bracket		1
47.....	JWBS20-324.....	Wing Screw		2
48.....	TS-1521011.....	Set Screw	M4 x 4	8
49.....	JWBS20-349.....	Knob		2
50.....	TS-0207031.....	Socket Head Cap Screw1/4-20x5/8	2
51.....	TS-0207021.....	Socket Head Cap Screw1/4-20x1/2	2
52.....	JWBS20-352.....	Bracket		1
53.....	JWBS20-353.....	Thumb Screw1/4-20x1/2	2
54.....	JWBS20-354.....	Bearing Support		2
55.....	JWBS20-355.....	Lock Bushing		1
56.....	TS-0206021.....	Socket Head Cap Screw	#10-24x1/2	2

Index No.	Part No.	Description	Size	Qty
57.....	JWBS18DX-357.....	Bearing Bracket.....		1
58.....	6295293.....	Locking Handle		1
59.....	JWBS18DX-359.....	Locking Handle		1
60.....	JWBS18DX-360.....	Shaft		1
61.....	JWBS18DX-361.....	Adjusting Screw		1
62.....	JWBS18DX-362.....	Adjusting Bracket		1
63.....	JWBS18DX-363.....	Nut		1
64.....	TS-0267021	Set Screw.....	1/4-20x1/4	1
65.....	JWBS18DX-365.....	Set Screw, Special		1
66.....	JWBS18DX-366.....	Adjustment Handle.....		2
67.....	TS-0680031	Flat Washer.....	5/16.....	1
68.....	JWBS20-329A	Lower Shaft.....		2
69.....	TS-0561011	Hex Nut.....	1/4-20.....	1

17.4.1 Table and Fence Assembly

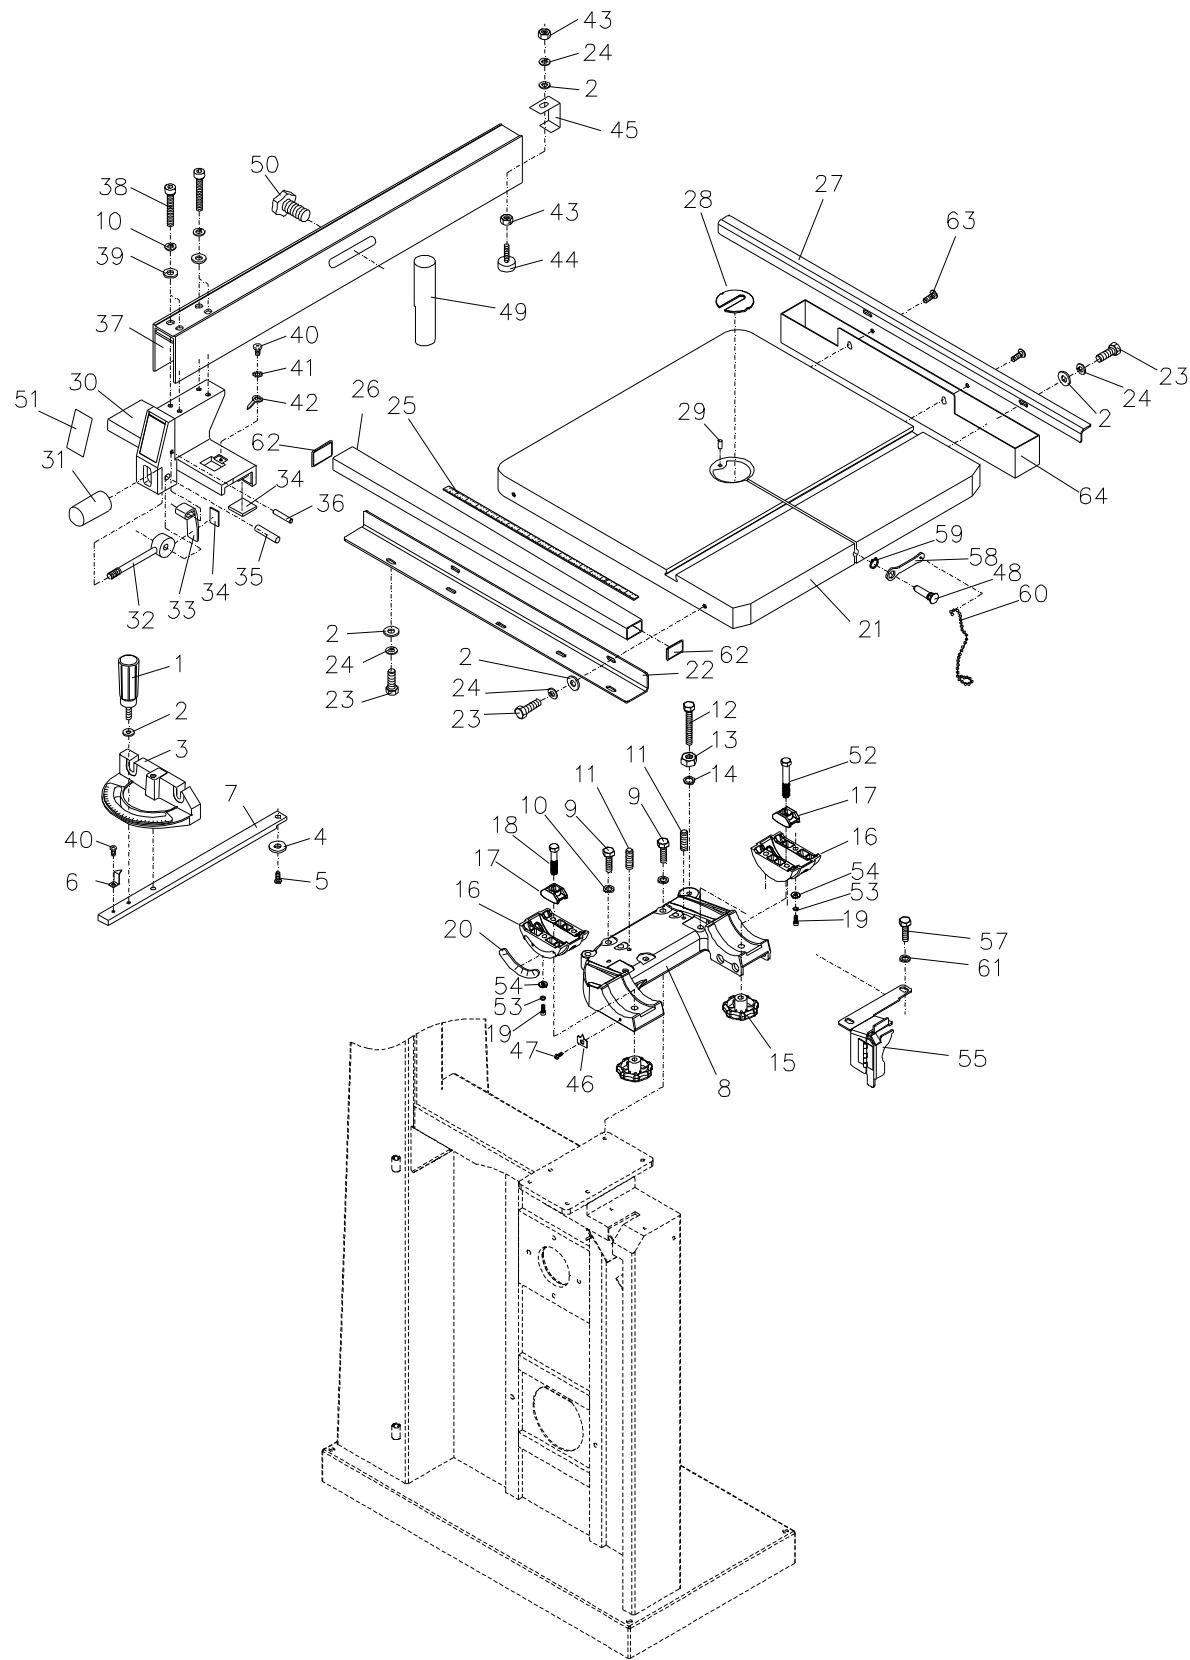

17.4.2 Parts List: Table and Fence Assembly

Index No.	Part No.	Description	Size	Qty
1.....	JWBS18-401.....	Lock Handle		1
2.....	TS-0680021.....	Flat Washer.....	1/4.....	11
3.....	JWBS18-403.....	Miter Gauge Body		1
4.....	JWBS20-156.....	Guide Disc		1
5.....	JWBS18-405.....	Screw.....	M6x8.....	1
6.....	JWBS18-406.....	Pointer		1
7.....	JWBS18-407.....	Guide Bar.....		1
8.....	JWBS18DX-408.....	Trunnion Support Bracket.....		1
9.....	TS-0051071.....	Hex Cap Screw	5/16-18x1-1/2	4
10.....	TS-0720081.....	Lock Washer	5/16.....	8
11.....	TS-0270061.....	Set Screw.....	5/16-18x5/8	2
12.....	TS-0060111.....	Hex Cap Screw	3/8-16x2-1/2	1
13.....	TS-0561031.....	Hex Nut	3/8-16.....	1
14.....	TS-0720091.....	Lock Washer	3/8.....	1
15.....	JWBS18-415.....	Lock Knob		2
16.....	JWBS18X-416.....	Trunnion		2
17.....	JWBS18-417.....	Trunnion Clamp Shoe.....		2
18.....	TS-1491081.....	Hex Cap Screw	M10x50	1
19.....	TS-1503041.....	Socket Head Cap Screw.....	M6x16	6
20.....	JWBS18-420.....	Scale.....		1
21.....	VBS18MW-421.....	Table.....		1
22.....	JWBS18-422G.....	Front Rail		1
23.....	TS-0050021.....	Hex Cap Screw	1/4-20x5/8	9
24.....	TS-0720071.....	Lock Washer	1/4.....	10
25.....	JWBS18-425.....	Scale		1
26.....	JWBS18-426G.....	Guide Rail		1
27.....	VBS18MW-427G.....	Rear Rail.....		1
28.....	JWBS20-144.....	Table Insert		1
29.....	JWBS20-145.....	Roll Pin	3x10	1
30.....	JWBS18-430.....	Fence Body		1
31.....	JWBS18-431.....	Knob		1
32.....	JWBS18-432.....	Lock Handle		1
33.....	JWBS18-433W.....	Lock Plate		1
34.....	JWBS18-434.....	Pad		5
35.....	JWBS18-435.....	Pin		1
36.....	JWBS18-436.....	Pin		1
37.....	JWBS18-437EA.....	Fence		1
38.....	TS-0208041.....	Socket Head Cap Screw	5/16-18x3/4	4
39.....	TS-0680031.....	Flat Washer.....	5/16.....	4
40.....	TS-0810012.....	Screw	#10-24x1/4	2
41.....	TS-0733031.....	External Tooth Lock Washer.....	#10.....	1
42.....	JWBS18-442.....	Pointer		1
43.....	TS-0561011.....	Hex Nut	1/4-20	2
44.....	JWBS18-444.....	Sliding Pad		1
45.....	JWBS18-445.....	Rear Hook		1
46.....	JWBS18-446.....	Pointer		1
47.....	JWBS18-447.....	Screw	M5x8	1
48.....	JWBS18DX-448.....	Table Pin		1
49.....	JWBS18-449E.....	Resaw Post		1
50.....	JWBS18-450.....	Lock Knob		1
51.....	JWBS18-451.....	JET Fence Label		1
52.....	TS-2210651.....	Hex Cap Screw	M10x65	1
53.....	TS-1551041.....	Lock Washer	M6.....	6
54.....	TS-1550041.....	Flat Washer	M6.....	6
55.....	JWBS18DX-455G.....	Lower Blade Guard		1

Index No.	Part No.	Description	Size	Qty
57	TS-0051091	Hex Cap Screw	5/16-18x2	2
58	40-0260	Wrench		1
59	JWBS18DX-459	C-Ring	S-10	1
60	JWBS18DX-460	Link Chain		1
61	TS-0680031	Flat Washer	5/16	2
62	2013-285	End Cover		2
63	TS-081F032	Pan Head Screw	1/4-20x1/2	2
64	VBS18MW-464G	Upper Chip Tray		1
	JWBS18-MGCP	Miter Gauge Assembly		1
	VBS18MW-FCPA	Fence/Rails Assembly		1

18.0 Electrical Connections

