

# RYOBI TILE SAW - MODEL NUMBER WS720S

## FIGURE A


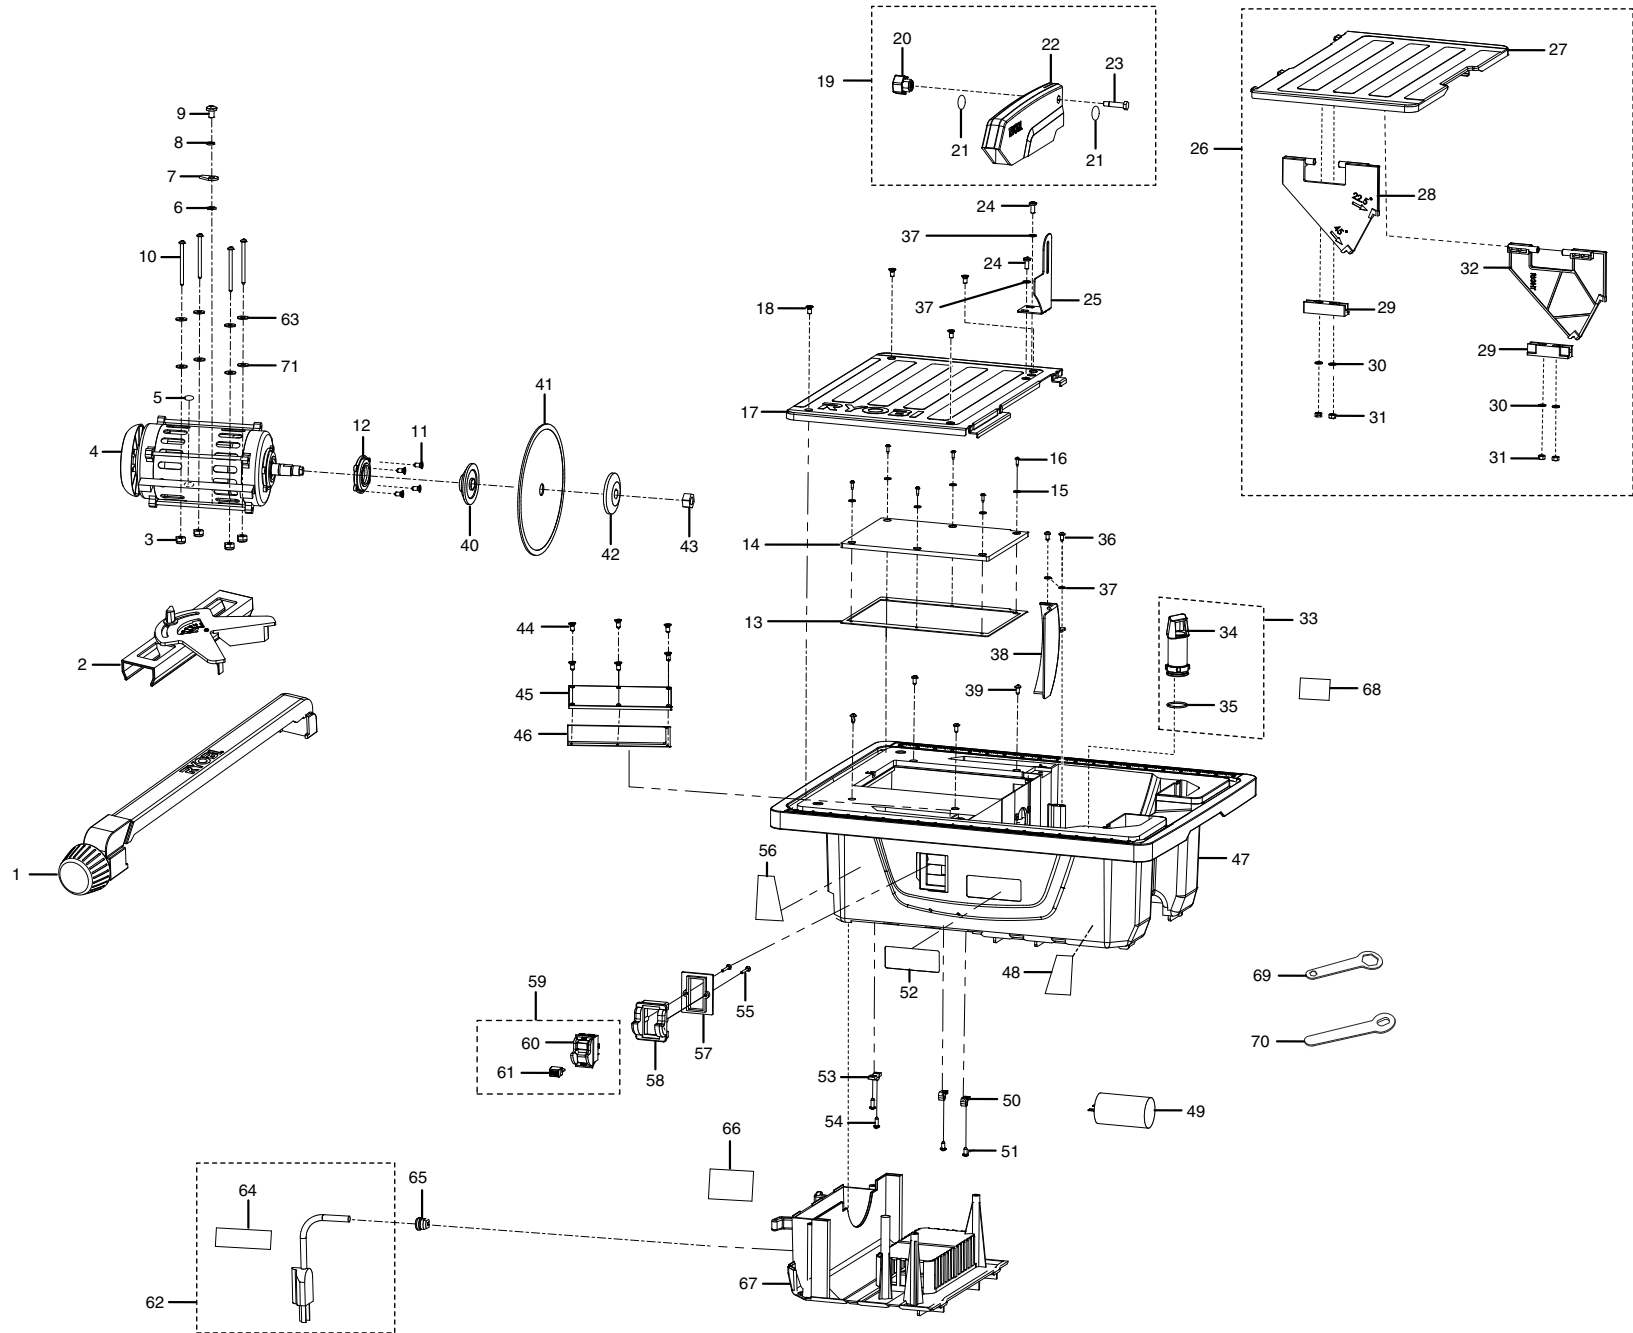




FIGURE B

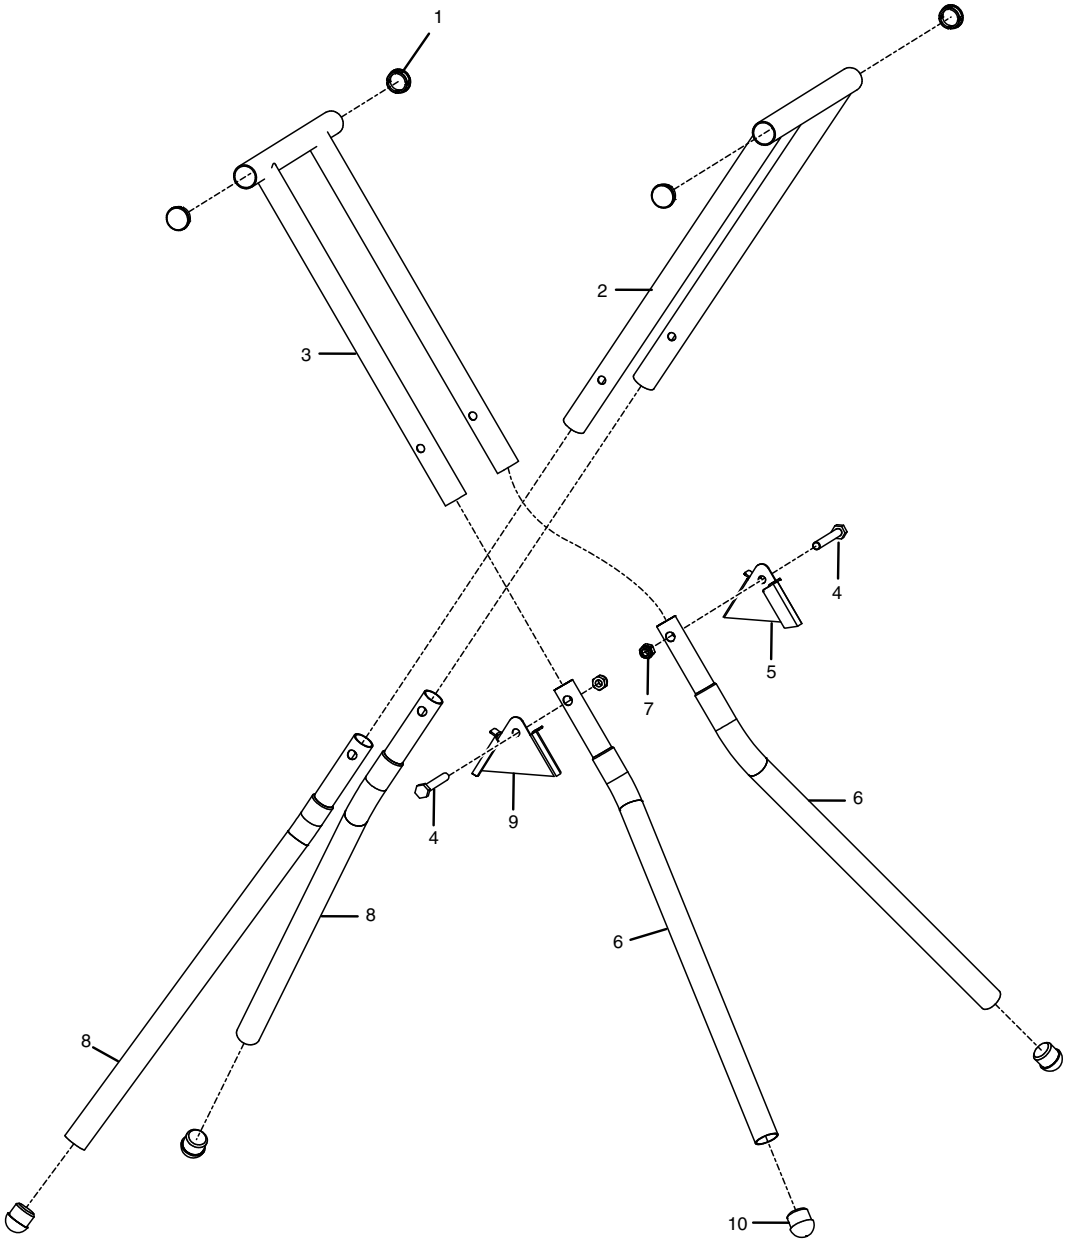

**RYOBI TILE SAW – MODEL NUMBER WS720S**

The model number will be found on a plate attached to the housing. Always mention the model number in all correspondence regarding your **TILE SAW** or when ordering repair parts.

**PARTS LIST FOR FIGURE B**

<b>KEY NO.</b>	<b>PART NUMBER</b>	<b>DESCRIPTION</b>	<b>QTY.</b>
1	080009007083	Cap.....	4
2	080009007084	Upper Leg (B).....	1
3	080009007085	Upper Leg (A).....	1
4	080009007086	Bolt.....	2
5	080009007087	Bracket (Right).....	1
6	080009007088	Lower Tube (Right).....	2
7	080009007089	Lock Nut (M8).....	2
8	080009007090	Lower Tube (Left).....	2
9	080009007091	Bracket (Left).....	1
10	080009007092	Leg Cap.....	4
11	080009007707	Leg Assembly (Incl. Key Nos. 1-10).....	1