


ILLUSTRATED PARTS LIST

MODEL NUMBER XT722FE

PRODUCT NUMBER 961 43 00-61

MFG. ID. NUMBER 96143006100

ROTARY LAWN MOWER - - MODEL NUMBER XT722FE (96143006100) PRODUCT NUMBER 961 43 00-61

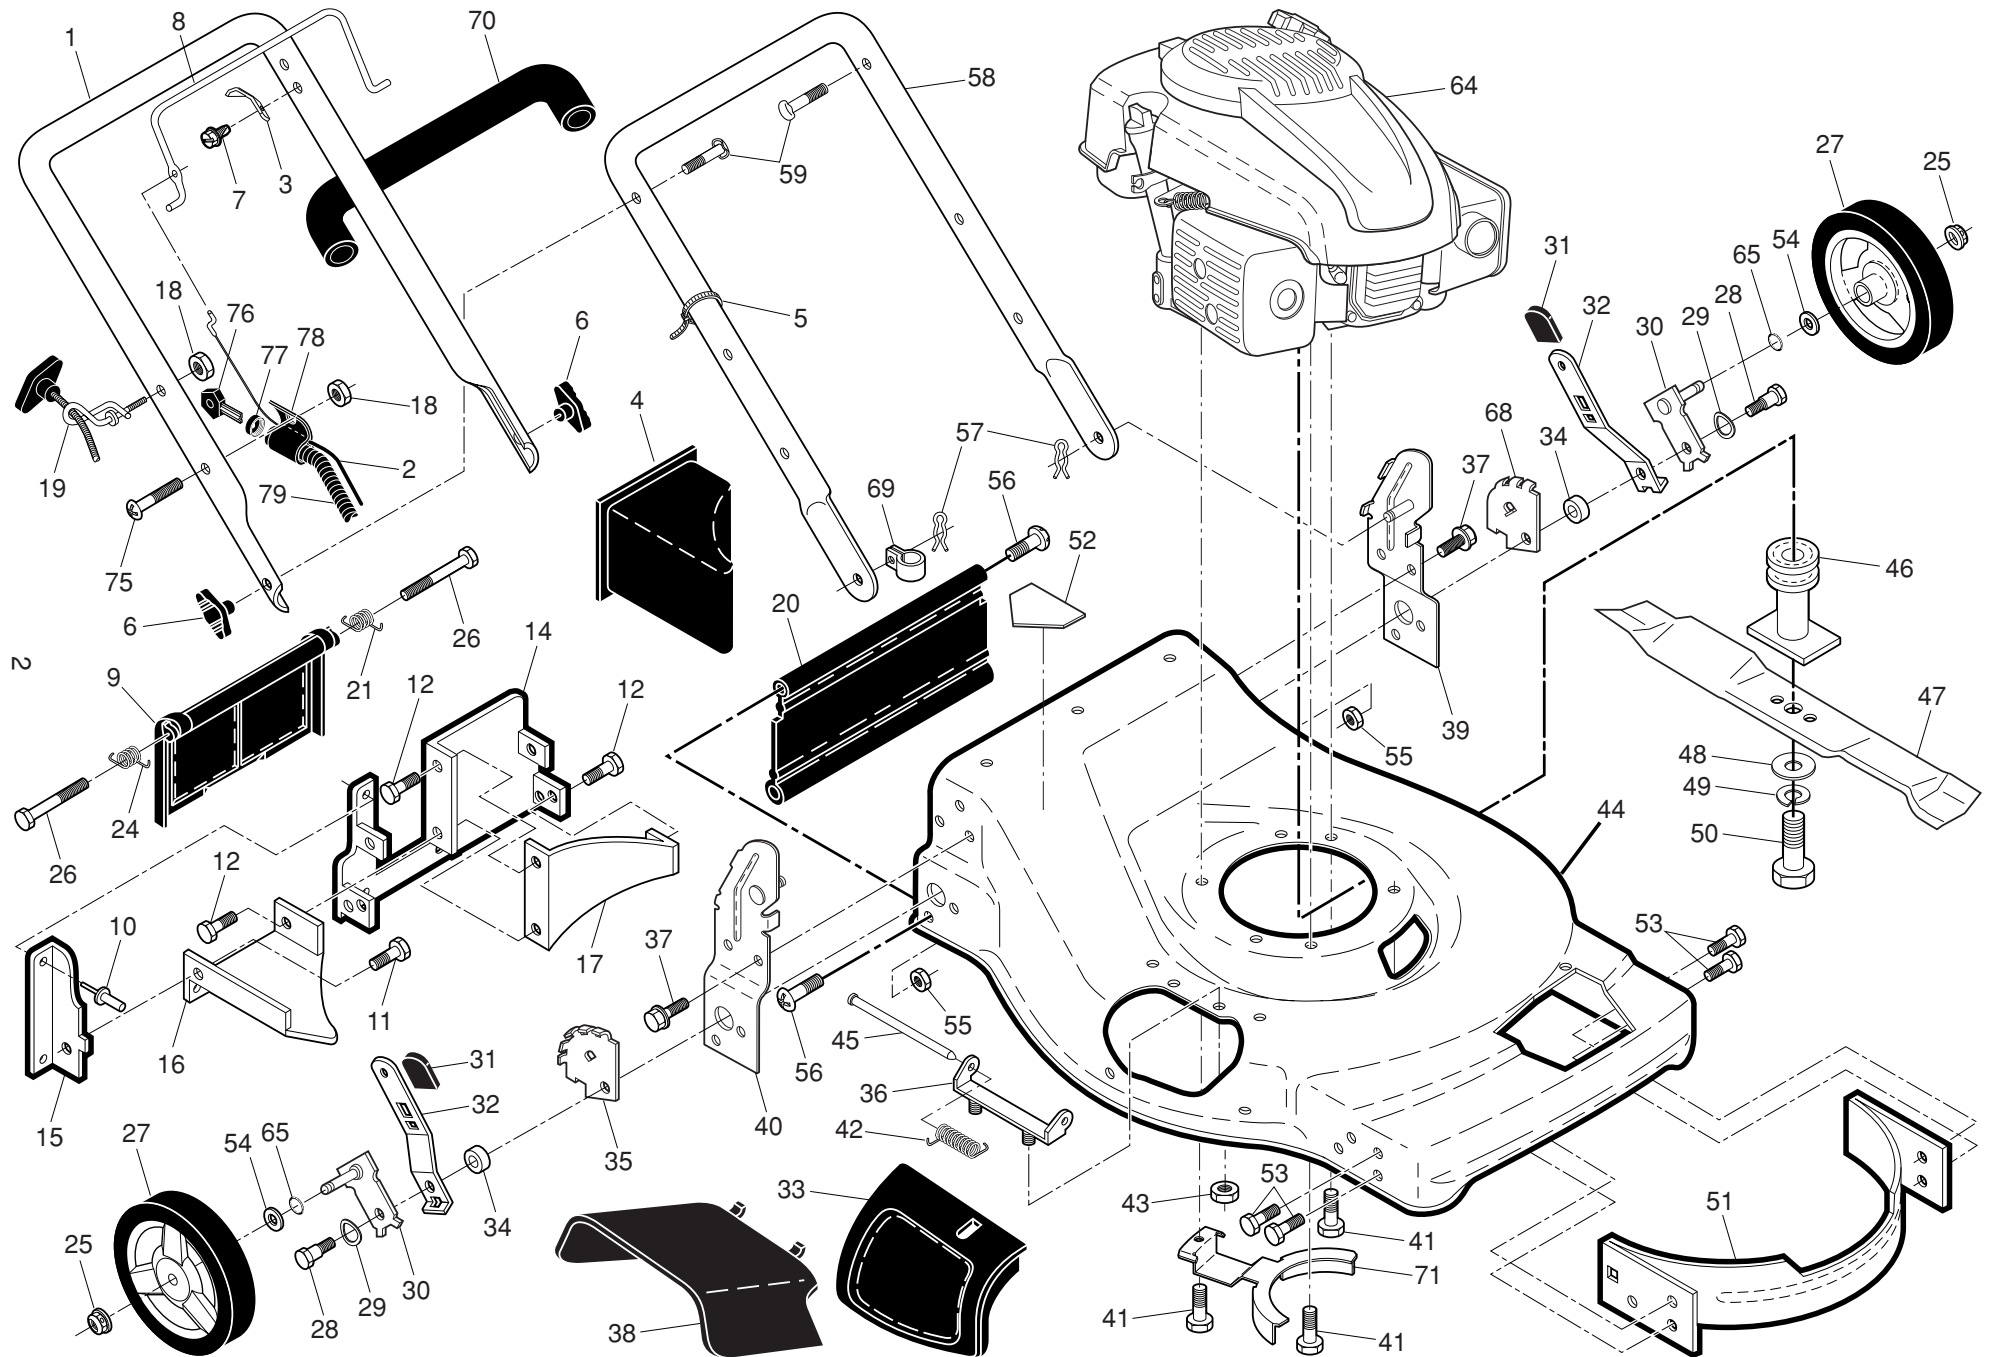


ROTARY LAWN MOWER - - MODEL NUMBER XT722FE (96143006100) PRODUCT NUMBER 961 43 00-61

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 42 76-63	Upper Handle (Includes Foam Grip)	40	532 41 91-92	Handle Bracket Assembly, RH
2	532 40 19-94	Cable, Operator Presence	41	532 15 04-06	Screw, Hex Head, Threaded, Rolled 3/8-16 x 1-1/8
3	532 12 51-62	Bracket, Upstop	42	532 19 30-00	Spring, Torsion
4	532 16 66-49	Mulcher Plug	43	873 80 04-00	Nut, Hex, Nylock
5	532 06 64-26	Wire Tie	44	532 41 74-05	Kit, Lawn Mower Housing (Includes Key Numbers 14, 15 and 51)
6	532 19 19-38	Handle Knob	45	532 17 56-50	Rod, Hinge
7	532 75 06-34	Screw	46	532 42 12-48	Blade Adapter / Pulley
8	532 42 79-47	Control Bar	47	532 40 67-13	Blade, 22"
9	532 40 84-92	Rear Door Assembly	48	532 85 10-74	Washer, Hardened
10	532 12 84-15	Pop Rivet	49	532 85 02-63	Washer, Helical
11	532 15 00-50	Screw, Self-Tapping #10-24 x 5/8	50	532 85 10-84	Screw, Machine, Hex Head 3/8-24 x 1-3/8 Grade 8
12	817 06 04-10	Screw, Hex Hex Head, Sems 1/4-20 x 1/2	51	532 17 00-31	Front Baffle
14	532 19 70-76	Back Plate	52	532 40 47-63	Danger Decal
15	532 41 13-34	Side Baffle	53	817 60 04-06	Screw
16	532 17 71-33	Discharge Baffle	54	532 08 83-48	Washer, Flat
17	532 14 89-41	Rear Baffle	55	873 93 06-00	Nut, Hex
18	532 13 20-04	Keps Locknut 1/4-20	56	532 08 86-52	Screw, Hinge 1/4-20 x 1-1/4
19	532 19 47-88	Rope Guide	57	532 05 17-93	Hairpin Cotter
20	532 41 31-60	Rear Skirt	58	532 40 34-33	Lower Handle
21	532 40 54-21	Spring, Rear Door, LH	59	532 19 15-74	Handle Bolt
24	532 40 54-23	Spring, Rear Door, RH	64	- - -	Engine, Kohler, Model Number XT173-0226 (For engine service and replacement parts, call Kohler at 1-800-544-2444)
25	532 40 91-48	Nut, Hex, Flanged	65	532 19 74-80	O-Ring
26	532 18 41-93	Bolt, Rear Door	68	532 41 06-23	Wheel Adjusting Bracket, LH
27	532 41 08-31	Wheel & Tire Assembly, Rear	69	532 19 79-91	Clip, Cable
28	532 17 47-19	Bolt, Shoulder 3/8-16 x 1	70	532 18 63-62	Foam Grip
29	532 40 16-30	Washer, Belleville	71	532 42 57-11	Belt Keeper
30	532 40 78-71	Axle Arm Assembly	75	532 18 61-59	Screw
31	532 70 10-37	Selector Knob	76	532 18 03-31	Key
32	532 40 64-28	Selector Spring	77	532 19 48-48	Nut, Cap
33	532 19 70-29	Mulcher Door	78	532 18 96-86	Key Start Switch
34	532 40 16-29	Spacer	79	532 40 95-67	Wiring Harness
35	532 41 06-24	Wheel Adjusting Bracket, RH	--	532 40 47-64	Warning Decal (not shown)
36	532 17 57-35	Hinge Bracket Assembly	--	532 43 11-60	Operator's Manual, English / French
37	532 42 88-67	Screw, Sems, Thread Cutting 5/16-18 x 3/4			
38	532 40 38-19	Discharge Deflector			
39	532 41 91-93	Handle Bracket Assembly, LH			

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.

ROTARY LAWN MOWER - - MODEL NUMBER XT722FE (96143006100) PRODUCT NUMBER 961 43 00-61

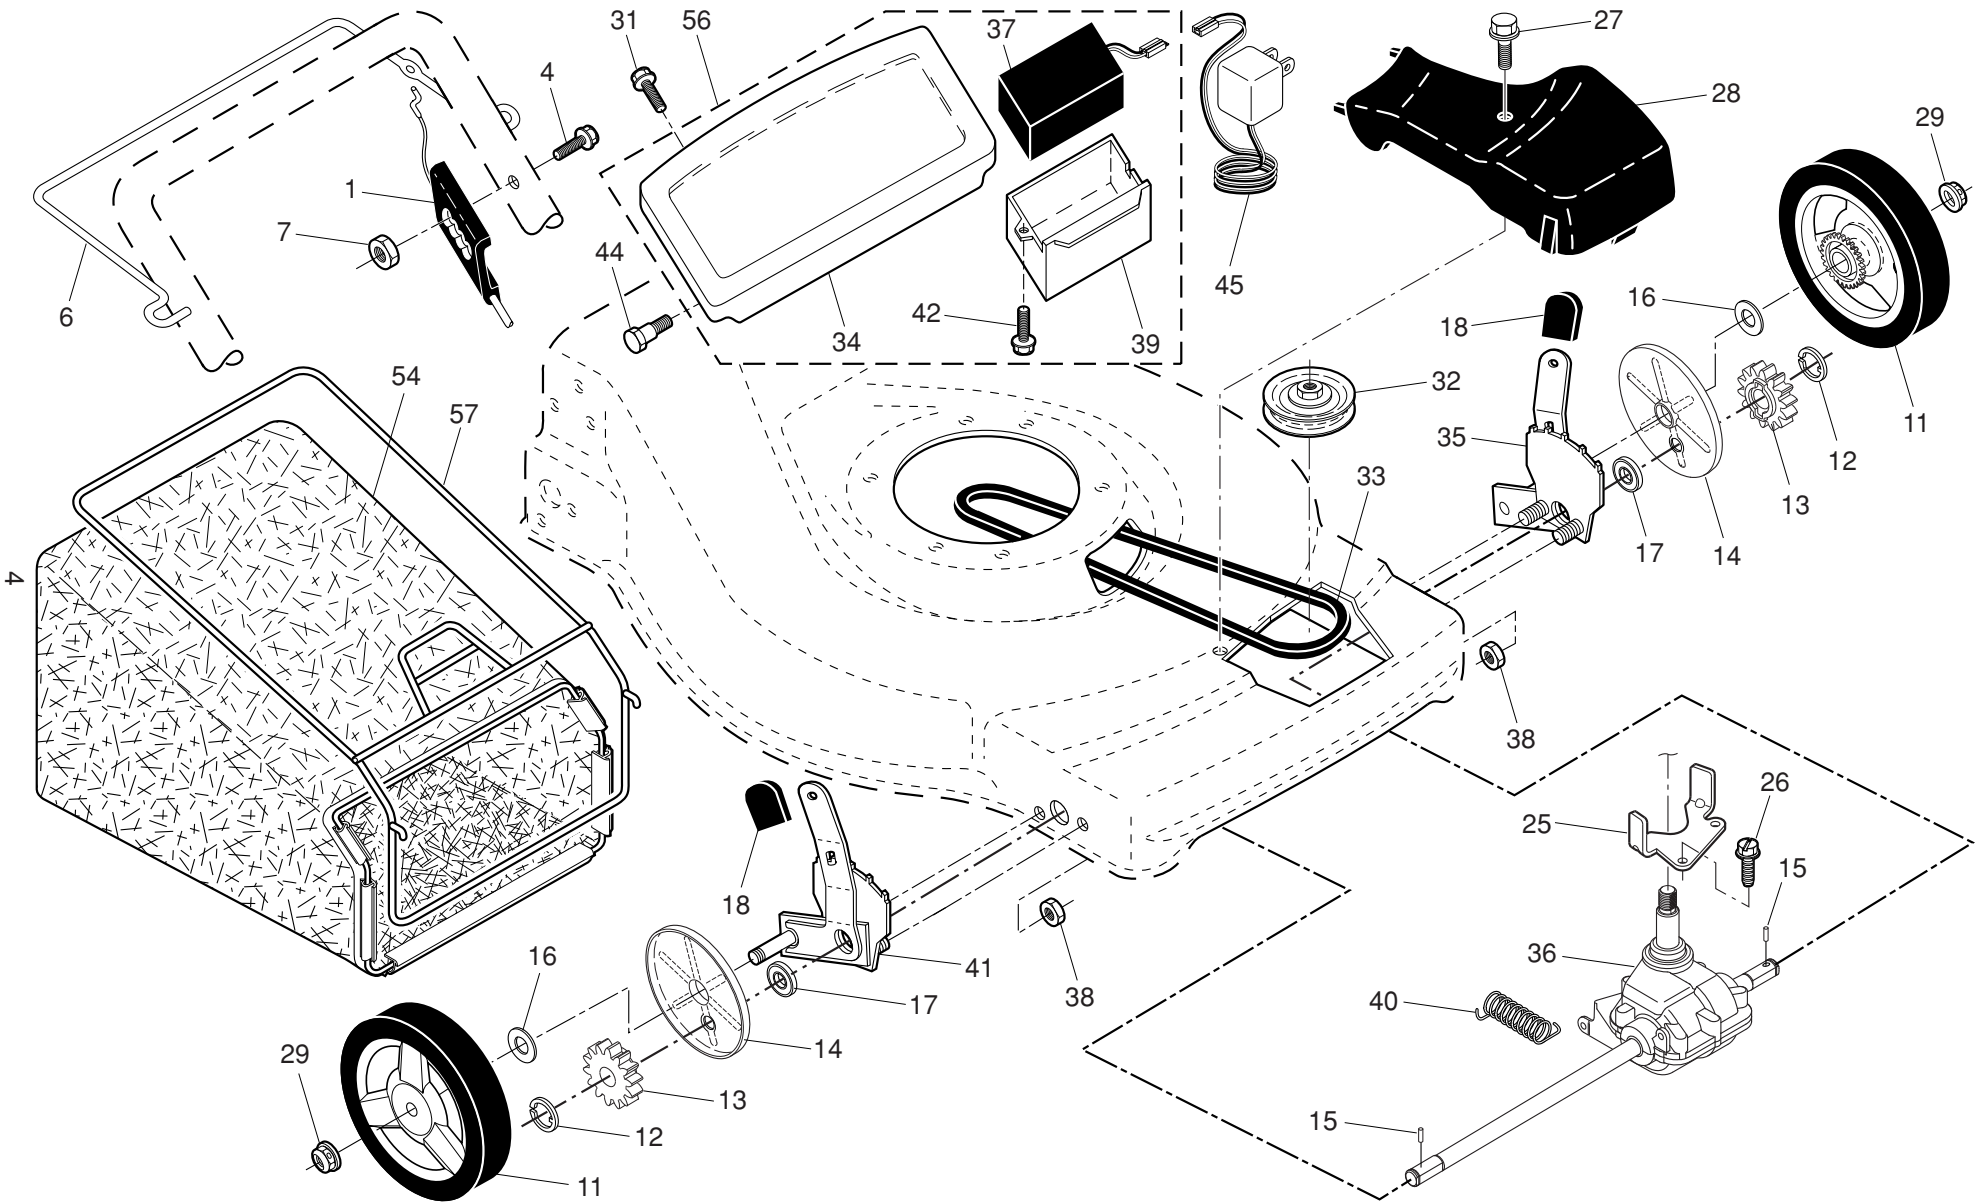

ROTARY LAWN MOWER - - MODEL NUMBER **XT722FE** (96143006100) PRODUCT NUMBER 961 43 00-61

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 40 78-16	Drive Control Cable	32	532 19 40-18	Pulley, Drive
4	532 19 96-87	Screw 1/4-20	33	532 19 68-57	V-Belt
6	532 19 90-93	Bar, Drive Control	34	532 41 11-90	Trimplate
7	532 19 17-30	Nut, Hex 1/4-20	35	532 42 42-01	Kit, Wheel Adjuster, LH (Includes Knob and Bearing)
11	532 41 10-81	Wheel & Tire Assembly	36	532 40 48-34	Gear Case Assembly, Complete
12	812 00 00-58	E-Ring	37	532 18 95-89	Battery
13	532 40 38-49	Gear, Pinion	38	873 80 04-00	Locknut, Hex 1/4-20
14	532 18 94-03	Dust Cover	39	532 18 62-37	Box, Battery
15	532 40 48-45	Pawl, Drive	40	532 40 65-58	Spring
16	532 06 77-25	Washer, Flat 3/8	41	532 42 42-00	Kit, Wheel Adjuster, RH (Includes Knob and Bearing)
17	532 19 10-39	Ball Bearing	42	817 41 13-08	Screw, Hex Head #13 x 1/2
18	532 70 10-37	Selector Knob	44	532 17 55-51	Screw, Shoulder, Hex Head #10-28 x 5/8
25	532 41 16-63	Belt Keeper	45	532 19 00-97	Charger, Battery
26	532 16 34-09	Screw	54	532 42 56-69	Grassbag Assembly
27	532 17 52-62	Pan Head Tapping Screw #10-24 x 2-3/4	56	532 19 12-52	Trimplate / Battery / Battery Box Assembly
28	532 19 73-70	Drive Cover	57	532 41 19-52	Frame, Grassbag
29	532 40 91-48	Locknut, Hex			
31	532 14 18-41	Screw, Torx Pan Head #20			

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.