



**BOSCH**

# Cordless Multi Sander

YOUseries Sander | 3 603 JC4 000

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	3

## Spare parts list

Item	Part Number	Description	Illustration	Price	Quantity	Price Group
2	1 607 022 604	DC motor 3,6V	1	-	1	
3	1 600 A01 3SX	Handle	1	-	1	
4	1 600 A01 3SY	Cover	1	-	1	
5	1 600 A01 60Y	Electronic Module	1	-	1	
10	2 609 003 106	Torx Oval-Head Screw	1	-	4	
11	1 600 A01 93S	Air Guide Plate	1	-	1	
12	2 603 435 098	Torx Flat-Head Screw	1	-	2	
17	1 600 A01 31P	Vibration Foot	1	-	1	
18	1 619 X01 931	Screw	1	-	3	
19	1 600 A01 6YD	Sander Plate	1	-	1	
20	1 600 A01 3T0	Trigger cap	1	-	1	
22	1 600 A01 3SZ	Clip	1	-	1	
23	1 603 435 099	Torx Oval-Head Screw D2,5X16	1	-	3	
91	1 607 A35 08W	Battery Pack PBA 3,6V 4,0Ah	1	-	1	
801	1 600 A01 U7K	Housing	1	-	1	
808	1 601 11A 6MC	Nameplate	1	-	1	
813	1 600 A01 N86	Eccentric Unit	1	-	1	

\* Prices shown are suggested retail prices

Illustration - Type - E

3 603 JC4 000  
Issue | 22-03-07  
Stand | Fig./Abb. 1

