



SERVICE PARTS LIST

**BULLETIN NO.
54-40-6492**

| SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS | | REVISED BULLETIN | DATE |
|--|-------------|--------------------|-----------|
| 10" MAGNUM MITER SAW | | 54-40-6491 | Feb. 2002 |
| CATALOG NO. | 6490 | WIRING INSTRUCTION | |
| STARTING SERIAL NO. | 799C | 58-01-1350 | |

00 0

EXAMPLE:

Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

★=Part number change from
previous service parts list.

| FIG. | PART NO. | DESCRIPTION OF PART | NO. REQ. |
|------|------------|---|----------|
| 1 | 02-80-0130 | Needle Thrust Bearing | (1) |
| 2 | 02-02-2040 | 7/16" Steel Ball | (1) |
| 3 | 02-04-0845 | Ball Bearing | (2) |
| 4 | 02-04-1229 | Ball Bearing | (1) |
| 5 | 02-04-2040 | Ball Bearing | (1) |
| 6 | 06-42-2400 | Woodruff Key | (1) |
| 7 | 06-55-1525 | 1/4"-20 Hex Nut | (1) |
| 8 | 06-55-1985 | 5/16"-18 Hex Nut | (1) |
| 9 | 06-55-2710 | 7/16"-14 Hex Nut | (1) |
| 10 | 45-88-0660 | Washer | (1) |
| 11 | 40-50-8620 | Belleville Spring | (3) |
| ★13 | 45-04-0915 | 5/16-18 x 1-3/8" Pan Hd. T-30 | (7) |
| 14 | 06-82-5270 | 6-32 x 1/4" Pan Hd. Slit. Tapt. T-15 | (1) |
| ★15 | 06-82-5560 | 10-24 x 1/2" Pan Hd. Slit. Tapt. T-25 | (3) |
| 16 | 06-82-5338 | 1/4-20 x 1/2" Pan Hd. Slit. Tapt. T-30 | (3) |
| 17 | 06-82-5411 | 10-24 x 5/8" Pan Hd. Slit. Tapt. T-25 | (20) |
| 18 | 06-82-7212 | 4-20 x 1/4" Pan Hd. Plastite T-10 | (2) |
| 19 | 06-82-7226 | 6-19 x 5/16" Pan Hd. Slit. Plast. T-15 | (1) |
| 20 | 06-82-7270 | 8-16 x 5/8" Pan Hd. Slit. Plast. T-20 | (12) |
| 21 | 06-82-7453 | 8-16 x 2-1/4" Pan Hd. Slit. Plast. T-20 | (2) |
| 22 | 06-82-9024 | 10-24 x 1-3/4" Pan Hd. Slit. Tapt. T-25 | (4) |
| 23 | 06-83-3150 | 5/16-18 x 1/2" Hex Socket | (2) |
| ★24 | 06-83-3100 | 5/16-18 x 1" Set Screw T-25 | (1) |
| ★25 | 10-15-9460 | Warning Label | (2) |
| 26 | 12-20-0090 | Service Nameplate Kit | (1) |
| 27 | 16-70-0420 | Armature | (1) |
| 28 | 18-70-0420 | Field | (1) |
| 29 | 22-18-0387 | Carbon Brush | (2) |
| 30 | 22-20-0800 | Brush Tube | (2) |
| 30A | 22-20-0802 | Brush Tube Assembly | (2) |
| 31 | 22-64-3210 | Cord Set | (1) |
| 32 | 23-66-2037 | Switch Assembly | (1) |
| ★33 | 25-20-1320 | Upper Guard Cover | (1) |
| ★34 | 28-06-1081 | Base | (1) |
| 35 | 28-06-1036 | Table | (1) |
| ★36 | 28-14-2217 | Upper Guard Gear Case | (1) |
| 37 | 28-35-0010 | Fence | (1) |
| ★38 | 28-90-0213 | Pivot Support | (1) |
| 39 | 31-44-1725 | Handle Half | (1) |
| ★40 | 31-50-1013 | Motor Housing | (1) |
| 41 | 32-75-3350 | Gear | (1) |
| 42 | 34-40-1375 | 1-1/4" O-Ring | (1) |
| 43 | 34-60-2560 | Retaining Ring | (1) |
| 44 | 38-50-5840 | Spindle | (1) |
| 45 | 40-50-8040 | Spring | (1) |
| 46 | 40-50-8160 | Coil Spring | (2) |
| 47 | 40-50-8170 | Locking Spring | (1) |
| 48 | 40-50-8180 | Spring | (2) |
| 49 | 40-50-8190 | Retaining Spring | (1) |
| 50 | 40-50-8700 | Leaf Spring | (1) |
| 51 | 42-12-0160 | Axle | (1) |
| 52 | 42-14-0350 | Baffle | (1) |
| 53 | 42-14-0355 | Baffle | (1) |
| ★54 | 42-50-0280 | Cam | (1) |
| 55 | 42-92-0890 | End Cover | (1) |
| ★57 | 45-88-0577 | Wave Washer | (1) |
| 58 | 43-34-0720 | Blade Flange | (1) |
| 59 | 43-54-0695 | Lower Guard | (1) |
| 60 | 43-54-0700 | Blade Screw Guard | (1) |
| 61 | 43-62-1050 | Locking Handle | (1) |
| 62 | 43-72-0180 | Spring Holder | (2) |
| 64 | 44-10-0310 | Locking Lever | (1) |
| 67 | 44-20-0260 | Detent Lock | (1) |
| 69 | 44-60-1300 | Lock Pin | (1) |
| 70 | 44-66-5920 | Locking Plate | (1) |
| 71 | 44-66-5930 | Kerf Plate | (1) |
| 72 | 44-66-5945 | Detent Lever Assembly | (1) |
| 73 | 44-72-0010 | Pointer | (1) |
| 74 | 44-76-0210 | Cord Protector | (1) |
| 75 | 49-96-6205 | Box Wrench | (1) |
| 76 | 44-96-0130 | Roller | (1) |
| 77 | 45-04-0850 | Shoulder Screw | (1) |
| ★78 | 45-04-0860 | Blade Screw | (1) |
| 79 | 45-08-0330 | Table Shaft | (1) |


| FIG. | PART NO. | DESCRIPTION OF PART | NO. REQ. |
|------|------------|----------------------------|----------|
| 80 | 45-60-0530 | Spring Support | (1) |
| ★81 | 45-76-0331 | Dust Tube | (1) |
| 82 | 45-88-8540 | Washer | (2) |
| 84 | 22-84-0850 | Fan | (1) |
| 85 | 23-74-1150 | Terminal | (2) |
| ★87 | 10-20-1210 | Warning Label | (1) |
| ★88 | 10-15-9450 | Warning Label | (1) |
| ★89 | 10-15-9495 | Warning Label (Bi-lingual) | (1) |
| ★90 | 06-65-1582 | Roll Pin | (1) |
| ★93 | 42-70-5141 | Blade Wrench Clip | (1) |

FIG. LUBRICATION

- 82 Apply A Thin Coat Of "L" Grease, No. 49-08-4170 To Both Sides Of Washers.
- 34,79 Apply .12 oz. Of "L" Grease, No.49-08-4170, Under The Head Of The Table Shaft. Apply A Thin Film Of "L" Grease To The O.D. Of The Table Shaft And To The I.D. Of The Center Bore Of The Base, Prior To Assembly.
- 36,51 Apply .06 oz. Type "L" Grease, No. 49-08-4170, To The (2) .125 Wide Grooves Of Axle. Also Apply A Thin Film To The O.D. Of Axle (Not Between The (2) Locating Grooves), And To The I.D. Of The (2) Pivoting Hubs Of The Upper Guard / Gear Case Prior To Assembly.
- 33,51 Apply A Dab Of Type "L" Grease, No. 49-08-4170, To The Cover End Of Axle, Prior To Assembly Of Upper Guard Cover.
- 36 Place .50 oz. Type "Y" Grease, No. 49-08-5270, In The Pinion Pocket Of Upper Guard / Gear Case.

FIG. NOTES:

- 16,54 When Assembling Cam With Screws, Lightly Insert Lower Screw First And Then Pivot Cam Counterclockwise About Lower Screw Until It Bottoms Out On The Rib Of The Gear Case, Then Insert The Upper Screw And Tighten Both The Upper And Lower Screws To 60-75 in. lbs.
- 23,33 Tighten 5/16" Set Screws Only After Assembly Of Upper Guard Cover. Loosen Set Screws Before Disassembly Of Upper Guard Cover.
- 43 Assemble Retaining Ring With The Concave Bow Of The Ring Toward The Gear.
- 27,40,57 Place Wave Washer Into Motor Housing Prior To Assembling Onto Armature.
- 49 Retaining Springs Relative Orientation To Be 180° Apart- Dimples To Engage Slots.
- 3 Ball Bearing (On The Commutator End Of Armature)-Seal Toward Commutator. Ball Bearing (On Fan End Of Armature)-Seal Toward Gear.
- 79 Apply Red Locking Sealant To Two Threads Of Table Shaft Prior To Assembly. Torque To 360 (+50 -25) in. lbs.

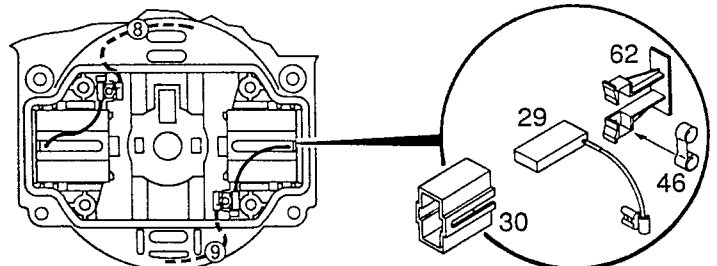

- 46,62 Coil Spring Must Be Oriented In Spring Holder Such That The Saddle Of The Spring Is Facing The Open End Of The Spring Holder.
- 30,62 Spring Holder Must Be Oriented In Brush Tube Such That The Open End Of The Spring Cavity Is Facing The Shunt Slot In Brush Tube.

SEE REVERSE SIDE

MILWAUKEE ELECTRIC TOOL CORPORATION
13135 W. LISBON RD., BROOKFIELD, WI 53005

