


## Troubleshooting

If the stock being sanded is bowed, warped or otherwise inconsistent, be sure tables are lower than the conveyor surface.

If stock slips on conveyor belt, the tables may be positioned too high. Lower tables to allow stock to remain in contact with the conveyor belt.

## Parts List

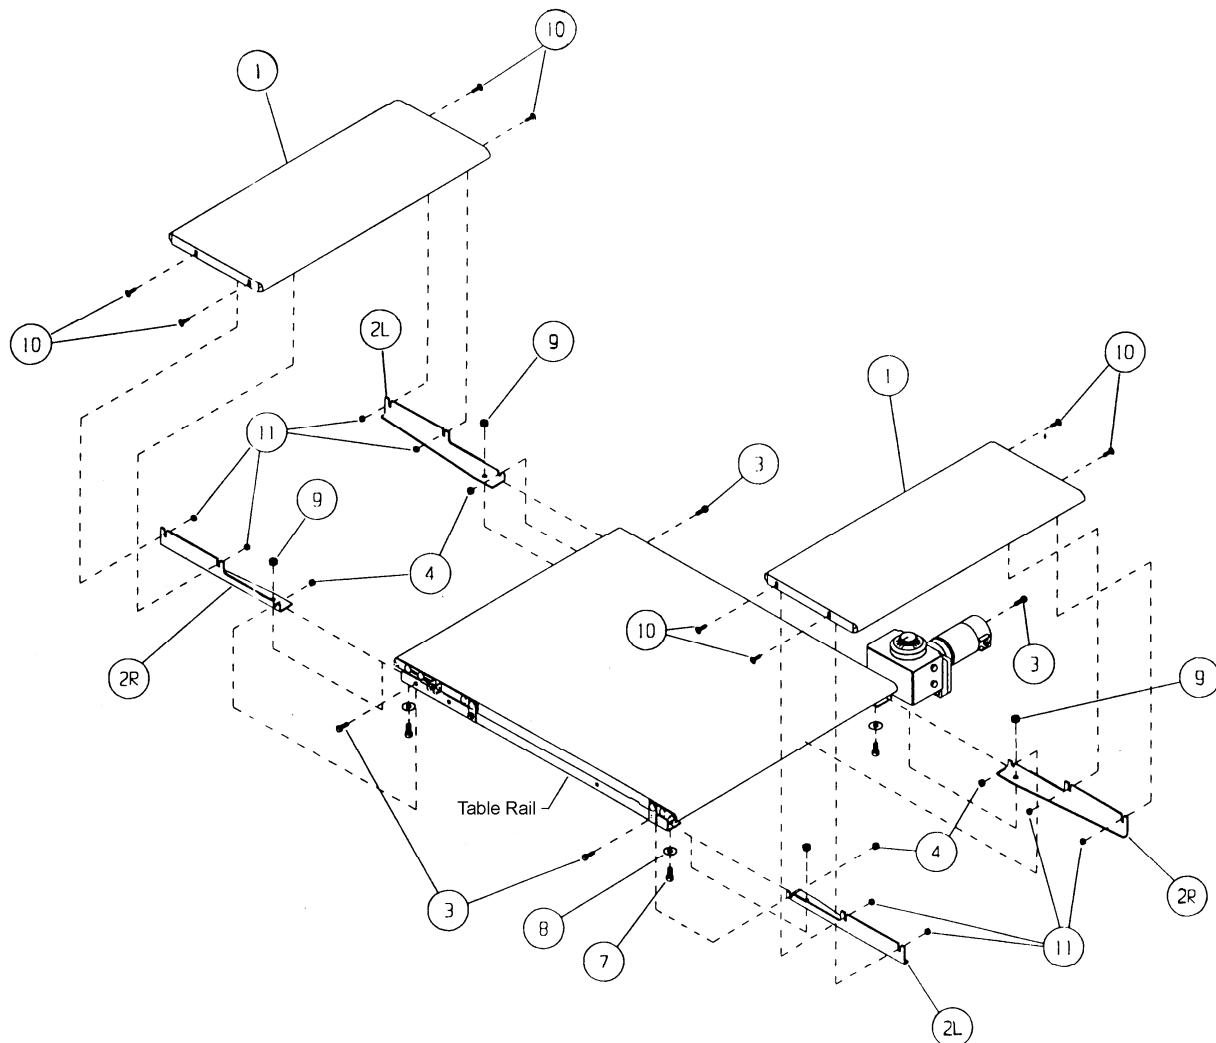

Index No.	Part No.	Description	Size	Qty
1.....	40-0329 .....	Infeed/Outfeed Table .....		2
2L.....	40-0327 .....	Mounting Bracket (LH) .....		2
2R.....	40-0328 .....	Mounting Bracket (RH) .....		2
3.....	10-9103 .....	Hex Head Bolt .....	5/16"-18x3/4"	2
4.....	12-0152 .....	Square Nut .....	5/16"-18 .....	2
7.....	10-9205 .....	Hex Head Bolt .....	3/8"-16x1"	4
8.....	11-9103 .....	Hardened Flat Washer .....	3/8"	4
9.....	12-0209 .....	Flanged Lock Nut .....	3/8"-16 .....	4
10.....	6714264.....	Round Head Square Neck Bolt .....	1/4"-20x3/4"	8
11.....	6514001.....	Hex Nut .....	1/4"-20 .....	8
12.....	6861107.....	Flat Washer .....	1/4"	16