



11.3.1 Model J-4400A Disc Sander Assembly – Exploded View

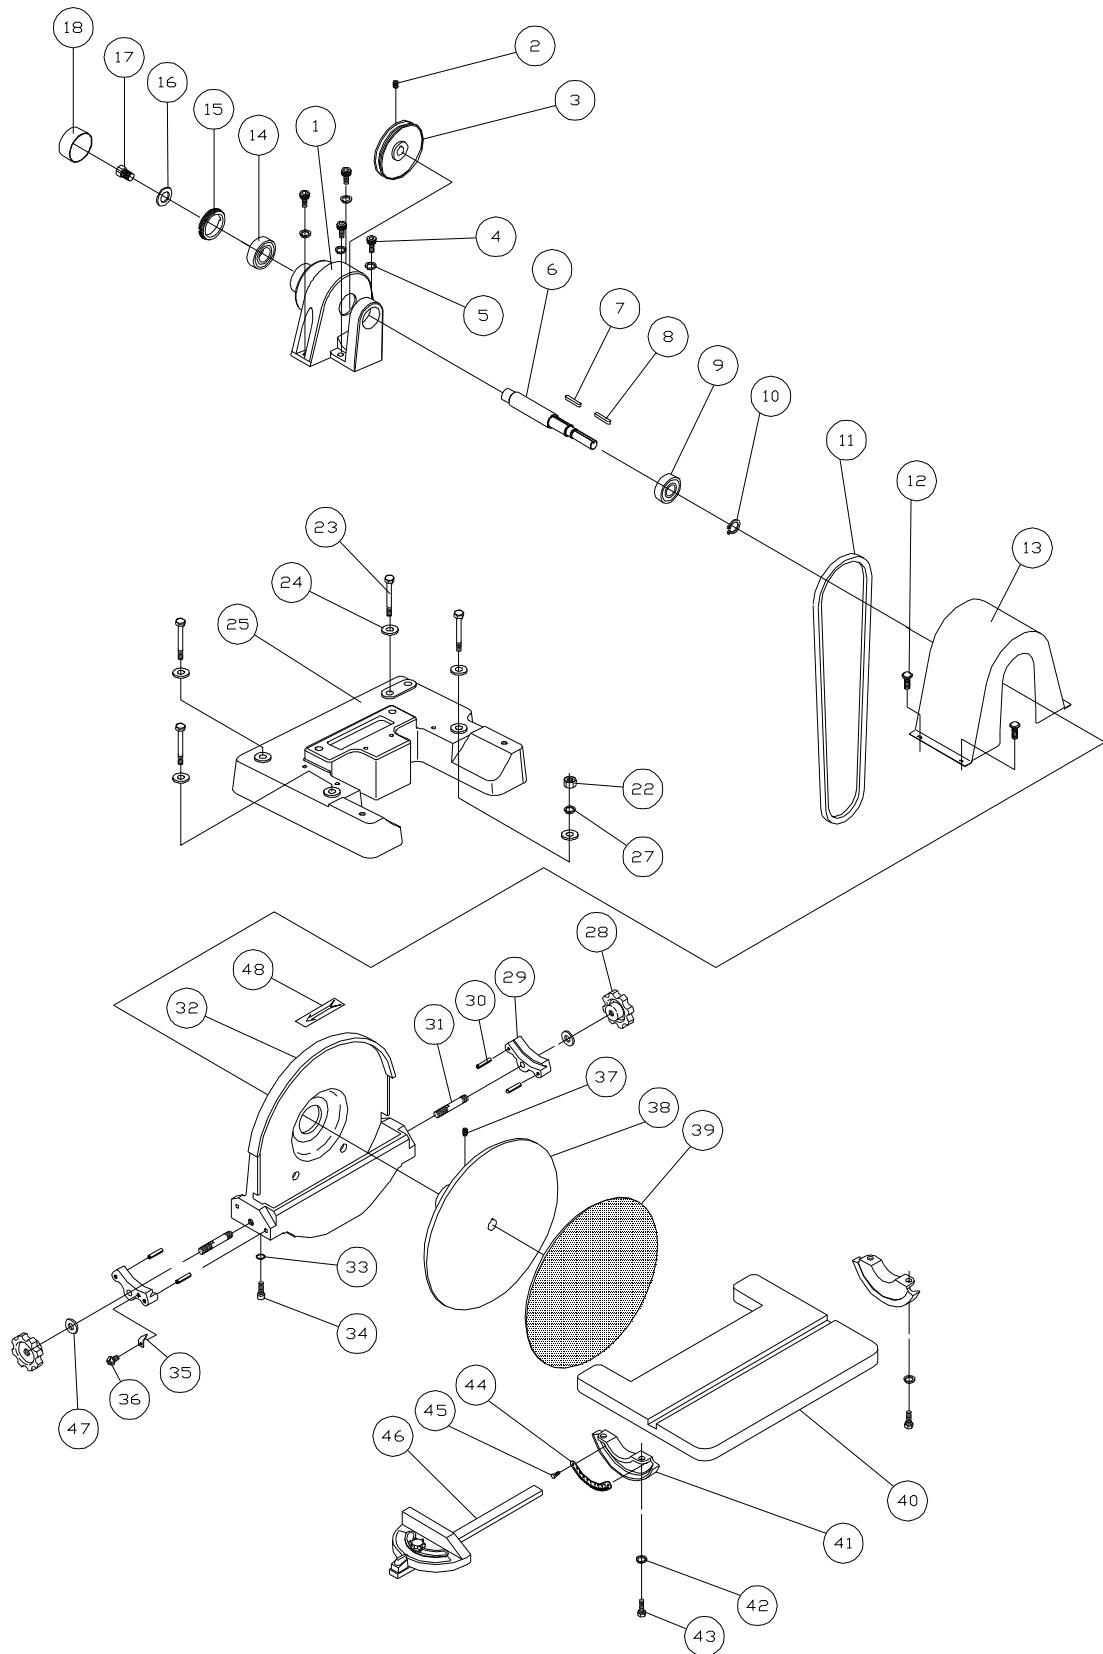

11.3.2 Model J-4400A Disc Sander Assembly – Parts List

Index No	Part No	Description	Size	Qty
1.....	J-5508438.....	Bearing Housing.....		1
2.....	TS-1523011.....	Socket Set Screw.....	M6x6.....	2
3.....	5511725.....	4200 Arbor Pulley.....		1
4.....	TS-1504061.....	SHCS.....	M8x30.....	4
5.....	TS-2361081.....	Lock Washer	M8.....	4
6.....	5508443.....	Drive Shaft		1
7.....	5051451.....	Key.....	.5x5x35 mm.....	1
8.....	4200A-042.....	Key.....	.5x5x55 mm.....	1
9.....	BB-6204ZZ.....	Ball Bearing.....	6204ZZ.....	1
10.....	5051471.....	Retaining Ring.....	S20	1
11.....	VB-A59.....	V-Belt.....	17610.....	1
12.....	5511818.....	Flat Head Screw.....	M5x6.....	4
13.....	J-5508444.....	Belt Guard Assembly.....		1
14.....	BB-6205ZZ.....	Ball Bearing.....	6205ZZ.....	1
15.....	5508439.....	Preload Bushing.....	M54.....	1
16.....	TS-1550061.....	Flat Washer.....	M8.....	1
17.....	TS-1490031.....	Hex Cap Screw	M8x20.....	1
18.....	4400A-018.....	Glue Bushing.....		1
22.....	TS-1540071.....	Hex Nut, Full	M10.....	4
23.....	TS-2210801.....	Hex Cap Screw	M10x80	4
24.....	TS-1550071.....	Flat Washer.....	M10.....	8
25.....	J-5508447.....	Base.....		1
27.....	TS-2361101.....	Lock Washer	M10.....	4
28.....	5508450.....	Hand Knob		2
29.....	5508451.....	Clamp with Pins.....		2
30.....	4200A-090.....	Roll Pin.....	Ø6x45	4
31.....	5508462.....	Stud		2
32.....	J-5508453.....	Disc Guard		1
33.....	TS-2361101.....	Lock Washer	M10.....	2
34.....	TS-2239551.....	Socket Head Cap Screw.....	M10x55	2
35.....	5051741.....	Pointer.....		1
36.....	TS-1523021.....	Socket Head Flat Screw	M6x8	1
37.....	TS-1523031.....	Socket Set Screw	M6x10	2
38.....	5051641.....	Disc Aluminum		1
39.....	5051631.....	Garnet Disc		1
40.....	J-5508449.....	Table		1
41.....	5051681.....	Trunnion		2
42.....	TS-2361081.....	Lock Washer	M8.....	4
43.....	TS-1490041.....	Hex Cap Screw	M8x25	4
44.....	5051701.....	Tilting Table Scale		1
45.....	5511824.....	Drive Screw.....	Ø2x5	2
46.....	5052271.....	Deluxe Miter Gauge.....		1
47.....	TS-1550071.....	Flat Washer.....	M10.....	2
48.....	4200A-105.....	Label, Direction		1


11.4.1 Base Assembly: All 1 Phase Models – Exploded View

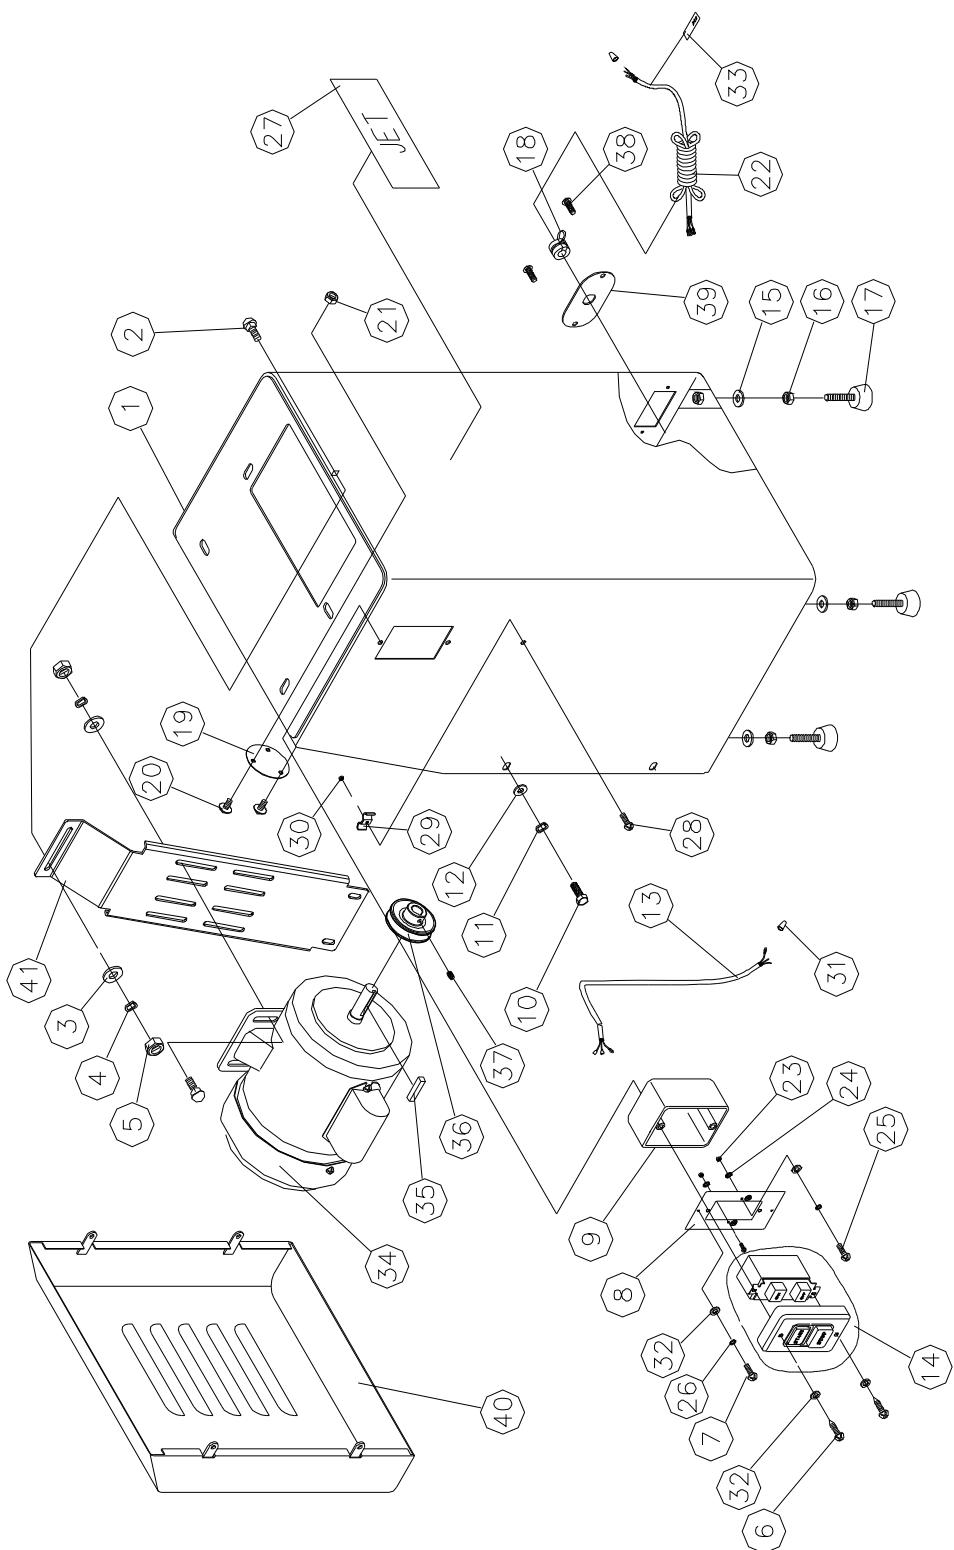

11.4.2 Base Assembly: All 1 Phase Models – Parts List

Index No	Part No	Description	Size	Qty
1.....	J-5511743.....	Enclosure		1
2.....	TS-1490031	Hex Cap Screw	M8x20	7
3.....	TS-1550061	Flat Washer	M8	7
4.....	TS-2361081	Lock Washer	M8	7
5.....	TS-1540061	Hex Nut	M8	7
6.....	5511753.....	Tapping Bolt w/Washer		2
7.....	TS-2284082	Pan Head Screw	M4x8	2
8.....	4200A-B335.....	Switch Cover		1
9.....	5514703.....	Switch Box		1
10.....	TS-1490011	Hex Cap Screw	M8x12	4
11.....	TS-2361081	Lock Washer	M8	4
12.....	TS-1550061	Flat Washer	M8	4
13.....	4200A-B336.....	Motor Cord	1PH	1
14.....	9139391.....	Switch		1
15.....	TS-2360121	Flat Washer	M12	4
16.....	TS-1540081	Hex Nut	M12	4
17.....	5511745.....	Adjustable Mount		4
18.....	4200A-418	Strain Relief Bushing	6N3-4	1
19.....	4200A-B320.....	Cover		1
20.....	4200A-B321	Pan Head Bolt w/Flange		3
21.....	TS-1540041	Hex Nut	M6	3
22.....	9133081.....	Power Cord	1PH	1
23.....	TS-1540031	Hex Nut	M5	2
24.....	TS-0733203	Lock Washer, Ext	M5	2
25.....	4200A-B325.....	Pan Head Screw	M5X8	2
26.....	TS-2361041	Lock Washer	M4	4
27.....	JETLOGO-1.....	JET Logo	2-3/4"x8"	1
28.....	TS-1533052	Pan Head Screw	M5x16	1
29.....	4200A-B330.....	Cord Clamp		1
30.....	TS-1540031	Hex Nut	M5	1
31.....	4200A-B332	Wiring Nut		2
32.....	TS-1550021	Flat Washer	M4	6
33.....	4200A-B334	Label, Voltage		1
34.....	J-5514650.....	Motor	1-1/2HP 115/230V 1Ph	1
35.....	5512937.....	Key	5x5x35 mm	1
36.....	4200A-436	Motor Pulley		1
37.....	TS-1523011	Socket Set Screw	M6x6	1
38.....	TS-1533042	Pan Head Screw	M5X12	2
39.....	4200A-439	Strain Relief Plate		1
40.....	J-5511729.....	Large Cover		1
41.....	J-5052431.....	Motor Mounting Plate		1
	9145531.....	Machine Safety Label (not shown)		1

11.5.1 Base Assembly: All 3 Phase Models – Exploded View

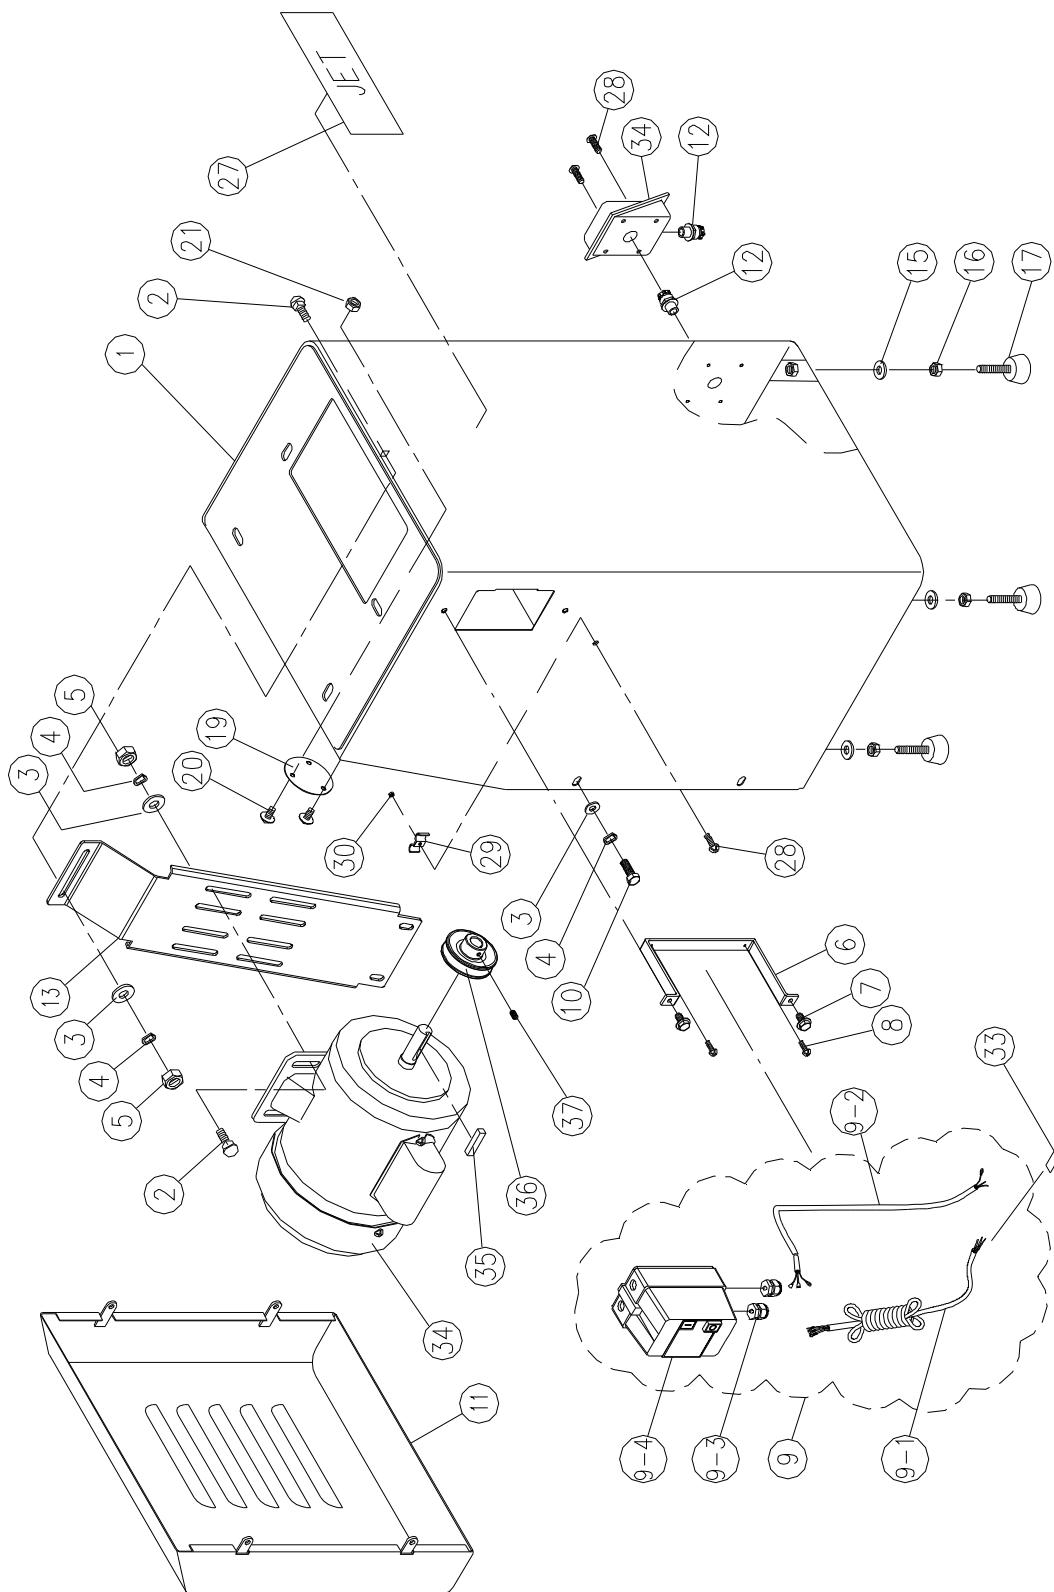

11.5.2 Base Assembly: All 3 Phase Models – Parts List

Index No	Part No	Description	Size	Qty
1.....	4202A-501	Enclosure		1
2.....	TS-1490031	Hex Cap Screw	M8x20	7
3.....	TS-1550061	Flat Washer	M8	11
4.....	TS-2361081	Lock Washer	M8	11
5.....	TS-1540061	Hex Nut	M8	7
6.....	4202A-506	Switch Seat		1
7.....	4202A-507	Pan Head Screw w/Flange	M8x12	2
8.....	TS-1532042	Pan Head Screw	M4x12	2
9.....	4202A-509	Magnetic Switch Assembly	1.5HP	1
9-1.....	4202A-5091	Power Cord	3Ph	1
9-2.....	4202A-5092	Motor Cord	3Ph	1
9-3.....	4202A-5093	Strain Relief	PG13.5	2
9-4.....	4202A-5094	Magnetic Switch	1.5HP/230V/3PH	1
9-4.....	4202A-5095	Magnetic Switch	1.5HP/460V/3PH	1
10.....	TS-1490011	HHCS	M8x12	4
11.....	J-5511729	Large Cover		1
12.....	4200A-5093	Strain Relief	PG13.5	2
13.....	J-5052431	Motor Mounting Plate		1
15.....	TS-2360121	Flat Washer	M12	4
16.....	TS-1540081	Hex Nut	M12	4
17.....	5511745	Adjustable Mount		4
19.....	4200A-B320	Cover		1
20.....	4200A-B321	Pan Head Bolt w/Flange		3
21.....	TS-1540041	Hex Nut	M6	3
27.....	JETLOGO-1	JET Logo	2-3/4"x8"	1
28.....	TS-1533052	Pan Head Screw	M5x16	3
29.....	4200A-B330	Cord Clamp		1
30.....	TS-1540031	Hex Nut	M5	1
33.....	4200A-B334	Label, Voltage		1
34.....	J-5514651	Motor	1-1/2HP 230/460V 3Ph	1
35.....	5512937	Key	5x5x35 mm	1
36.....	4200A-436	Motor Pulley		1
37.....	TS-1523011	Set Screw	M6x6	1
	9145531	Machine Safety Label (not shown)		1